

Floor Lamp

Contents

Before Use

| Important Safety Instructions | 03 |
|-------------------------------|----|
| Warning | 03 |

Installation Guide

| Assembly Instructions | 03 |
|-----------------------|----|
| Parts List | 04 |
| Exploded Views | 05 |
| Installation Steps | 06 |

Operation

| Care and Maintenance | 08 |
|----------------------|----|
| Trouble Shooting | 08 |

Important Safety Instructions

· These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.

- · We strongly recommend that a professional electrician install all direct wire fixtures.
- The lighting fixture is meant for indoor use. DRY LOCATION ONLY

For your safety, it is strongly recommended that two people install the lighting fixture.

Warning

To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.

Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.

Keep flammable materials away from lit bulb.

Assembly Instructions

· Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

· When assembling place all parts on a soft, clean, and flatsurface such as a carpet to prevent scratches.



Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

TOOLS YOU MAY NEED







Cutting Pliers

Note: It is required to be sure as follows before installation

- The light bulbs shall be tested lit before bulbs are assembled and lamp shades are installed.
- The electric wire length needs to be determined in advance.

Parts List

| Ax1 | Bx1 |
|-----|-----|
| | |
| Cx1 | Dx1 |
| | |
| Ex1 | Fx3 |
| | |

EXPLODED



Installation Steps



Installation Steps

Step 3



Care and Maintenance



WARNING: Before you perform any cleaning or maintenance work, or when not in use for a long time, please turn off the main power control and unplug the power plug.

- \cdot Wipe the fixture with a damp, soft cloth.
- \cdot Do not use any abrasive cleaners or cleaners that contain alcohol.

 \cdot When replacing bulbs, use 60-watt MAX for E26/27 bulb and E12/14 bulb, 40-watt MAX for G9 bulb, 20-watt MAX for G4 bulb.

Troubleshooting

| Problem | Possible Cause | Solution |
|--|--|--|
| | A bulb is burned out. | Replace the bulb. |
| | The power is off. | Ensure the power supply is on. |
| The light will not turn on. | There is a faulty wire connection. | Check the wiring. Contact a qualified and licensed electrician if you are not capable to solve wiring problems. |
| | There is a faulty switch. | Test or replace the switch. |
| The fuse blows or the circuit breaker trips when the light is turned on. | There are crossed wires or the power wire is grounding out. | Discontinue use of the fixture. Check the wire connections or contact a qualified electrician. |
| | Drive Failure | Contact our after-sales service, may need to replace the driver. |
| Strobe | Wiring Error | Rewire according to the manual. |
| | Light Source Failure | Replace the light source, if the problem can not be ruled out, please contact customer service. |
| Abnormal noise | Drive Failure | Contact our after-sales service, may need to replace the driver. |
| | The main power control has just switched on less than 5 seconds. | Wait for 5 secods. |
| The wireless charging is | The power is off. | Ensure the power supply is on. |
| not working | The plug is loose. | Ensure the plug is inserted firmly. |
| | The wire connection is loose or not connected | Ensure the connection is firm. |