

## **Smart Toilet Installation Guide**

Intelligent toilet manual precautions for use

# Content

## Before Using

Safety Instructions.....	01
Precautions for Use.....	05
Parts Identification.....	07

## Toilet Installation

Installation Guidance.....	09
Installation Steps.....	10
Hose Connection And Installation.....	12
Remote Control Installation.....	13
Trial Run.....	13

## Instruction for Use

Side Control Knob Instruction.....	14
LED Display Screen Instruction.....	14
Remote Control Instruction.....	15
Usage Instruction.....	16
Automatic Sensing Function.....	17
Advanced Function.....	18

## Appendix



Remote Control Battery Replacement.....	18
Backup Battery Replacement.....	19
Usage Instruction.....	20
Fault Judgement And Solutions.....	21
Daily Maintenance.....	23
Technical Support.....	24
List of Materials.....	25

## Safety Instructions



Please read the safety instructions carefully before using.

The precautions listed here are important in relation to safety and should always be strictly observed.

### The meaning of the diagram is as follows

	<b>Caution</b>	It means that if this sign is ignored and product handled improperly, the users will be dead or be injured seriously.
	<b>Note</b>	It means that if this sign is ignored and product handled improperly, the users will be injured seriously or subject to property loss.

### Examples and descriptions of the Diagram

	<ul style="list-style-type: none"> <li>It means prohibition.</li> <li>The left diagram indicates "Disassemble prohibited"</li> </ul>
	<ul style="list-style-type: none"> <li>It means that it must be observed.</li> <li>The left diagram indicates "strictly abide by"</li> </ul>

## Caution



**Do not spray water or detergent on the main body or electronic plug**

No sprinkling

- May cause fire or electric shock.
- May cause breakage or damage to the toilet seat or water seepage in the room.

This product belongs to electronic products, please do not install the product in an easily splashed or humid place. Please install an exhaust fan and other exhaust equipment to ensure unobstructed air flow in the bathroom

- Otherwise, it may cause a fire or an electric shock.

### Please set the socket for power wiring as follows

- If the wiring is not as follows, it may cause a fire or electric shock.

- Please use high inductance, fast type leakage switch ( rated induction current below 10mA) or protect with insulated transformer ( above 1.5KVA, below 3KVA) for the circuit of socket.
- The installation position of the socket must be more than 0.3m from the ground and as far away from the bathtub as possible.

The grounded wire equipped with the product must be grounded, please be sure to connect to the ground wire

- Otherwise, it may cause an electric shock.

**Note:** The grounding treatment mentioned here means that the grounding resistance is below 4Ω protective earthing, and the grounding wire uses copper wire of 1.6 mm or more in diameter.

### When using in the bathroom

Please make sure power supply and the plug is sealed with silicone to prevent the water

- Otherwise, it may cause a fire or electric shock.

## Caution



Do not use in humid places

**Do not install this product in humid places such as Shower room. (Prevent water from entering electronic components)**

- May cause a fire or electric shock.



Disassemble prohibited

**Never disassemble or repair or modify by yourself**

- May cause a fire or electric shock.



Prohibition

**Malfunctioning products are forbidden to use**

- Under the following circumstances, please unplug the power supply and close the water valve to stop supplying water.

Fault refers to:

- The main body or water pipe leaks water.
- The product is cracked or damaged.
- There is abnormal noise or peculiar smell.
- The product smokes and abnormally hot.
- Toilet blockage.

- Fault products are forbidden to use, otherwise, it may cause a fire or electric shock and even indoor water seepage, etc.



Prohibit the touch with wet hands

**It is forbidden to plug or unplug the power supply with wet hands**

- May cause an electric shock.



Prohibition

**Do not damage the power cord and toilet connection line**

It is forbidden to pull, modify, heat, twist, place heavy objects on the power cord and toilet connection line.

- Damaged products are forbidden to use, otherwise, it may cause a fire or electric shock or short circuit.



Prohibition

**Do not use loose or shaking power outlets**

- May cause a fire or electric shock.



Prohibition

**Water except for tap water and potable water is forbidden to use**

- May cause skin inflammation.



Prohibition

**Do not use the multi-socket socket**

- Please do not connect the wire or use the extension cord when using, it may lead to heat and cause a fire and electric shock.

## Caution



Required

**Attention to prevent low temperature burns**

- Please adjust the seat temperature to normal level when sitting for a long time.
- Please adjust the seat temperature to the normal stage, the wind temperature to the low level, when the following people use "thermal seat" and "warm air drying" functions.

- Children, the elderly, and other users who cannot adjust the appropriate temperature by themselves.
- People with walking problems such as the sick and disabled.
- Sleepy people who took medicines, sleeping pills, cold medicines, etc., with sleepy side effects, drank too much, got overtired, etc.

## Caution



No fire

### Do not keep cigarettes and other burning stuff nearby

- May lead to a fire.



Prohibition

### It is forbidden to put your fingers or sundries at the warm air outlet It is forbidden to touch the warm air outlet with hands or cover it with cloth

- May cause burns, electric shock, fire.
- Please be careful when children and the elderly using.



Prohibition

### Do not apply force, stand on the seat ring, the flip lid or the main body, and heavy objects are forbidden placed on it

- May cause product to crack, the main body to fall apart, the person to be injured.
- Toilet may be damaged and indoor water seepage will occur.



Prohibition

### Use diluted kitchen detergent (neutral) to clean. Avoid these products:

(toilet cleaner, detergent, petrol, banana water, cleaning powder and nylon brushes, etc.)

- May damage and crack the plastic, deforming and cracking it and causing personal injury.
- May damage water pipes and cause water leakage.



Prohibition

### When opening the water inlet angle valve, do not remove, or rotate, open the water filter net


- May cause water leakage.



Prohibition

### Do not bend or damage the water filter screen

- May cause water leakage.

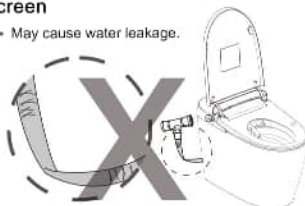

Prohibition

### Do not flush any sundries except excrement and toilet paper

- May cause the water closet to be blocked and the sewage will leak out of the room.



Required

### Disconnect the power plug for a long time of not using.



Required

### Close the water angle valve to stop supplying water when water leaking



Required

### Prevent damage caused by freezing

- May cause damage to the water inlet configuration and the interior body, and leakage may occurs.



Required

### Tighten the water filter net when installing

- Otherwise, it may cause water leakage.

Please implement warming, to raise the rest room temperature



Required

### Make sure the power plug in

- Ensure the power plug is plugged in before using, and the plug and socket fit closely without looseness or incomplete insertion
- Otherwise, it may cause a fire due to heat.
- Disconnect the power plug for a long time of not using.



Required

### When the toilet is blocked, unplug it and use a commercially available pipe unblocker to remove the blockage

- Otherwise, it may lead to sewage leakage and indoor water seepage when automatically cleaning.



Required

### Do not install it in a place directly exposed to light

- May cause discoloration, aging, and deformation.




## Precautions for Use

### Cleaning Mistakes

Do not wipe the main body with hard and coarse cloth or tools to avoid scratching.



Avoid directly washing with water.

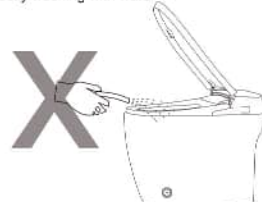


### Daily Maintenance

Avoid splashing urine on the main body or spray nozzle.



Pull out the power plug during the thunder storms.

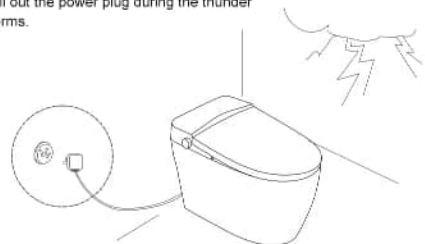

### Improper Operation

Shall not cover the seat sensor, human infrared sensor, and the transmitting signal and receiving signal of the remote control.

- May cause the smart toilet misoperation.

Keep away from the main body when using the radio, etc.

- The radio may be garbled

### Do Not Lean Back On The Flip Lid

- May cause crack.

### Put Away The Child's Seat Placed On The Seat After Using

- May cause some functions unavailable.

## Precautions for Use

Take anti-freeze measures to prevent freezing damage during the freezing night in winter.



Do not put heaters near the main body.

- May cause discoloration or malfunction.





Do not roughly open the seat ring or flip lid

- May cause crack or malfunction.





## Parts Identification

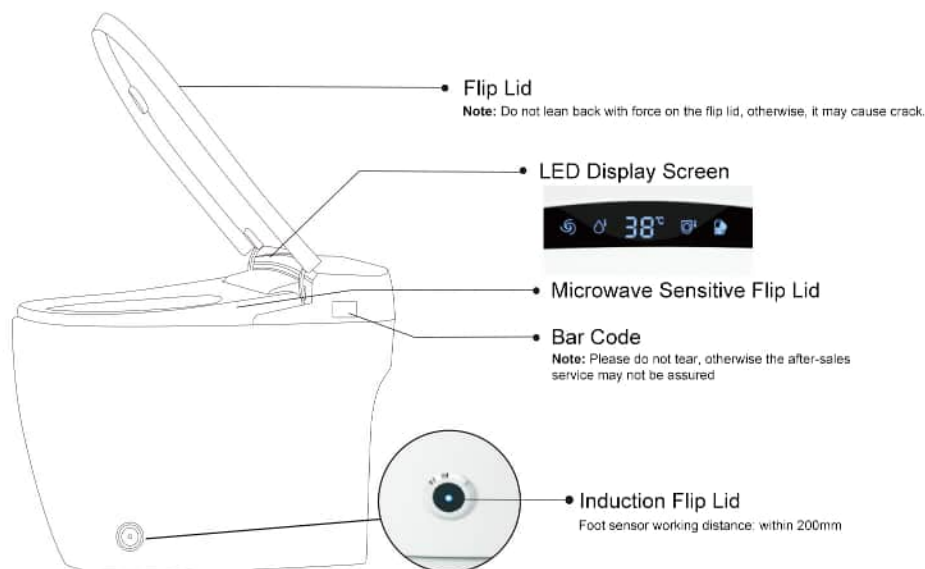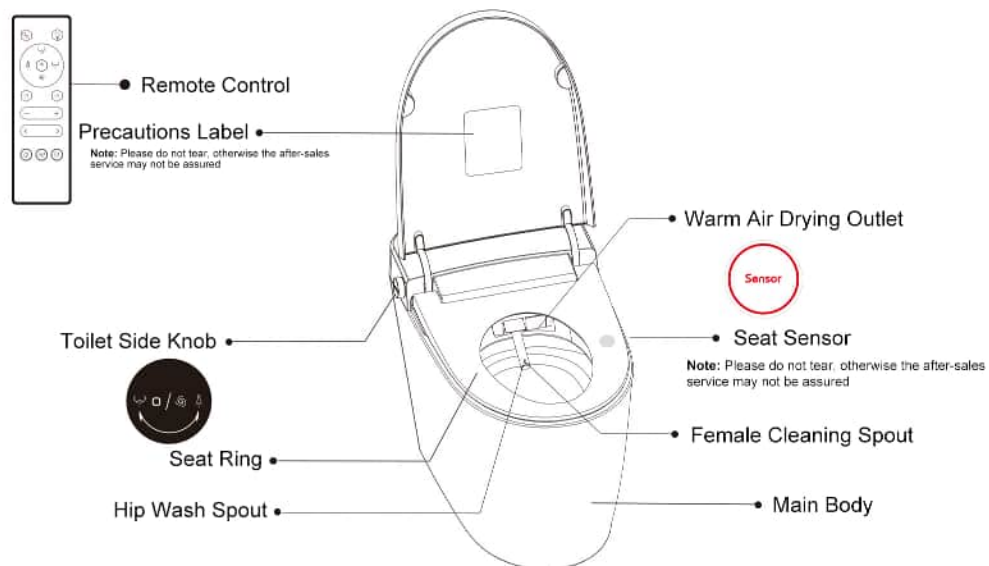

## Main Functions

Front Cleansing	Rear Cleansing	Drying
Forward	Backward	Flushing
Water Temperature	Drying Temperature	Seat Temperature

## Humanized Functions


H/C SPA	Night Light	Eco
Automatic Lid Open	Automatic Flush	Remote Control

## Humanized Functions


Earth Leakage Prevention	Fireproof	Antibacterial
--------------------------	-----------	---------------

## Installation Guidance

### List of Materials

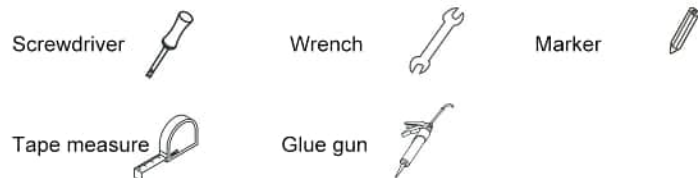

### Installation drawings

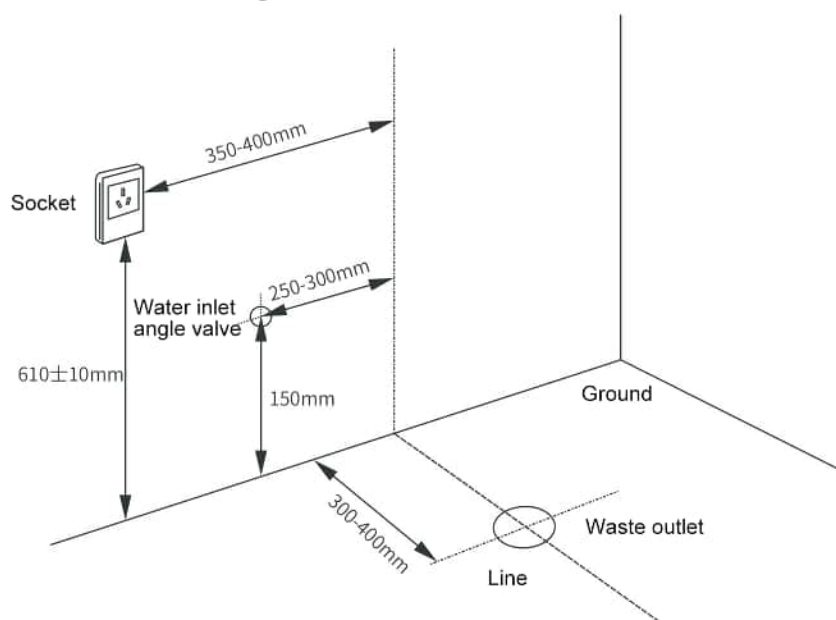


### Caution

#### Please set the socket as follows

1. Ensure the socket properly grounded.
2. The power cord length is 1.5m and be located close to the socket, convenient to install and remove, and as far away from the bathtub as possible.
3. Use waterproof socket and don't use extension power cord to connect.  
- May cause a fire or electric shock.

## Size Drawings

unit: mm

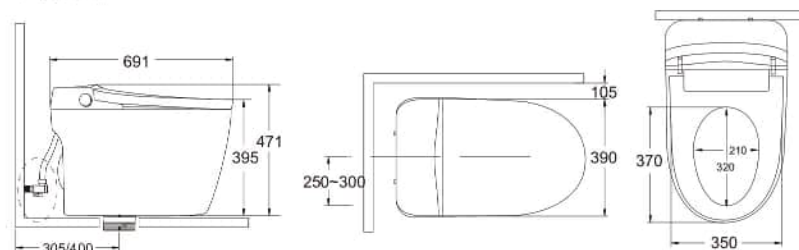

### Notice before installation


1. Test water pressure: more than 1.32 gallons within 15 seconds.
2. Before installation, turn on the water pipe for 2 minutes and then connect to the inlet pipe.



## Installation Steps


1. For the bathroom newly installing a toilet, a wax ring with bolt shall be added.

**Note:** You need to purchase your own wax ring according to the size and position of the two bolt holes at the bottom of the ceramic.  
See Figure 1

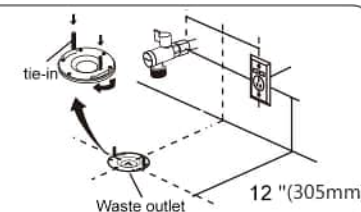


2. Lift the flip lid assembly from the toilet, up from the inside.

**Note:** Do not pull the lid roughly when lifting the toilet flip lid

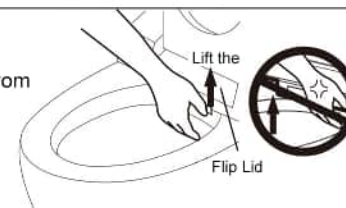

3. Install a wax ring under the toilet.

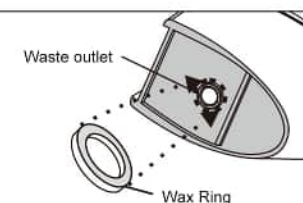


4. Attach the toilet to the wax ring, making sure the bolts line up with the holes in the toilet.  
(from the top)




5. Use a wrench to lock the nut and other accessories to the retaining bolts.  
(from the top)


Nuts  
Gasket  
Plastic screw washer

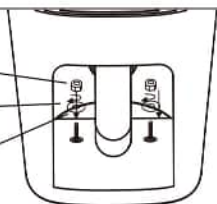


6. To install seat ring and toilet main body: the seat ring positioning hole shall be aligned with the ceramic body positioning column. Then in the seat ring's horizontal state, the hands pressure the back part of the seat ring, so that it can be completely installed.

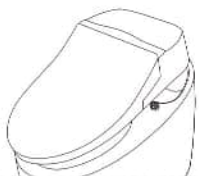

 7. Install the water inlet angle valve and connect the dedicated hose (before connecting the dedicated hose, please discharge water in the hose for 3-5 minutes, ensuring it is clean and that the water inlet angle valve is not blocked)



8. Apply the anti-mold sealant at the contact between the toilet and the ground. After the sealant has solidified, plug in the power supply, slowly open the water inlet angle valve. Adjust the water pressure to within 7.5 kg, and check the sealing of the connection points.

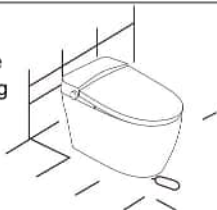


#### Note

1. Smart toilet accessories have been commissioned, personal disassembly is strictly prohibited. Please use the fittings and hoses provided by our company. Old fittings and hoses cannot be reused. If have any questions, please contact local retailers or our after-sales service department.

2. All contents of this instruction manual are based on the latest conditions at the time of printing. We reserve the right to make changes without further notice.


## Hose Connection And Installation

1. Install the new water inlet angle valve, connect the dedicated hose - end to the angle valve, and the other end to the filter housing.
2. Plug in the power supply, adjust the angle valve to control the water pressure within 7.5kg.

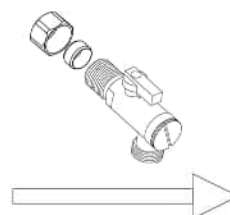

Remove the old water inlet angle valve and replace it with the new one

old water inlet angle valve

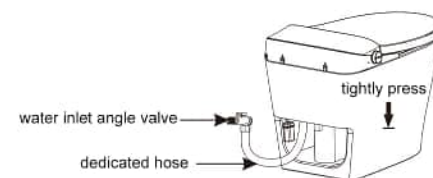

**Note:** The hose cannot be folded, otherwise the water pressure will be too low to use the machine equipment

new water inlet angle valve


**Note:** The hose shall not be folded, otherwise it may cause the water pressure too low to operate the toilet.

#### Note:


1. In case of power failure during the cleaning process, please close the angle valve and stop the water supply.

The function can be normal after the self-test when the power comes in.

2. Installation shall use the new hose assembly that comes with the apparatus and other parts specified in the apparatus. The old hose assembly cannot be reused, otherwise it may cause water leakage.

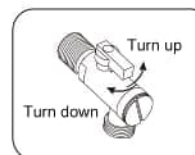

Adjust the angle valve

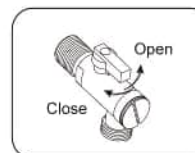


Turn off the angle valve



## Remote Control Installation

### Installation Method

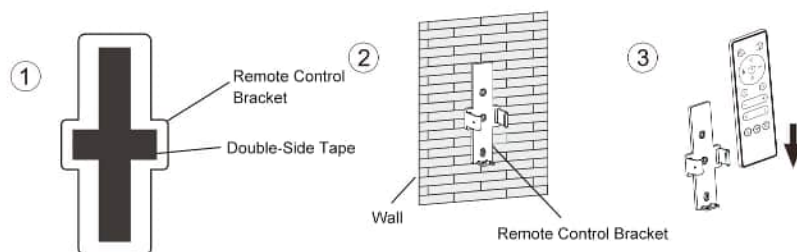

#### Note:

1. Clean the installation area before taping. Press the tape firmly and evenly when applying. Can be used after 15 minutes.
2. Double-side tape is suitable for tile-type flat walls, not for wallpaper-type walls.
3. Insert the remote control into the bracket and secure it in a re-ventilated, easy-to-use position. Please take out the batteries in the remote control when not in use for a long time.


## Trial Run

### First time connect water and power supply:

Open the water supply angle valve to turn on the power, when soft lighting and display on the water temperature flash, it means the heating water tank is feeding water.  
Waiting for about 30 seconds after soft lighting and the water temperature on display stops flashing, it means the heating water tank has been full of water. At this time, try to operate the toilet as follows.


#### 1. Seating Sensor

The picture shown is the seating sensor area. Only when the system senses someone is seated, the function can be on. Then, the buzzer will "beep" once, indicating it has been sensed and the system can be activated. When the human body leaves the sensor place, the buzzer will also "beep" once.

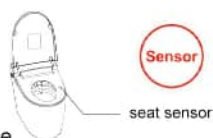

#### 2. Check Fundamental Functions

When the human body sits on the sensor, the buzzer beeps. Press the "Rear Cleansing" or "Front Cleansing" button on the side control panel to operate.

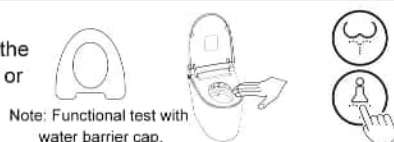

#### 3. Check the Drying Function

When the human body sits on the sensor, the buzzer beeps. Press the "Drying" button on the side control panel to operate.



## Side Control Knob Instruction

There is a control knob on the side of the product body. If the remote control is damaged or the battery is exhausted, the cleaning and flushing functions can be turned on through the knob.



**Flushing:** Long press the middle of the button to flush once (half flush).

**Flushing:** Press the middle of the button once to flush once (full flush).

**Stop:** When seated, press the middle of the button to stop the current running function.

**Power-Off Flushing:** When power is off, lightly press the middle of the control knob to start the flushing function.



**One-Button Automatic:** Front Cleansing + Drying

When seated, turn it counterclockwise once to turn on the front cleansing mode; turn it counterclockwise again to enter the reciprocating cleansing state.



**One-Button Automatic:** Rear Cleansing + Drying

When seated, turn it clockwise once to turn on the rear cleansing mode; turn it clockwise again to enter the reciprocating cleansing state.

## LED Display Screen Instruction



It indicates that the flush function is on by default.



It indicates the water temperature and the displayed value is the current set temperature.




It indicates the seat temperature and the displayed value is the current set temperature.



It indicates that the toilet is in energy-saving mode.

**Note:** only for models with display screen.

## Remote Control Instruction

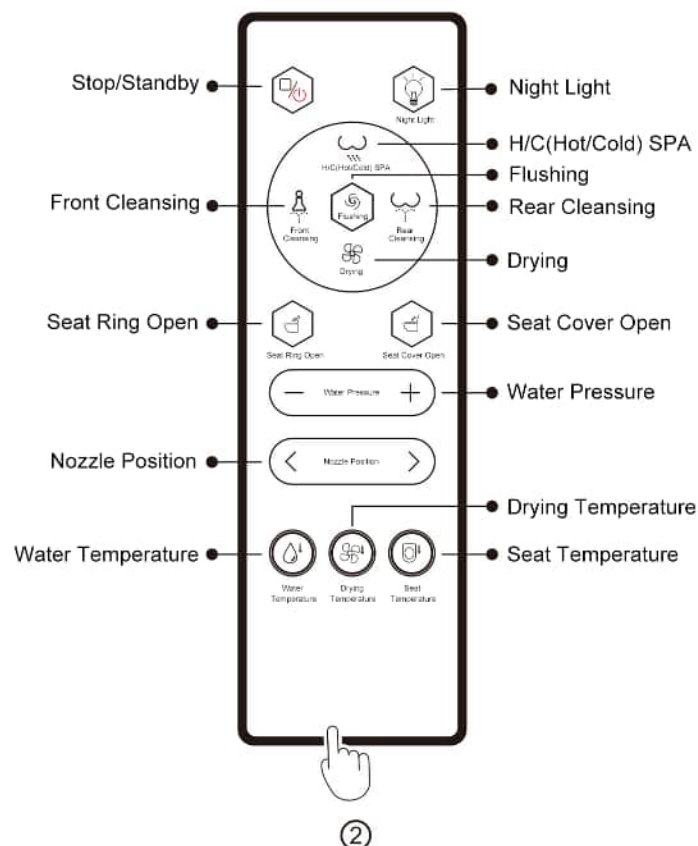

### Notice: Remote Control pairing

After the toilet is powered off, Long press "Front Cleansing" on the remote control. At this time, the three indicators on the remote control will light up. Then power on the toilet before stopping pressing the button. The pairing is complete.

## Usage Instruction



### Stop / Standby

Press once to stop the running function;  
When you are not seated, press and hold the stop button for more than 2 seconds to enter standby mode, and all functions are turned off.



### Rear Cleansing

In the seated state, press this button to turn on the rear cleansing function; the cleaning time is 2 minutes. Press it again to start the reciprocating cleaning function; if you want to stop halfway, please press the stop button.



### Front Cleansing

In the seated state, press this button to start the front cleansing function; the cleaning time is 2 minutes. Press it again to start the reciprocating cleaning function; if you want to stop halfway, please press the stop button.



### Hot/Cold SPA

In the seated state, press this button to alternately spray warm water and normal temperature water from the rear cleaning nozzle to achieve alternating hot and cold massage effects, and with the change of water pressure, the cleaning time of this function is 4 minutes; if you want to stop midway, press the stop button; after the hot and cold SPA function is turned on, press this button again to turn on/off the reciprocating mode.



### Drying

In the seated state, press the drying button to start the drying function; the drying function lasts for 4 minutes; if you want to stop halfway, please press the stop button.



### Reciprocating Cleaning

In the cleaning mode, press the cleaning button to start the reciprocating cleaning function. +/-



### Water Pressure

In the cleaning mode, the water pressure is adjusted, and the water pressure adjustment range is 3 levels. Press the "+" key to increase the water pressure by one level, and press the "-" key to decrease the water pressure by one level.



### Nozzle Position

In the cleaning mode, it is used to adjust the cleaning position, and the cleaning position has 3 adjustable levels.



### Water Temperature

Used for water temperature regulation in wash mode. The adjustment range is 0-3 gears, the indicator light shows the current gear position, and when all the indicators are off, it is 0 gear (0 gear water temperature 30 degrees, 1 gear water temperature 35 degrees, 2 gear water temperature 37 degrees, 3 gear water temperature 39 degrees).



### Drying Temperature

It is used for air temperature adjustment in drying mode. The adjustment range is 0-3 gears, the indicator light shows the current gear position, and when all the indicators are off, it is 0 gear (no heating at normal temperature at 0 gears, 40 degrees of air temperature at 1 gear, 45 degrees of wind temperature at 2 gears, 50 degrees of wind temperature at 3 gears).



### Seat Temperature

Press this button to adjust the seat ring temperature. The adjustment range is 0-3 gears, the indicator light shows the current gear position, and when all the indicators are off, it is 0 gear (no heating at normal temperature at 0 gears, 32 degrees of seat temperature at 1 gear, 36 degrees of seat temperature at 2 gears, and 39 degrees of seat temperature at 3 gears).

## Usage Method



### Flushing

Press the knob for a ceramic flush (full flush). After leaving the seat, a ceramic flush (full flush) will be performed automatically. Press the flush key on the remote control to perform a ceramic flush (full flush).



### Eco

Press and hold [Seat Temperature] for more than 2 seconds to turn on the energy-saving mode. When seated, the Eco mode is automatically released. After leaving the seat for 1 minute, it will automatically return to Eco mode.



### Night Light

Press this button to turn on/off the night light.



### Seat Ring/Cover Open

When unseated, press the [Seat Ring/Cover Open] button on the remote control to open and close the seat ring/seat cover.

## Automatic Sensing Function

### Microwave Radar

When the human body walks forward about 50cm in front of the toilet, the seat cover will automatically open. Long press the [seat cover open] button on the remote control for more than 2 seconds to turn this function on/off. Circular gear selection (1-5 gears), one beep is 1 gear, and so on.

### Foot Sensor Flip Lid

There is a foot sensor switch in the lower right corner of the ceramic front.

High-end configuration series (foot sensor control flushing): It can realize the flushing function.

Luxury configuration series (foot sensor control flushing and automatic seat cover/ring open): When the seat cover is closed, use the foot sensor function to open the seat cover; use it again to open the seat ring; use the third time to close the seat ring and trigger the flushing function.

When the seat cover is open, use the foot sensor function to open the seat ring; use it again to close the seat ring and trigger the flushing function. When there is no other operation within 2 minutes, the seat ring and seat cover will be automatically closed.



**Note:** The drying and cleaning functions cannot be used in the off-sitting state.

## Advanced Function



### Auto-Wetting function

After seated, the toilet will automatically spray clean water to wet the inner wall of the ceramic to prevent dirt from sticking; press and hold the [Water Temperature] button for 2 seconds above to turn on or off this function.

Water Pressure +

### Massage Cleansing

In the cleaning mode, press and hold [Water Pressure+] for 2 seconds above to turn on the massage cleansing function, and the cleaning water pressure will automatically change in strength to achieve the massage effect.

Nozzle Position

### Nozzle Cleaning

When unseated, press [Nozzle Position] on the remote control for 2 seconds above to start the self-cleaning function of the nozzle; when it is turned on, the cleaning tube will stretch out, you can use a soft wet towel or a soft brush to clean the cleaning tube, and it will end automatically after 100 seconds.

## Remote Control Battery Replacement

When the battery runs out, the remote control maybe insensitive or out of control occasionally. Please replace the alkaline batteries immediately.




### Note

The polarity of battery must be put in the right position and the compression spring extends from the negative pole.

- New and old batteries should not be mixed.
- Please use alkaline batteries.

Matching battery: 2 AAA dry batteries DC1.5V

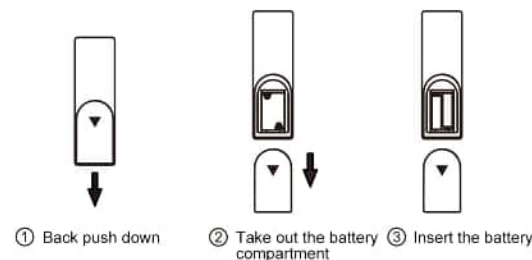


**Note:** Remote control with batteries. Please appropriately store it in a location that is out of reach of young children.



## Backup Battery Replacement

### Steps

1. Unplug the power outlet.
2. Lift the toilet flip lid.
3. Open the battery cover.
4. Put the battery in the right position.
5. Press the "flush" button to ensure appropriate flushing.
6. Close the battery cover. Put the flip lid back and fix it.

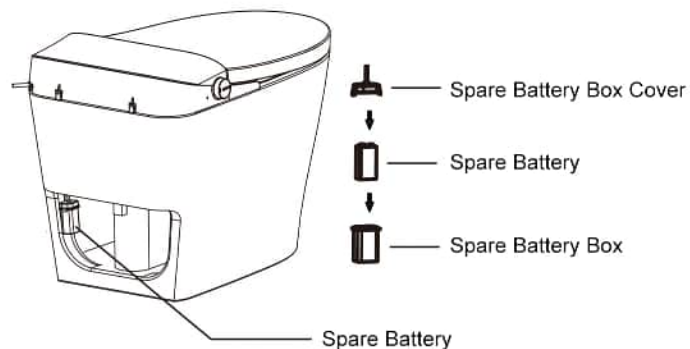

### Note

1. The backup battery must be the 9V alkaline batteries. Do not use carbon or other batteries.
2. If the battery is low or not installed, it will cause an abnormal flush. And the flush function will be abnormal even if the power is off.
3. Recommend checking the 9V backup battery and replacing it with a new one every two years.
4. Please replace the old battery and recycle it appropriately.

## Usage Instruction

### Water Amount And Temperature

Due to the storage water heating mode, the water temperature will not decrease when cleaning for a long time. Although the water temperature may fluctuates, it doesn't effect the normal use.

**Cleaning water will be controlled according to original setting temperature.**

Normal: spouting water without heat.

Low: about 33°C

Medium: about 36°C


High: about 40°C

Heating time depends on external water inlet temperature.



### Installation with the Seat Sensor

When you are not seated and accidentally press the button, the spout will not operate due to the seat sensor. All cleaning functions will not be set when not seated.

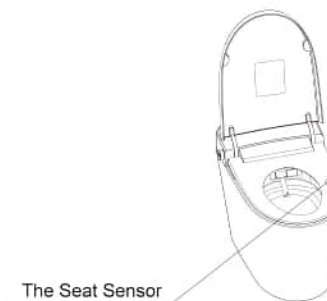

**The seat sensor will not work if the following conditions occur:**

- ✗ The human body does not sit on the seat ring.

Environment usage instruction:

It is recommended that there should be no obstacle within 1.5m of the toilet, otherwise it will cause the flip lid to make wrong instructions.

## Fault Judgement And Maintenance

### Fault Judgement And Maintenance


Symptom	Inspection Method	Countermeasure
Does not start at all	Whether there is a power outage or the power outlet is not connected	Please make sure to insert the power plug Please unplug and plug in again
No water supply or weak water spouting	Whether water is stopped or the water supply valve is closed	Please check the water source and open the water supply valve
	Whether the water supply filter is blocked	Please clean the filter
	Whether the nozzle is clogged with scale	Please clean the nozzle with a toothbrush
	Whether the water pipe is bent	Please smooth the water pipe
Leak	Whether the water pipe connection part is tightened	Please tighten the water pipe connection
Water temperature/Cool seat	Whether the water temperature and cover temperature are adjusted to normal temperature	Please readjust the temperature
Abnormal flushing /the sewage discharging does not work	Put around 2.1 Gal(8L) water into the toilet to check whether the sewage drainage pipe is blocked	If the sewage in the toilet cannot be discharged quickly after pouring water, the sewage drainage pipe may be blocked. Please clean the drainage pipe.
Remote control cannot display	Low battery power	Please replace the battery with a new one
	Recheck the code	Please refer to page 15 about remote control pairing.

### Fault Tip

Fault	Tip
Instant heat module failure (including foot sensor short circuit, side control knob short circuit, circuit control board and heater)	The LED display screen shows 01 code
Instant heat module water temperature sensor failure	The LED display screen shows 02 code
Low flow failure (including abnormal nozzle flow, flow meter cannot detect flow)	The LED display screen shows 03 code
Instantaneous heating module strong current failure	The LED display screen shows 04 code
Water temperature is too high fault	The LED display screen shows 05 code
The seat temperature sensor is faulty or the seat temperature is too high	The LED display screen shows 06 code
The temperature of seat ring failure	The LED display screen shows 07 code
Drying function failure	The LED display screen shows 08 code

### Remote Fault Diagnosis


Operating through the toilet side button, you can check whether the flushing function and the trial run work appropriately. (Start the cleaning and drying function after seated)

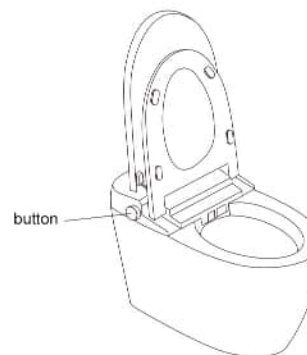

### Emergency Fault Judgement

Under no water supply circumstance, put around 2.1 Gal(8L) water into a barrel and flush the bowl of ceramic.

**Note:** Avoid water spilling from bowl.

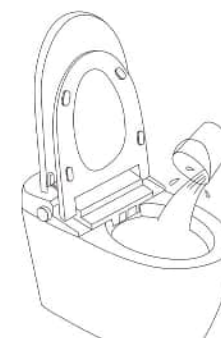

### When the product is left unused for a long time

- Especially in winter when no one at home for a long time, please drain out the water inside the tank and the pipe to prevent freezing

### To Discharge Water

1. Drain out the water inside tank.  
- Activate flushing, and then turn off angle valve to prevent water inlet. Drain out the water inside the heating tank and the pipe.
2. Unplug and cut off the electricity.
3. Unscrew the hose connector off angle valve, drain the water in the pipe and reinstall.
4. Handle the remaining water in ceramic body.  
It is suggested to put some antifreeze into water inside the ceramic body.

**Tips:** Make sure to turn on water angle valve and power supply when you use the toilet again.



**Note:** Before water discharging, the power must be cut off!





## Daily Maintenance

### Main unit care and maintenance

1. Wipe the surface with a sponge or soft damp cloth or neutral detergent cloth.

2. **Note:** Do not use thinners, light gasoline, detergents, chemicals, etc. to wipe. Do not spray insecticides, aromatics, deodorants, etc.


**Note:** The material of the product is new plastic material, which is not discolored. Most of the discoloration phenomenon is oxidation reaction. Product contact with perfume, toilet cleaner, nail polish and other liquids, if not wiped off in time will cause product surface oxidation.

Some users may place a seat cushion on the seat ring with a heating function. Generally, the cushion and the contact surface of the seat are non-slip rubber, once heated, it is easy to cause the seat in contact with the location to discolor.

### Spray nozzle maintenance and care

1. Please clean the nozzle regularly: Prepare a toothbrush and soft cloth first. While not sitting on the unit, short press the "Rear" Button on the side of the toilet, the spray nozzle will extend outward and water will flow out to clean the nozzle and the spout.

2. Use brush and soft cloth to clean. After cleaning, press the "Stop" button to automatically retract the nozzle.

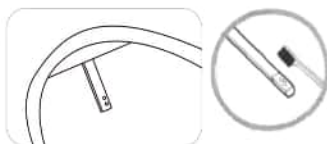

### Maintenance of filter net

1. Turn off the water inlet angle valve and use a screwdriver to the left to unscrew the filter net.

2. Remove the filter net and use a brush to clean it. Reinstall the filter net into the water inlet angle valve.

3. Tighten the filter net and then turn on the angle valve.



Remove the filter net



Rinse the filter dirt with water

## Technical Support

Name			Smart Toilet
Power			AC 110V 50/60Hz
Cleaning Device	Inlet Water Temperature		1°C-30°C
	Inlet Water Pressure		0.15-0.75MPa
	Warm Water Temperature		Adjustment:About 30°C-40°C
	Spray Water Amount	Rear	About 0.35-1.2L/min (When water pressure is 0.2MPa)
		Bidet (female-specific)	
	Spout Position	Rear	50mm—90mm
		Bidet (female-specific)	
	Heating Power		1400W
	Safety Equipment		Flow SensoR, Water temperature sensor, Temperature switch,Thermal fuse
Rated Power			1300W (inlet water temperature 15°C ±2°C,water pressure 0.2MPa)
Drying Device	Wind Speed		≥ 4m/s
	Temperature Adjustment		3 stages (room temperature - about 50°C)
	Heating Power		250W
	Safety Equipment		Thermal controller,Thermal fuse
Seat Heating Device	Temperature Adjustment		3 stages (room temperature-about 40°C)
	Heating Power		45W
	Safety Equipment		Thermal controller,Thermal fuse
	Open And Close Device		Seat ring and flip lid with damping cushioning device
	Safety Equipment		Leakage protector,The cover temperature sensor
Power Cord Length			1.5m

## List of Materials

 
### Main Unit



A Smart Toilet



A Set Of Remote Control Components  
(include remote control, bracket, double-side  
tape)



A Wax Ring



1/2" Compression Angle Stop Valve



An Installation Manual