 
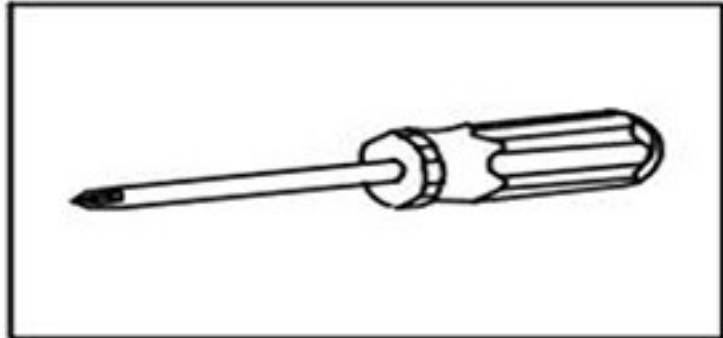 


# Light Fixture Installation

## Tools Required:

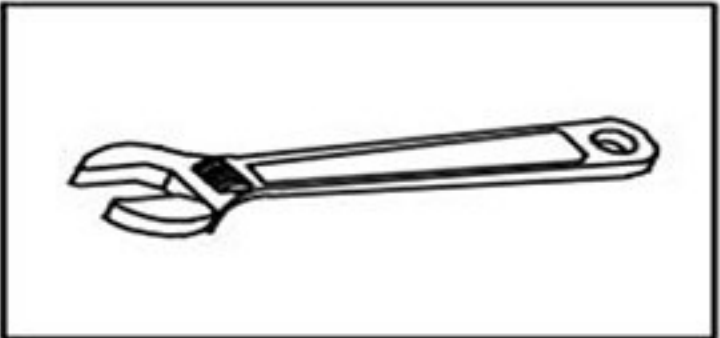 


Adjustable Wrench    Philips Screwdriver

## Before Installation


- 1. Please read these instructions before assembling or installing the product. **NOTE:** Installation by a licensed electrician is recommended.
- 2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
- 3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
- 4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
- 6. Do not use bulbs with wattage greater than specified on this fixture.

## Parts List

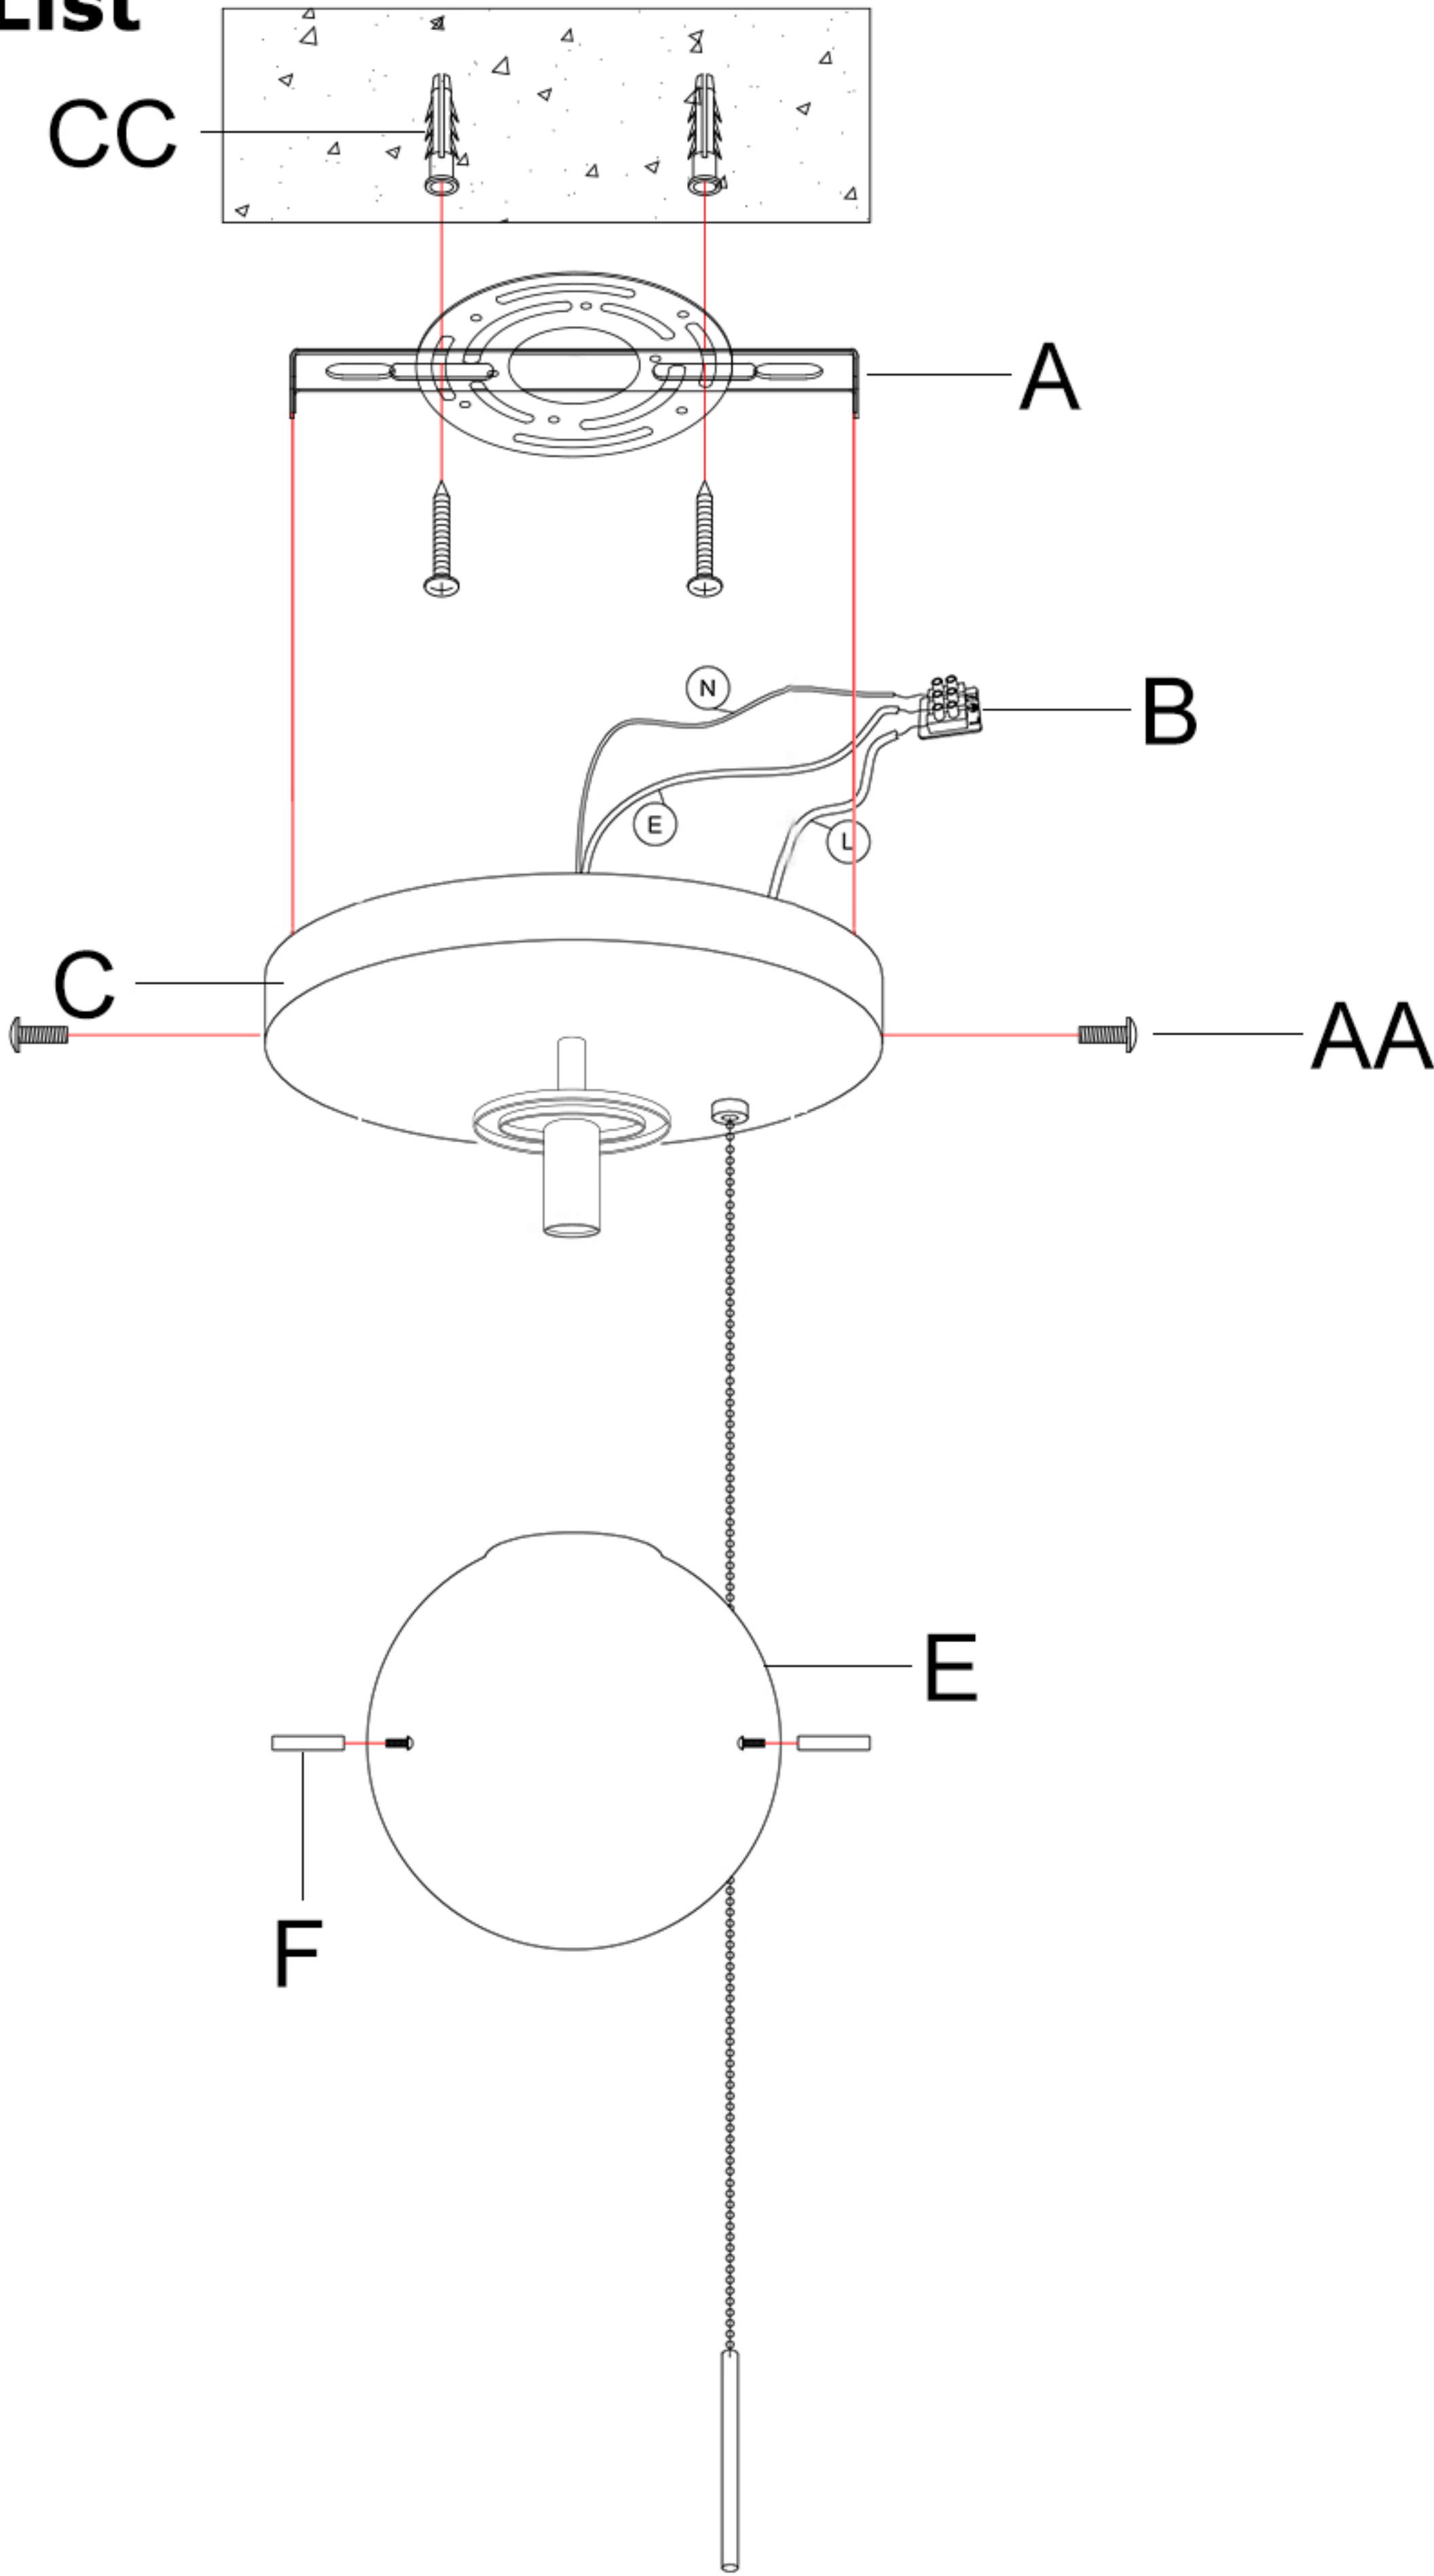

Part	Name	Quantity
A	mounting strap	1
B	termianl block	1
C	canopy	1
E	globe shade	1
F	metal rod	2
AA	screw	2
CC	anchor	2

# Installation Guide

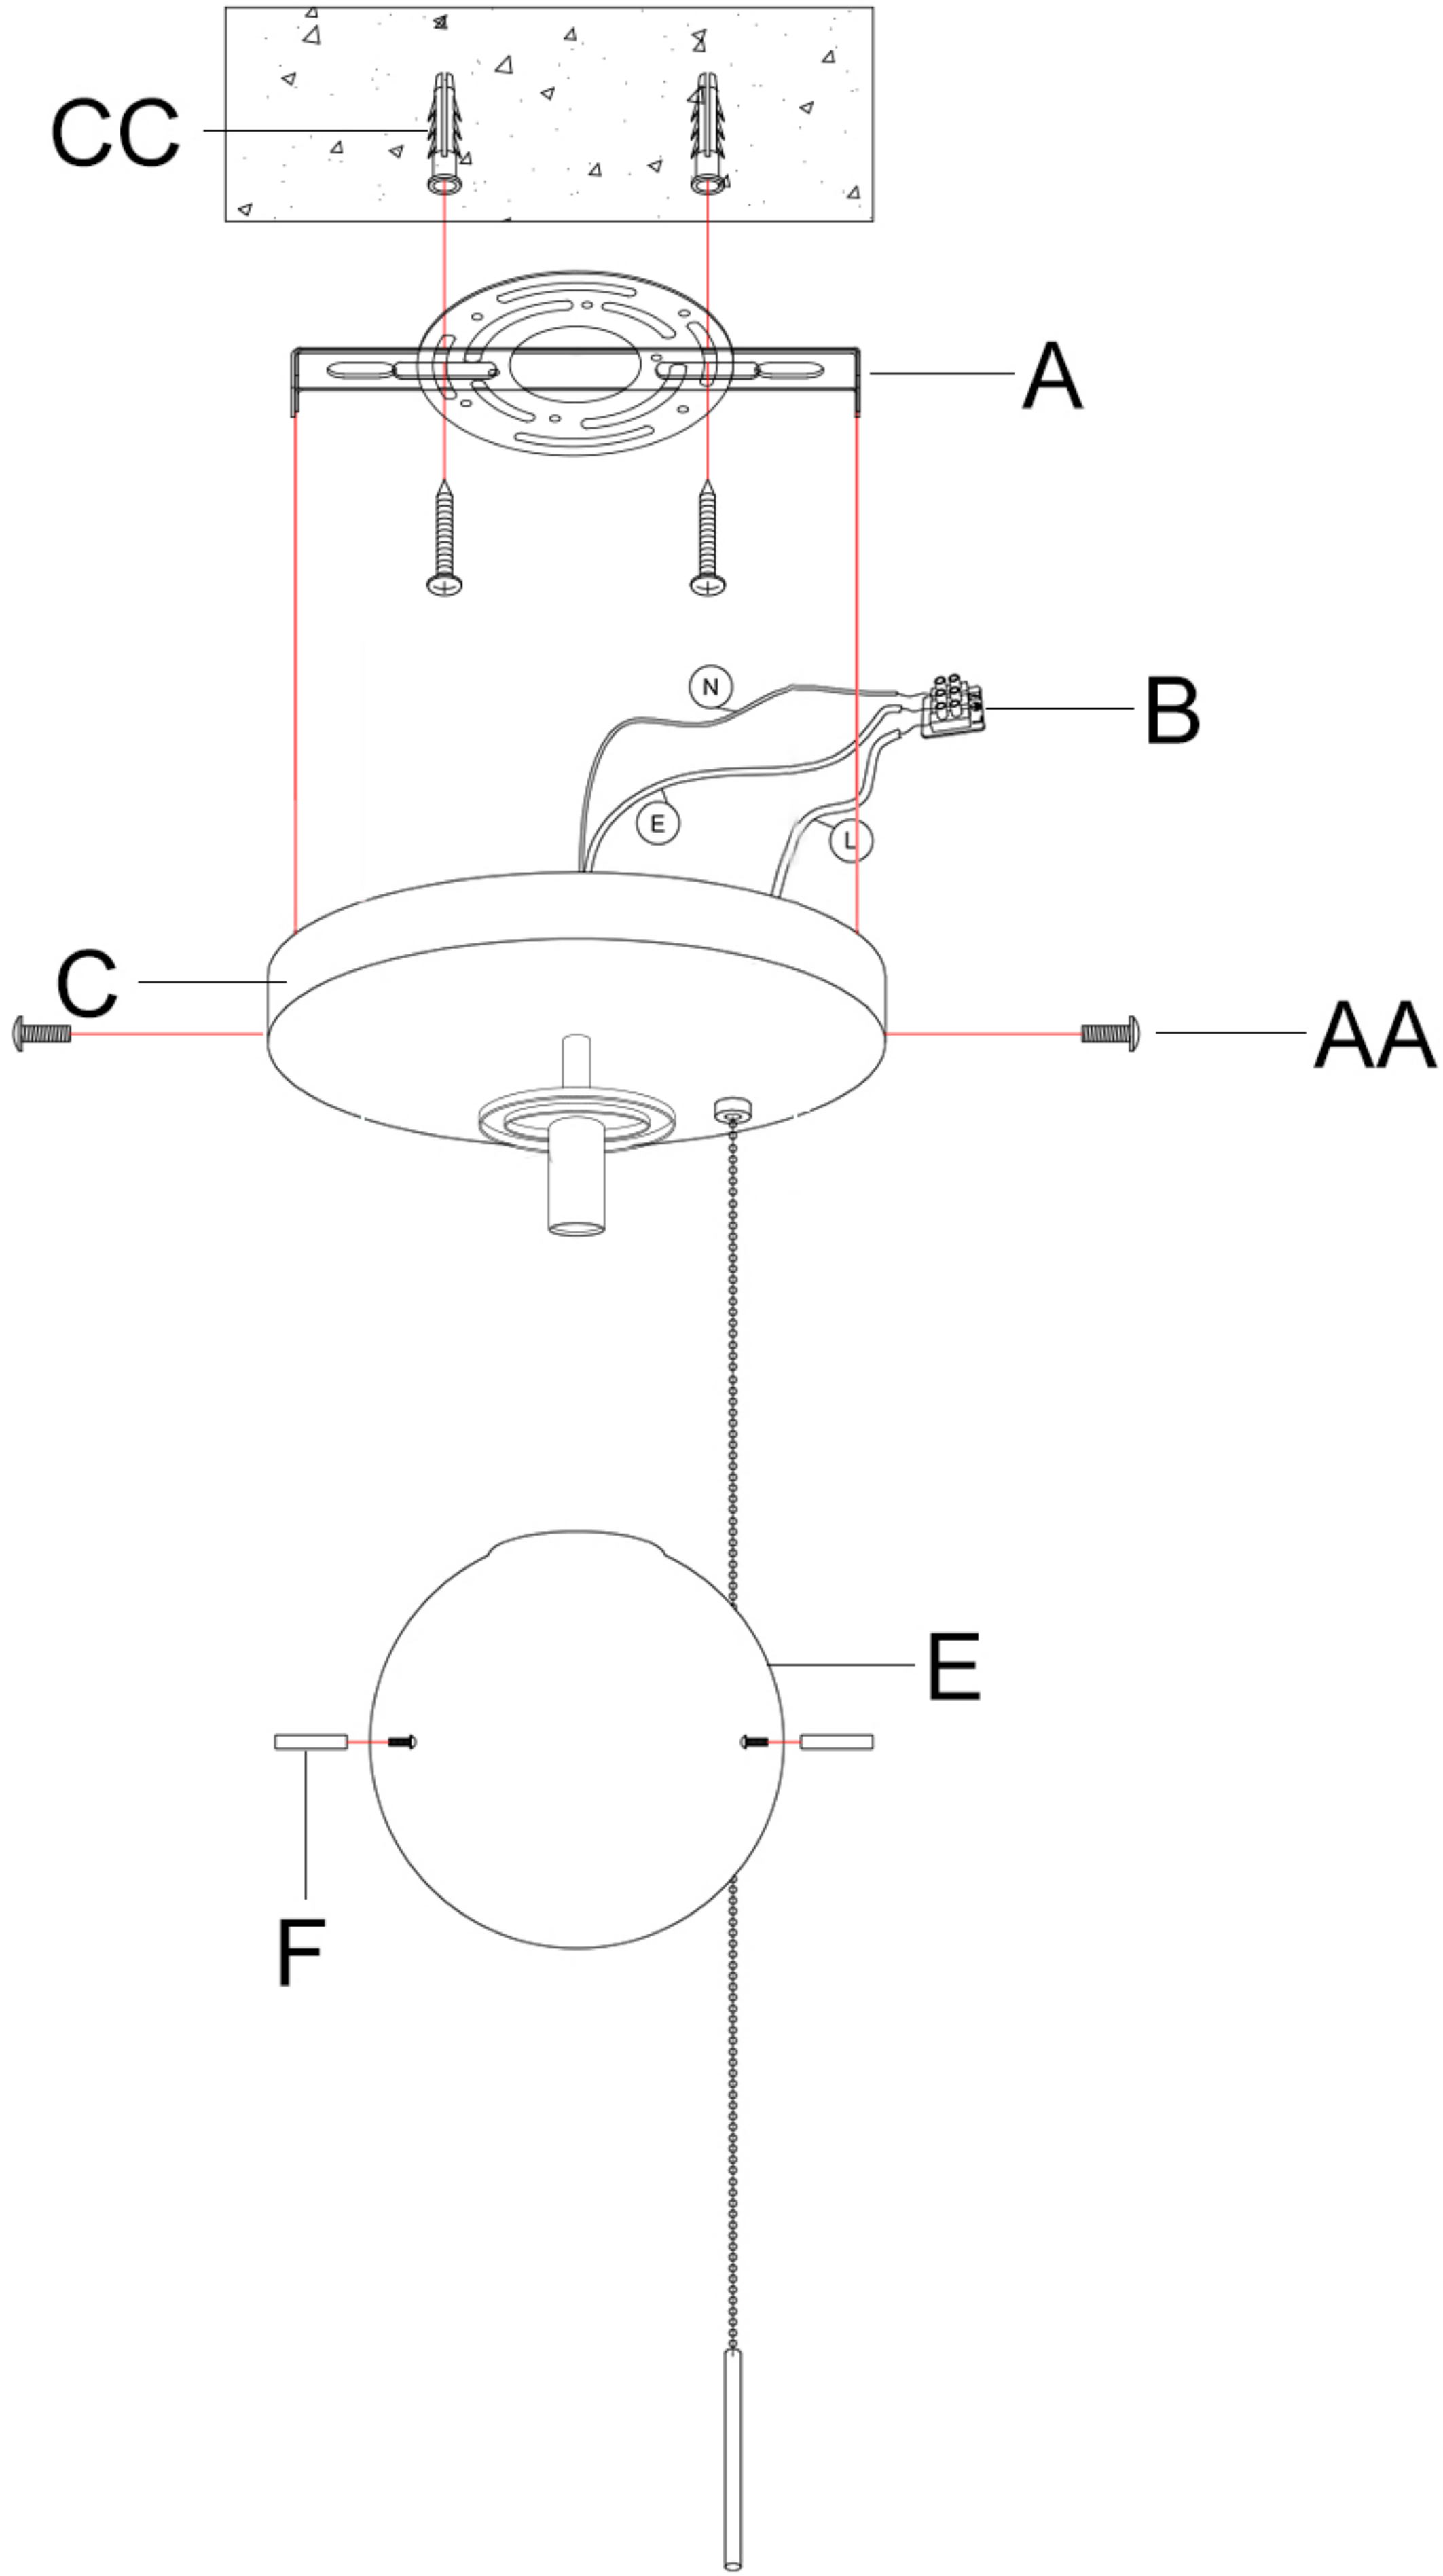 

- 1. Shut off power before installation.
- 2. Fix the mounting strap (A) to ceiling with screws (AA).
- 3. Connect the wires (N, E, L) with termianl block (B) to the corresponding wires in ceiling.
- 4. Attach the canopy (C) to the mounting strap (A) and fix with cap nuts (D).
- 5. Screw in light bulb (not included with the light fixture).
- 6. Fix the metal rod (F) to the globe shade (E) with screws (AA).
- 7. Install and lock the globe shade (E) in place with metal clips. Then turn on the power and test.

# Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	1. Fixture may be wired incorrectly. 2. Worn or broken bulb. 3. Lamp socket or LED transformer (if applicable) may go bad.	1. Check wiring. 2. Replace bulb. 3. Replace lamp socket or LED transformer (if applicable).
Light bulb flickers.	1. Switch Contacts are bad. 2. Wire connections are loose. 3. Light bulb socket may go bad.	1. Replace the switch. 2. Check wire connections. 3. Replace the socket.