

Shower System

Contents

Before Use	
General Guidelines	03
Before Installing	03
Installation Guide	
Assembly Instructions	03
Precautions and Maintenance	03
Parts List	04
Installation Steps	05
Operation	
Trouble Shooting	08

General Guidelines

- 1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
- 2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 3. Shut off the main water supply prior to beginning installation.
- 4. Do flush the water supply lines to remove any dirt and debris before installation (IMPORTANT).
- 5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
- 6. After the installation, check for leaks and make sure every joint is safely sealed.

Before Installing

Read entire shower system installation instructions.

For the following installation instructions for your new shower panel could be assumed that the water supply lines are in place behind the finished wall and are directly accessible for shower installation, please check the installation accordingly.

Assembly Instructions


TOOLS YOU MAY NEED




Precautions and Maintenance


- 1. In order to ensure the durability of the product please be as gentle and slow as possible during operation.
- 2. Clean the filter regularly.
- 3. When the shower is used for a long time and water is found to flow out intermittently there must be debris blocking the wateroutlet. At this time, you only need to gently touch & clean the soft rubber tips liguid or transparent glass detergent then rinse it with soft water, then gently wipe it with a dry soft cloth.
- 5. Do not use any scrubbing detergent, polisher, sand-cloth, paper tissue or scraper.
- 6. Do not use acid detergent, insoluble & grain-likedetergent or soap.
- 7. If you will not use the shower for a long time please close the main water inlet valve in your home.
- 8. When the ambient temperature is under 0C/32°F, please take necessary measures to keep the water equipment warm.

Parts List

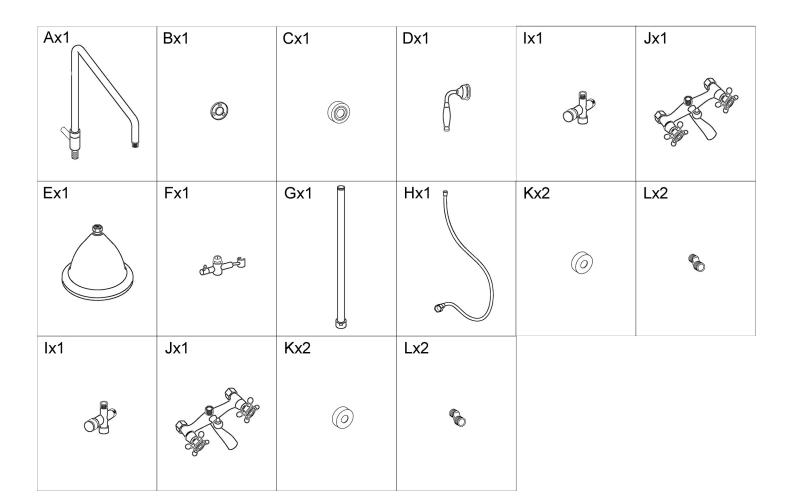

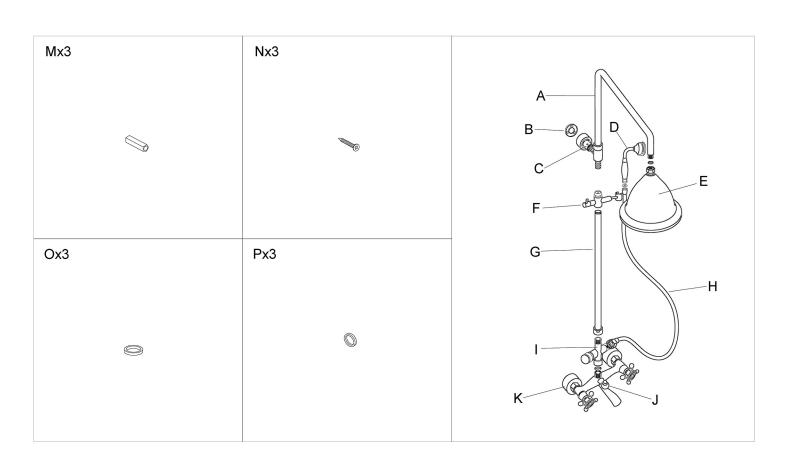


Step 1

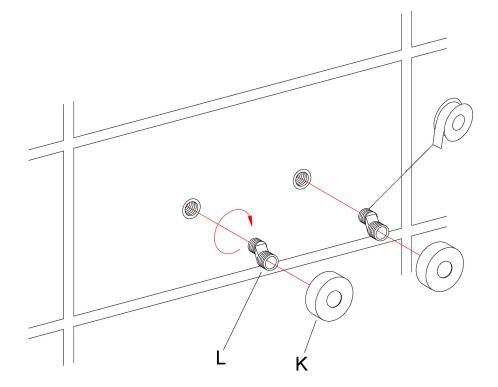


1. Wrap the threads ofs-union with Teflon tape. Screw the s-unions into the female fittings of water supplies. Makesure that the s-unions are level.

Step 2

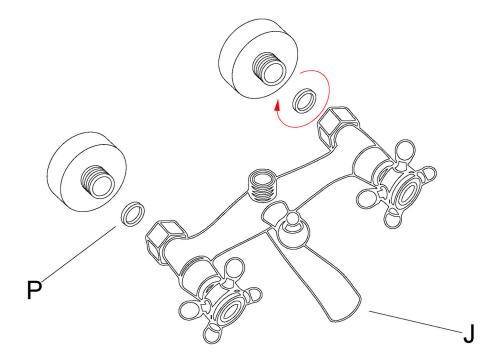


2.Install the escutcheon. Fix the washers into theinlets on the valve body. Install the connecting threads on the s-unions.

Installation Steps

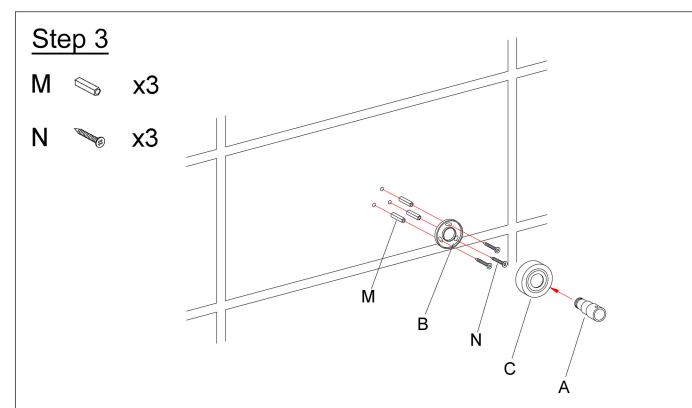


3. Drill the hole andinstall the anchors. Fixthe mounting plate towall with screws. Screwthe mounting bracketthrough the cover plateinto the mounting plate.

Step 4

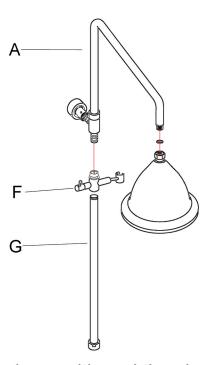


4.Put on screen washer andthread the showerhead into the shower arm. Screw theriser into the shower armassembly. Then, locate the shower arm assembly into the mounting bracket and tighten the screw with ascrewdriver.

Step 5

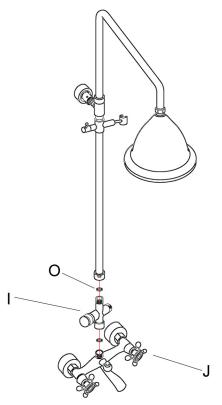

5.Add rubber washersto both ends of diverterand screw diverter into the valve outlet. Thenlevel and fix the risersecurely over the diverter outlet.

Step 6

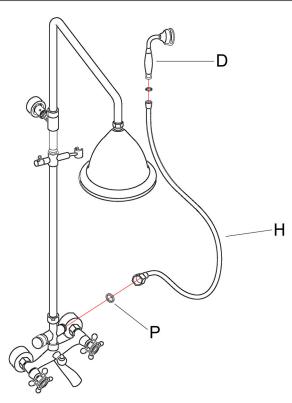

6.Install the handshower. Place the rubberwashers in both ends ofthe hose. Screw one endinto the hand shower outlet on the diverterand the other end into the hand shower. Place the hand shower in the hand shower holder.

Troubleshooting

Problem	Possible Cause	Corrective Action
Water does not shut off	O-ring is not seated correctly or worn.	1. Reseat or replace O-ring.
completely.	Cartridge may be defective.	Replace cartridge.
Leaks at waterline connection.	1. Worn or broken washer.	1. Replace washer.
	2. Faucet body may be defective.	2. Replace faucet (contact us for the replacement).
Leaks from handle.	Cartridge may come loose.	Reseat cartridge tight.
	Cartridge may be defective.	2. Replace cartridge.
Leaks at hose connection.	Hose connection is loose.	1. Tighten hose.
		2. Replace hose.
Leaks at shower valve	1. Connection may come loose or not sealed completely.	1. Check connections.
connection.	Defective shower valve inlet or outlet connector.	2. Replace valve body.
Diverter knob does not work.	Diverter cartridge may be defective.	Replace cartridge.
LED light does not Light or noisy LED showerhead.	Defective LED generator.	1. Replace LED spray head (for kitchen faucet).
		2. Replace LED threaded pipe (for seperate faucet spout)
		3. Replace LED generator (for others).
Low flow.	Check for water pressure problems. Aerator may be dirty or clogged.	1. Clean or replace the aerator.
		2. Remove waterflow restrictor if available.
		3. Install booster or pump (if applicable).