


Shower System Installation

INSTALLATION MANUAL Tools You Will Need:

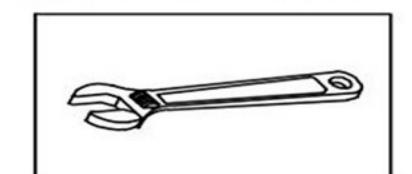

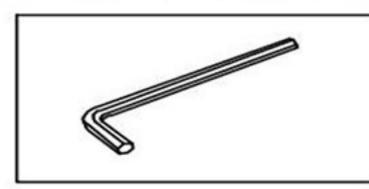

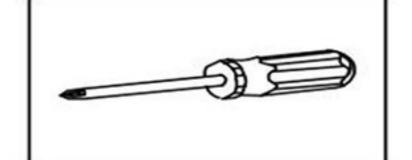

Adjustable Wrench

Parts List

Hexagon wrench

Philips Screwdriver

Before the Installation

- 1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
- 2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 3. Shut off the main water supply prior to beginning installation.
- 4. Do flush the water supply lines to remove any dirt and debris before installation (IMPORTANT).
- 5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
- 6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance

- 1. Rinse with clean water and dry with a soft cloth.
- 2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
- 3. Do not use cloth with a coarse surface.

H	FCC
AA B E D	M N DD BB O C K
Clockwise→cooler water Counterclockwise→warmer water To override the safety stop, press the override button and turn the handle counter-clockwise.	P P


A shower valve 1 B escutcheon 1 C handle 3 D Allen key 1 E indication button 3 F shower arm 1 G Telfon tape 1 H cover plate 8 I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
C handle 3 D Allen key 1 E indication button 3 F shower arm 1 G Telfon tape 1 H cover plate 8 I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
D Allen key 1 E indication button 3 F shower arm 1 G Telfon tape 1 H cover plate 8 I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
E indication button 3 F shower arm 1 G Telfon tape 1 H cover plate 8 I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
F shower arm 1 G Telfon tape 1 H cover plate 8 I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
G Telfon tape 1 H cover plate 8 I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
H cover plate 8 I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
I shower head 1 J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
J body spray 6 K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
K supply elbow 1 L shower hose 1 M handshower 1 N wall bracket 1
L shower hose 1 M handshower 1 N wall bracket 1
M handshower 1 N wall bracket 1
N wall bracket 1
O handshower holder 1
P maximum temperature stop 1
AA screw 4
BB set screw 4
CC rubber washer 3
DD expansion anchor bolt 4


Set the High Temperature Limit Stop


- 1. Remove the maximum temperature stop from the cartridge stem.
- 2. Turn the water on to one of the functions.
- 3. Use the handle to turn the cartridge stem until the output water is the desired high temperature.
- 4. Fit the maximum temperature stop. The orientation is shown in the picture above.
- 5. Fit the handle with the override button in the 12 o'clock position. Once in place, tighten the set screw and put on the indication button.

Installation Guide


level and straight.

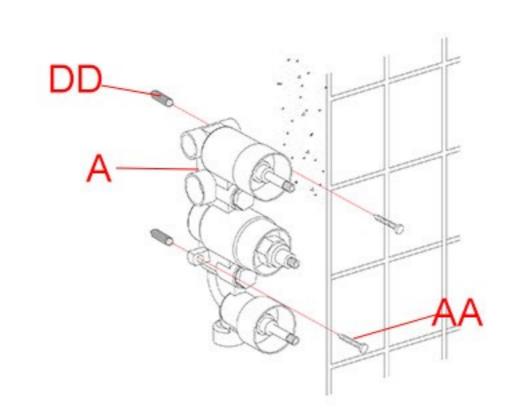


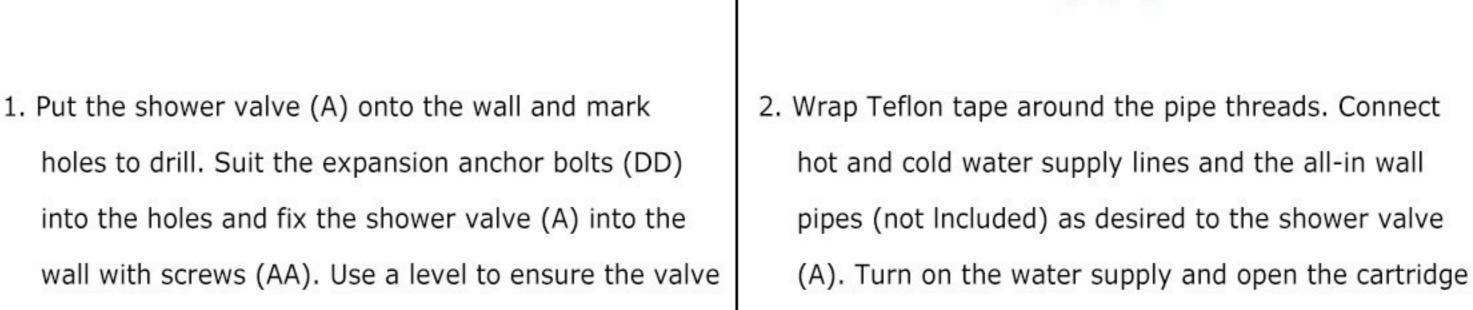

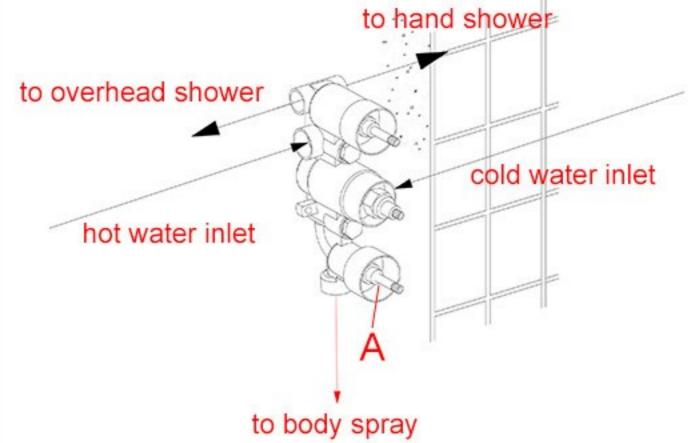

3. Remove the protective cover when the finished wall is completed and install the escutcheon (B) onto the valve (A) and press it against the finished wall. Then, install the handles (C), tighten set screw (BB) with Allen key (D) and put on the indication button (E).

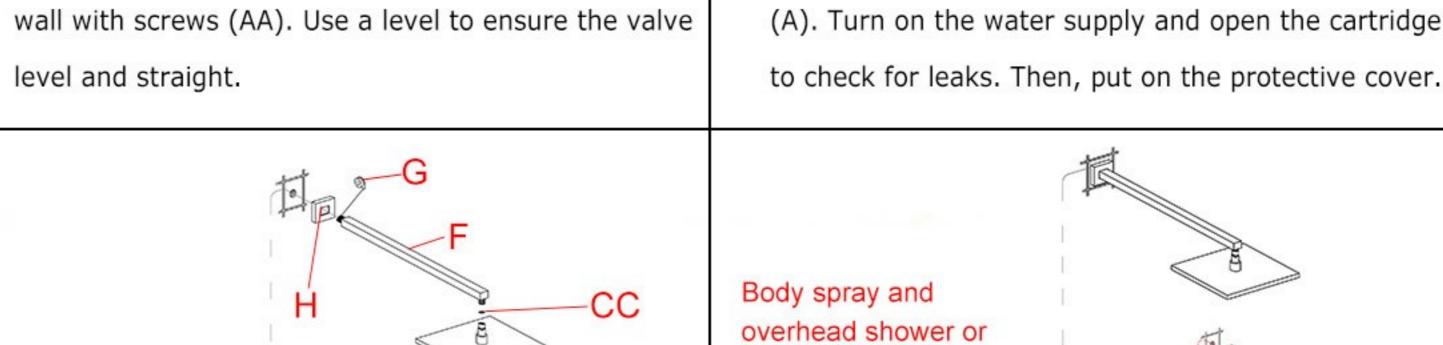

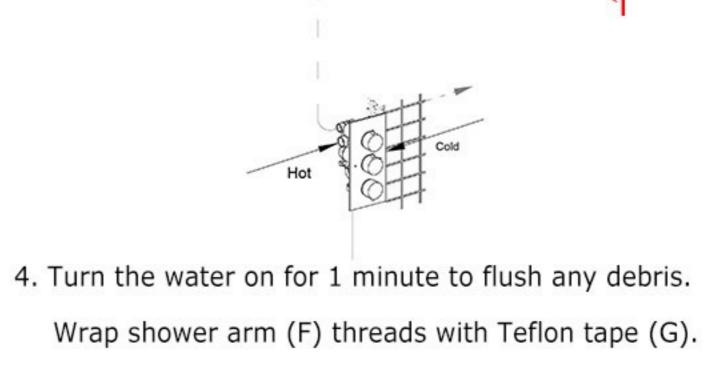


Install the shower arm (F) into shower outlet through

cover plate (H). Add a rubber washer (CC) and attach

shower head (I) to shower arm (F).



5. Attach the cover plate (H) to the body spray (J). Then apply Teflon tape (G) to the threaded tail pipe of the body spray (J) and screw the body spray (J) into body spray outlet. (Notice: A pressure-balancing loop (not included) must always be used with body sprays to allow for equal supply of water to each spray.)

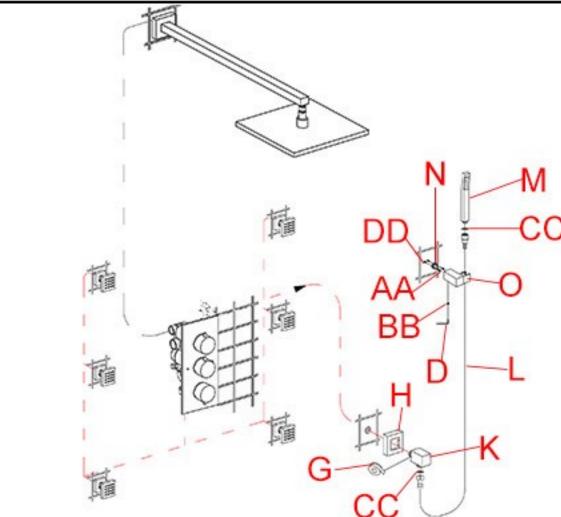

6. Wrap the threaded end of supply elbow (K) with Telfon tape(G). Put the cover plate(H) onto the hole and install the supply elbow (K) into the handshower outlet. Place rubber washers (CC) in both ends of the shower hose (L). Connect shower hose (L) to the supply elbow (K) and the hand shower(M). Mark two holes to drill and to suit the expansion anchor bolts (DD), and install the wall bracket (N) to the wall with screws (AA). Attach the hand shower holder (O) to the wall bracket (N) and tighten set screw (BB) with Allen key(D). Place the hand shower(M) on the holder

Troubleshooting

Problem	Possible Cause	Corrective Action
Water does not shut off	O-ring is not seated correctly or worn.	Reseat or replace O-ring.
completely.	2. Cartridge may be defective.	2. Replace cartridge.
Leaks at waterline connection.	Worn or broken washer.	1. Replace washer.
	2. Faucet body may be defective.	2. Replace faucet (contact us for the replacement).
Leaks from handle.	Cartridge may come loose.	Reseat cartridge tight.
	2. Cartridge may be defective.	2. Replace cartridge.
Leaks at hose connection. 1. Hose connection is loose.	1. Uses sempostion is lesses	1. Tighten hose.
	1. Hose connection is loose.	2. Replace hose.
Leaks at shower valve	Connection may come loose or not sealed completely.	1. Check connections.
connection.	Defective shower valve inlet or outlet connector.	Replace valve body.
Diverter knob does not work.	Diverter cartridge may be defective.	Replace cartridge.
LED light does not Light or		Replace LED spray head (for kitchen faucet).
1007 100 100 100 100 100 100 100 100 100	Defective LED generator.	Replace LED threaded pipe (for seperate faucet spout
noisy LED showerhead.		Replace LED generator (for others).
Low flow. 1. Check for water pressure problems. 2. Aerator may be dirty or clogged.	1 Chook for water process as a sable see	Clean or replace the aerator.
	######################################	Remove waterflow restrictor if available.
	2. Aerator may be dirty or clogged.	3. Install booster or pump (if applicable).