



Split Basin Faucet Installation


INSTALLATION MANUAL Tools You Will Need:

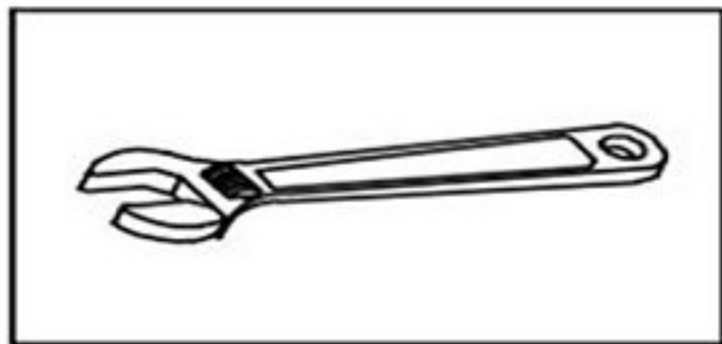

Adjustable Wrench

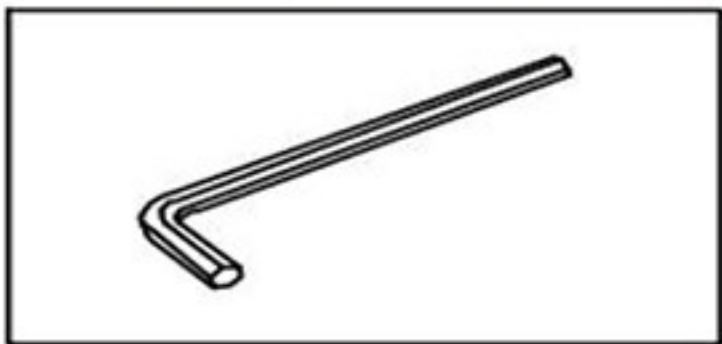

Hexagon wrench

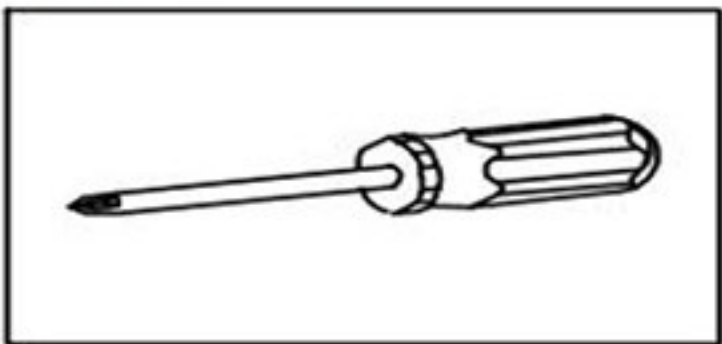

Philips Screwdriver


Before the Installation

1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. Shut off the main water supply prior to beginning installation.
4. Do flush the water supply lines to remove any dirt and debris before installation **(IMPORTANT)**.
5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance


1. Rinse with clean water and dry with a soft cloth.
2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
3. Do not use cloth with a coarse surface.

Parts List

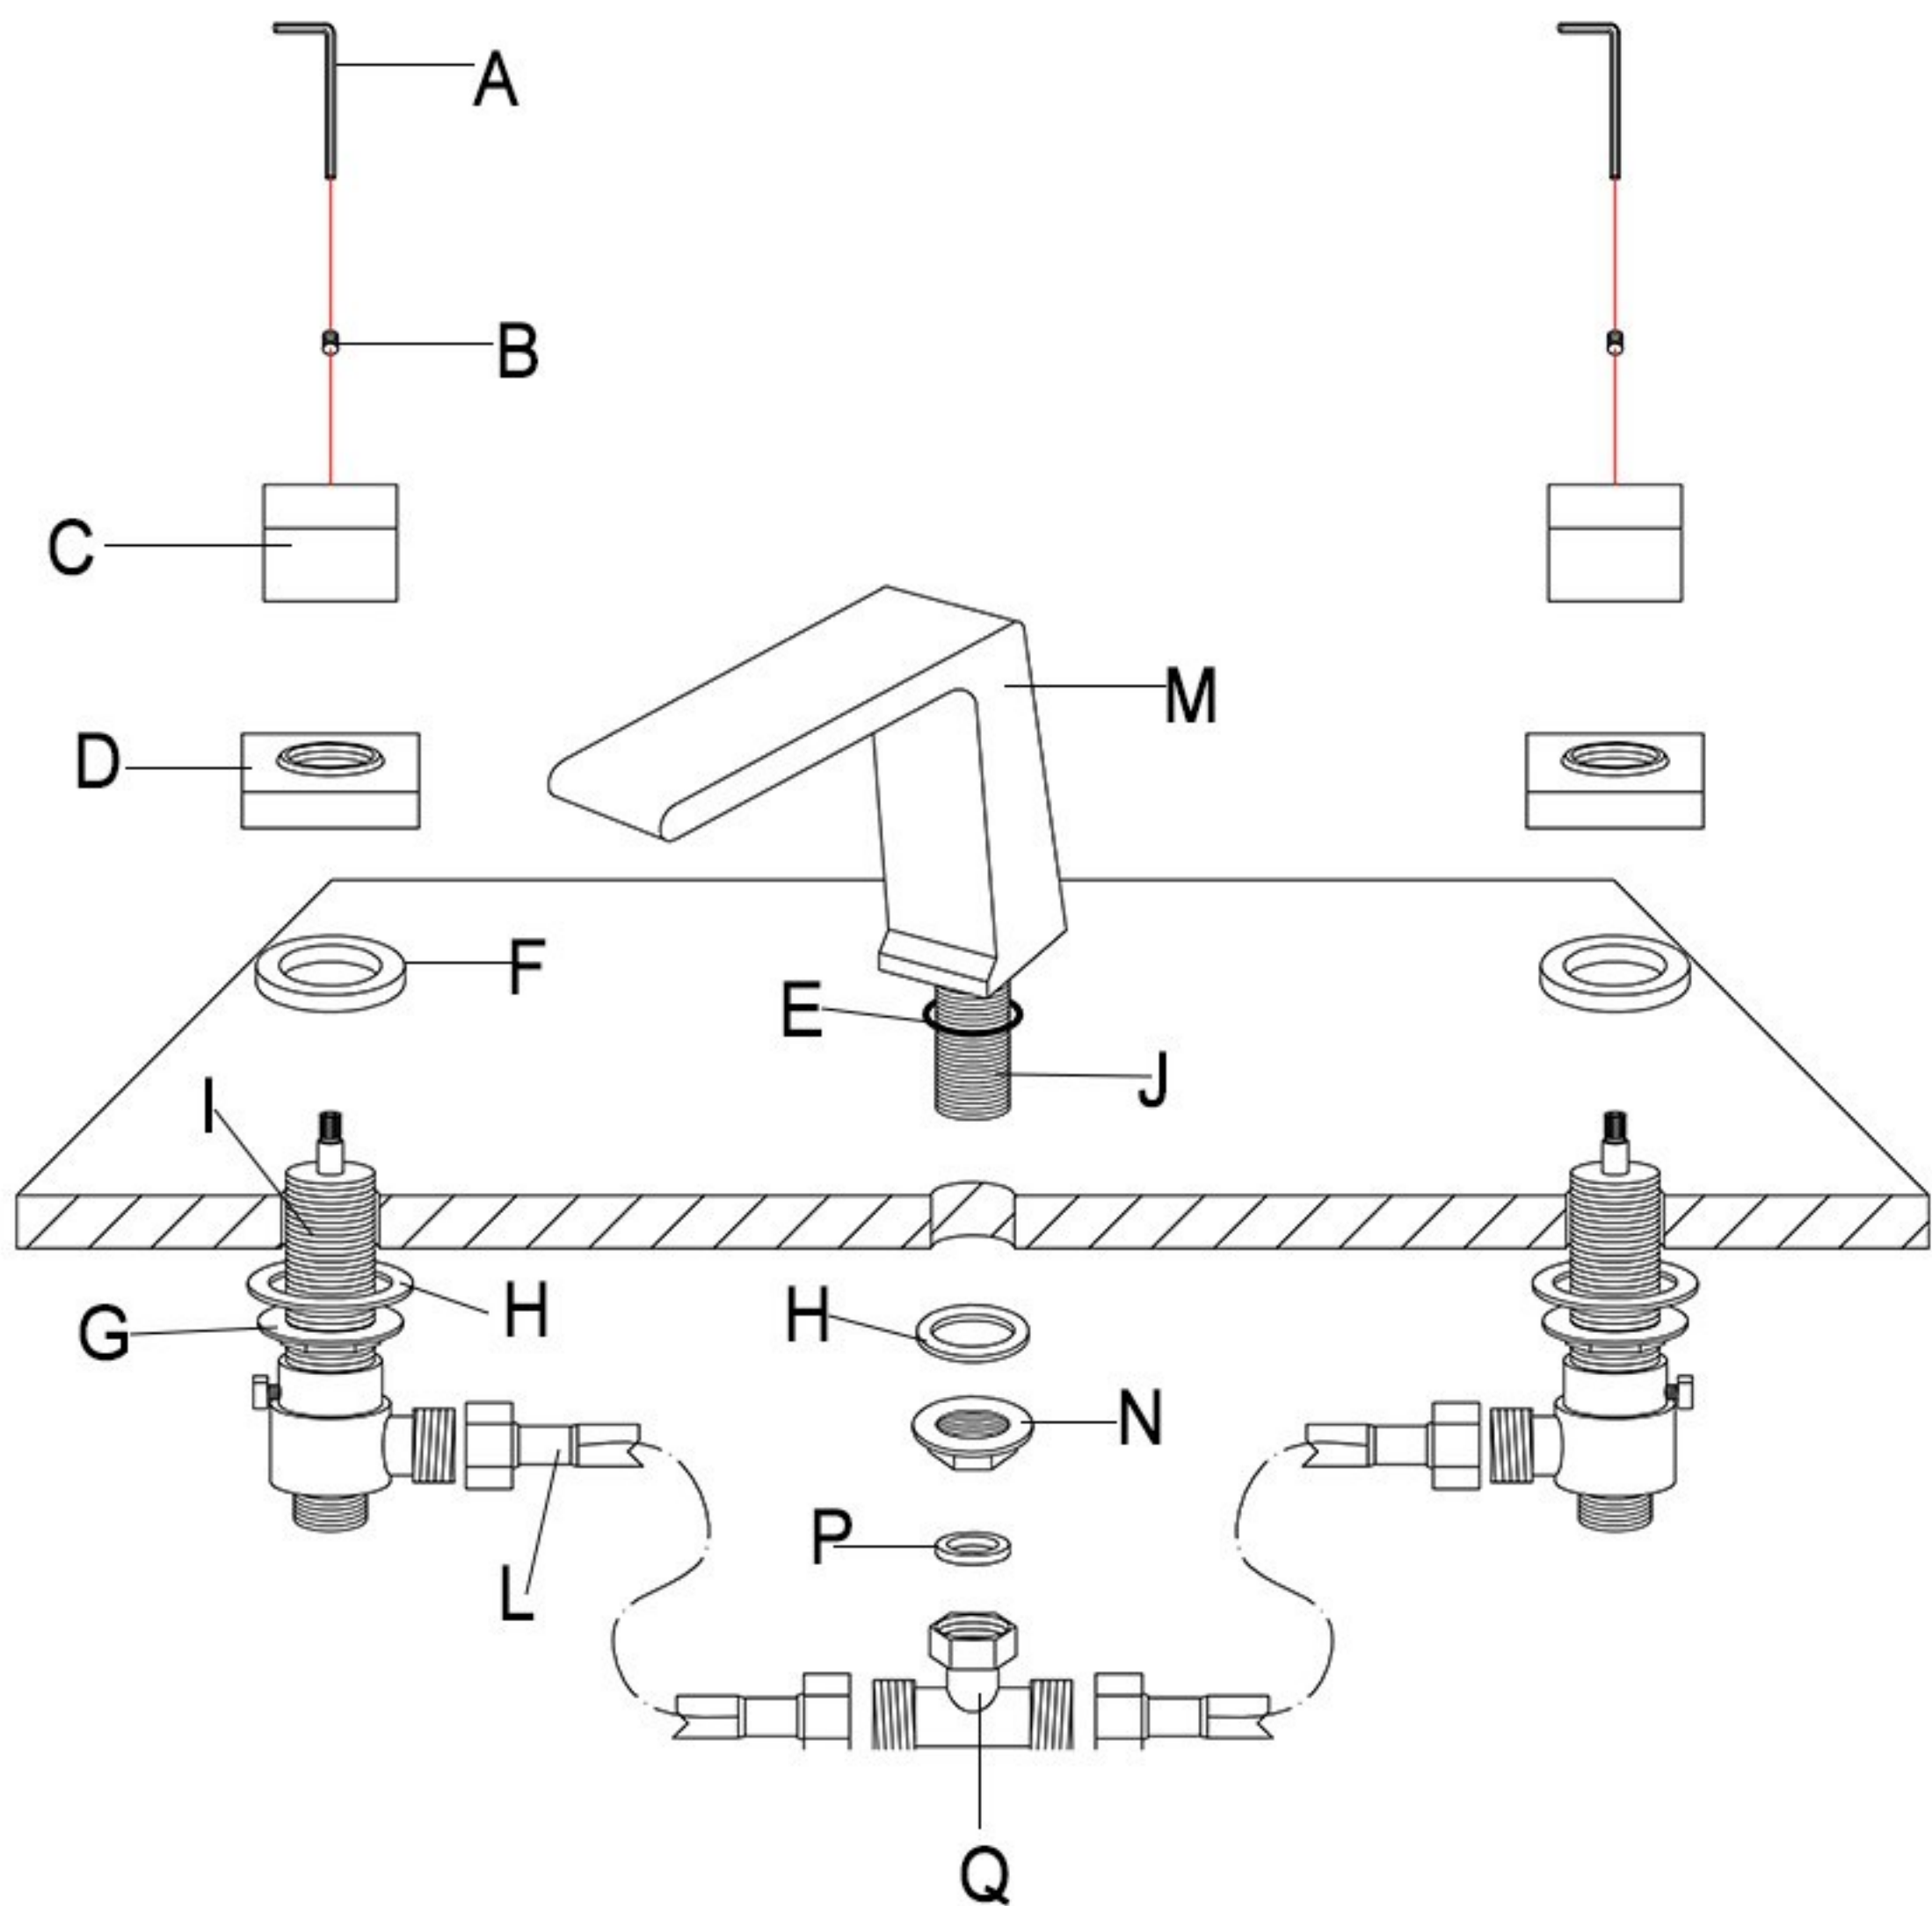


Part	Name	Quantity
A	Allen key	1
B	set screw	2
C	handle	2
D	base plate	2
E	O-ring	1
F	foam washer	2
G	metal washer	2
H	rubber washer (big)	3
I	cold/hot water valve	2
J	threaded pipe	1
L	hose	2
M	spout	1
N	mounting nut	1
P	rubber washer (small)	1
Q	triple tube	1


Installation Guide

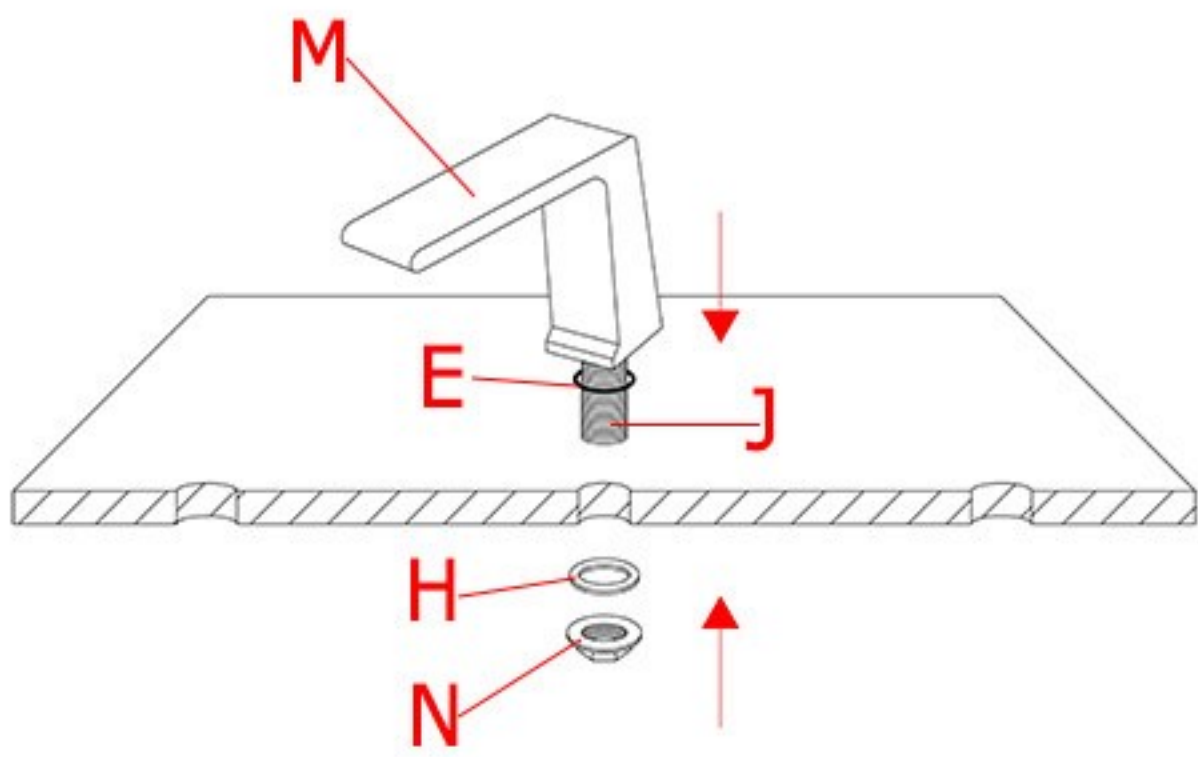


1. Remove the rubber washer (H) and mounting nut (N) from the threaded pipe (J). Put the O-ring (E) into the base of faucet body and insert the spout (M) into the hole on the countertop. After adjusting the position of faucet body, screw rubber washer (H) and mounting nut (N) onto the threaded part to secure faucet body.

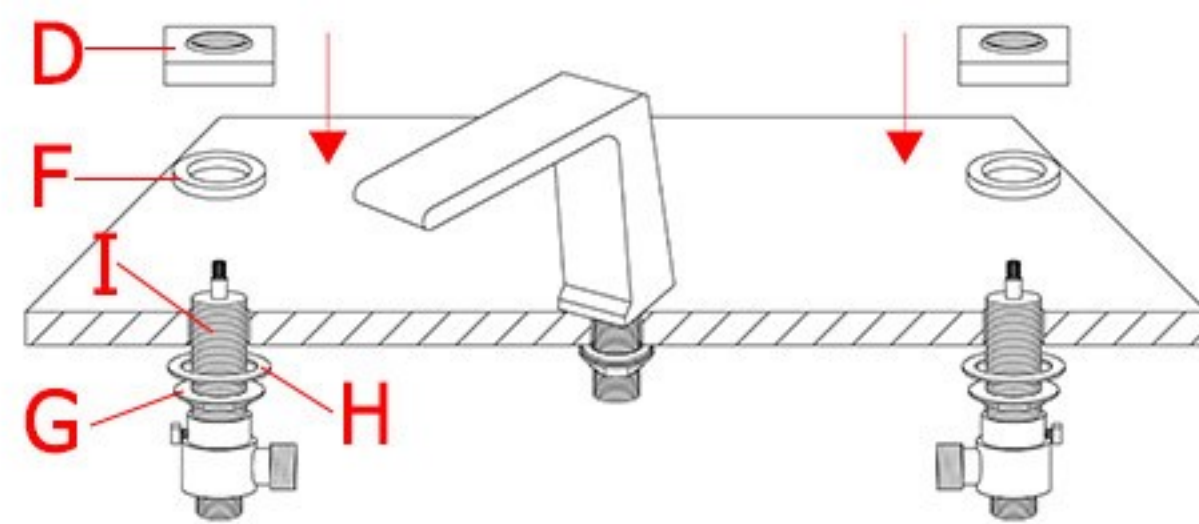


2. Remove the base plate (D) from the threaded part of the cold water valve (I). Fit the foam washer (F) to the bottom of the base plate (D) and insert the cold water valve (I) through the hole on the countertop from underneath the countertop. After adjusting the height of the cold water valve (I), screw back the base plate (D), secure with rubber washer (H) and metal washer (G). (The installation of the hot water valve is the same to that of cold water valve)

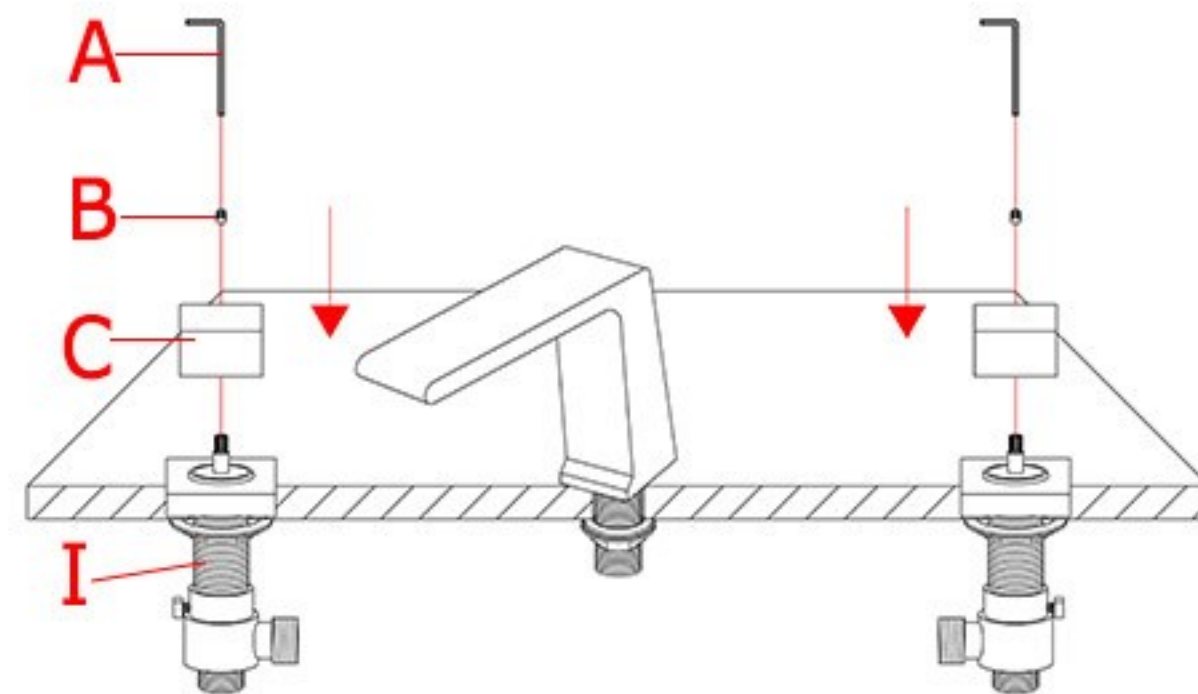

3. Fix the handle (C) to the cold water valve (I) by screwing the set screw (B) with Allen key (A). (The installation of the hot water handle is the same to that of cold water handle)

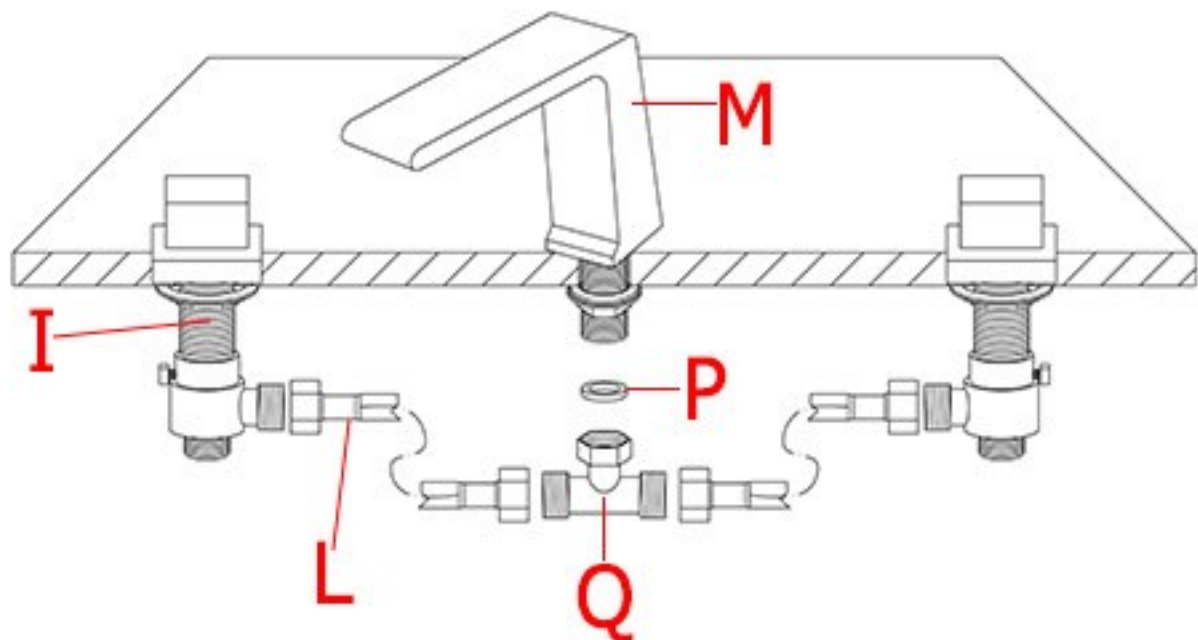

4. Install the triple tube (Q) to the spout (M) with the rubber washer (P). Connect the triple tube (Q) with hoses (L) to the cold water valve (I) and hot water valve (I).

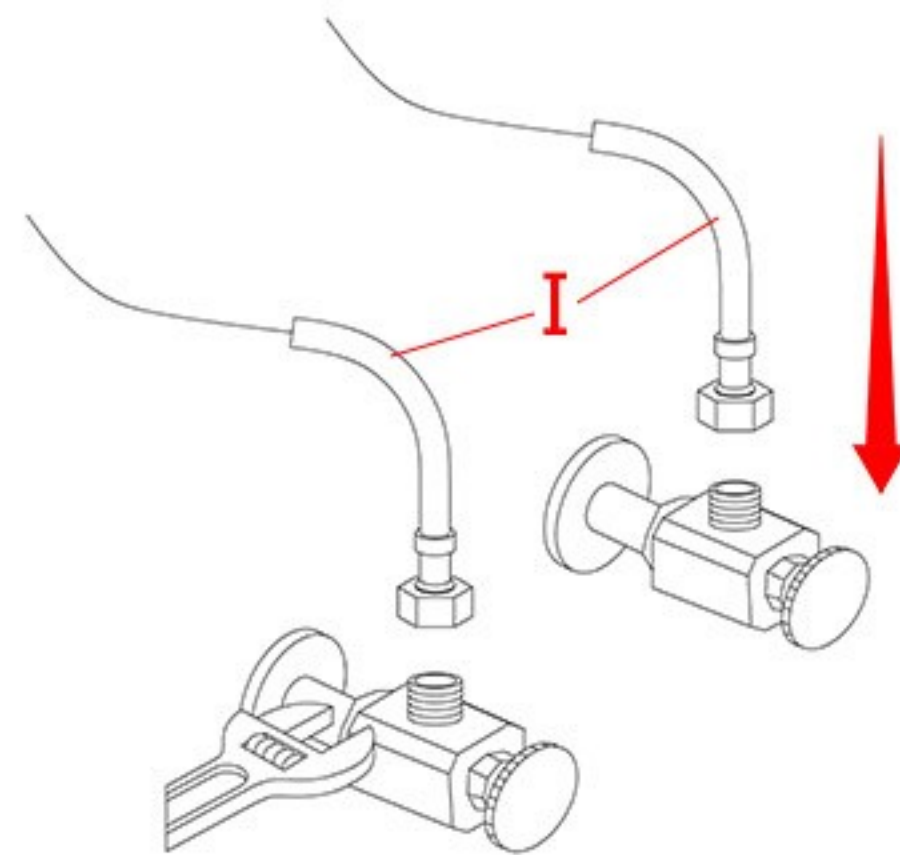

5. Connect hot and cold water supply lines (not included) to cold water valve (I) and hot water valve (I) respectively.

Troubleshooting

Problem	Possible Cause	Corrective Action
Water does not shut off completely.	1. O-ring is not seated correctly or worn. 2. Cartridge may be defective.	1. Reseat or replace O-ring. 2. Replace cartridge.
Leaks at waterline connection.	1. Worn or broken washer. 2. Faucet body may be defective.	1. Replace washer. 2. Replace faucet (contact us for the replacement).
Leaks from handle.	1. Cartridge may come loose. 2. Cartridge may be defective.	1. Reseat cartridge tight. 2. Replace cartridge.
Leaks at hose connection.	1. Hose connection is loose.	1. Tighten hose. 2. Replace hose.
Leaks at shower valve connection.	1. Connection may come loose or not sealed completely. 2. Defective shower valve inlet or outlet connector.	1. Check connections. 2. Replace valve body.
Diverter knob does not work.	1. Diverter cartridge may be defective.	1. Replace cartridge.
LED light does not Light or noisy LED showerhead.	1. Defective LED generator.	1. Replace LED spray head (for kitchen faucet). 2. Replace LED threaded pipe (for separte faucet spout). 3. Replace LED generator (for others).
Low flow.	1. Check for water pressure problems. 2. Aerator may be dirty or clogged.	1. Clean or replace the aerator. 2. Remove waterflow restrictor if available. 3. Install booster or pump (if applicable).