

## **Smart Toilet Installation Guide**

Intelligent toilet manual precautions for use

# Content

## Before Using

Safety Instructions.....	01
Precautions for Use.....	05
Parts Identification.....	07

## Toilet Installation

Installation Guidance.....	09
Installation Steps.....	10
Hose Connection And Installation.....	12
Remote Control Installation.....	13
Trial Run.....	13

## Instruction for Use

Side Control Panel Instruction.....	14
LED Display Screen Instruction.....	14
Remote Control Instruction.....	15
Usage Instruction.....	16
Automatic Sensing Function.....	17
Advanced Function.....	18





## Appendix

Remote Control Battery Replacement.....	18
Backup Battery Replacement.....	19
Usage Instruction.....	20
Fault Judgement And Solutions.....	21
Daily Maintenance.....	23
Technical Support.....	24
List of Materials.....	25

## Safety Instructions

Please read the safety instructions carefully before using.

The precautions listed here are important in relation to safety and should always be strictly observed.

The meaning of the diagram is as follows		Examples and descriptions of the Diagram	
	<b>Caution</b>		<ul style="list-style-type: none"> <li>It means prohibition.</li> <li>The left diagram indicates "Disassemble prohibited"</li> </ul>
	<b>Note</b>		<ul style="list-style-type: none"> <li>It means that it must be observed.</li> <li>The left diagram indicates "strictly abide by"</li> </ul>

## Caution



**Do not spray water or detergent on the main body or electronic plug**

No sprinkling

- May cause fire or electric shock.
- May cause breakage or damage to the toilet seat or water seepage in the room.

This product belongs to electronic products, please do not install the product in an easily splashed or humid place. Please install an exhaust fan and other exhaust equipment to ensure unobstructed air flow in the bathroom

- Otherwise, it may cause a fire or an electric shock.

**Please set the socket for power wiring as follows**

- If the wiring is not as follows, it may cause a fire or electric shock.

a. Please use high inductance, fast type leakage switch ( rated induction current below 10mA) or protect with insulated transformer ( above 1.5KVA, below 3KVA) for the circuit of socket.

b. The installation position of the socket must be more than 0.3m from the ground and as far away from the bathtub as possible.

The grounded wire equipped with the product must be grounded, please be sure to connect to the ground wire

- Otherwise, it may cause an electric shock.

**Note:** The grounding treatment mentioned here means that the grounding resistance is below 4Ω protective earthing, and the grounding wire uses copper wire of 1.6 mm or more in diameter.

**When using in the bathroom**

**Please make sure power supply and the plug is sealed with silicone to prevent the water**

- Otherwise, it may cause a fire or electric shock.

## Caution



Do not use in humid places

**Do not install this product in humid places such as Shower room. (Prevent water from entering electronic components)**

- May cause a fire or electric shock.



Disassemble prohibited

**Never disassemble or repair or modify by yourself**

- May cause a fire or electric shock.



Prohibition

**Malfunctioning products are forbidden to use**

- Under the following circumstances, please unplug the power supply and close the water valve to stop supplying water.

Fault refers to:

- The main body or water pipe leaks water.
- The product is cracked or damaged.
- There is abnormal noise or peculiar smell.
- The product smokes and abnormally hot.
- Toilet blockage.

- Fault products are forbidden to use, otherwise, it may cause a fire or electric shock and even indoor water seepage, etc.



Prohibit the touch with wet hands

**It is forbidden to plug or unplug the power supply with wet hands**

- May cause an electric shock.



Prohibition

**Do not damage the power cord and toilet connection line**

It is forbidden to pull, modify, heat, twist, place heavy objects on the power cord and toilet connection line.

- Damaged products are forbidden to use, otherwise, it may cause a fire or electric shock or short circuit.



Prohibition

**Do not use loose or shaking power outlets**

- May cause a fire or electric shock.



Prohibition

**Water except for tap water and potable water is forbidden to use**

- May cause skin inflammation.



Prohibition

**Do not use the multi-socket socket**

- Please do not connect the wire or use the extension cord when using, it may lead to heat and cause a fire and electric shock.

## Caution



Required

**Attention to prevent low temperature burns**

- Please adjust the seat temperature to normal level when sitting for a long time.
- Please adjust the seat temperature to the normal stage, the wind temperature to the low level, when the following people use "thermal seat" and "warm air drying" functions.

- Children, the elderly, and other users who cannot adjust the appropriate temperature by themselves.
- People with walking problems such as the sick and disabled.
- Sleepy people who took medicines, sleeping pills, cold medicines, etc., with sleepy side effects, drank too much, got overtired, etc.

## Caution



### Do not keep cigarettes and other burning stuff nearby

- May lead to a fire.



### It is forbidden to put your fingers or sundries at the warm air outlet It is forbidden to touch the warm air outlet with hands or cover it with cloth

- May cause burns, electric shock, fire.
- Please be careful when children and the elderly using.



### Do not apply force, stand on the seat ring, the flip lid or the main body, and heavy objects are forbidden placed on it

- May cause product to crack, the main body to fall apart, the person to be injured.
- Toilet may be damaged and indoor water seepage will occur.



### Use diluted kitchen detergent (neutral) to clean. Avoid these products:

(toilet cleaner, detergent, petrol, banana water, cleaning powder and nylon brushes, etc.)

- May damage and crack the plastic, deforming and cracking it and causing personal injury.
- May damage water pipes and cause water leakage.




### When opening the water inlet angle valve, do not remove, or rotate, open the water filter net

- May cause water leakage.



### Do not bend or damage the water filter screen

- May cause water leakage.

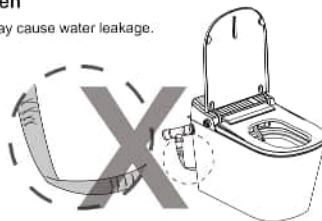

### Do not flush any sundries except excrement and toilet paper

- May cause the water closet to be blocked and the sewage will leak out of the room.



### Disconnect the power plug for a long time of not using.

Required



### Close the water angle valve to stop supplying water when water leaking

Required



### Prevent damage caused by freezing

- May cause damage to the water inlet configuration and the interior body, and leakage may occurs.



### Tighten the water filter net when installing

Required

- Otherwise, it may cause water leakage.

Please implement warming, to raise the rest room temperature



### Make sure the power plug in

Required

- Ensure the power plug is plugged in before using, and the plug and socket fit closely without looseness or incomplete insertion
- Otherwise, it may cause a fire due to heat.
- Disconnect the power plug for a long time of not using.



### When the toilet is blocked, unplug it and use a commercially available pipe unblocker to remove the blockage

Required


- Otherwise, it may lead to sewage leakage and indoor water seepage when automatically cleaning.



### Do not install it in a place directly exposed to light

Required

- May cause discoloration, aging, and deformation.

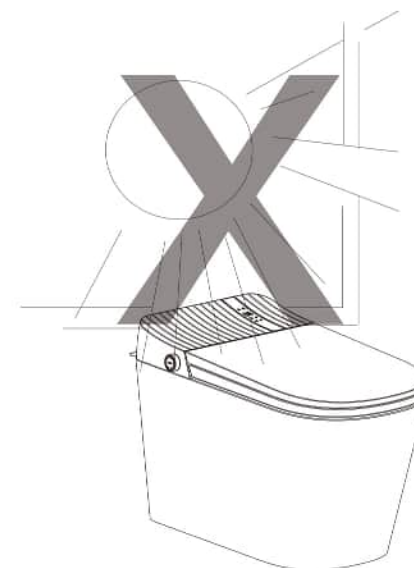

## Precautions for Use

### Cleaning Mistakes

Do not wipe the main body with hard and coarse cloth or tools to avoid scratching.



Avoid directly washing with water



### Daily Maintenance

Avoid splashing urine on the main body or spray nozzle.



Pull out the power plug during the thunder storms.



### Improper Operation

Shall not cover the seat sensor, human infrared sensor, and the transmitting signal and receiving signal of the remote control.

- May cause the smart toilet misoperation.

Keep away from the main body when using the radio, etc.

- The radio may be garbled

### Do Not Lean Back On The Flip Lid

- May cause crack.

### Put Away The Child's Seat Placed On The Seat After Using

- May cause some functions unavailable.

## Precautions for Use

Take anti-freeze measures to prevent freezing damage during the freezing night in winter.



Do not put heaters near the main body.

- May cause discoloration or malfunction.



Do not roughly open the seat ring or flip lid

- May cause crack or malfunction.





## Parts Identification



## Main Functions


Feminine Cleaning	Bowl Cleaning	Warm Air Drying
Nozzle Adjustment	Water Pressure	Flushing
Water Temperature	Air Temperature	Seat Temperature

## Humanized Functions

Self-Clean	Night Light	Child Mode Cleaning
Remote Control	Automatic Lid Open	


## Humanized Functions

Earth Leakage Prevention	Fireproof	Antibacterial
--------------------------	-----------	---------------

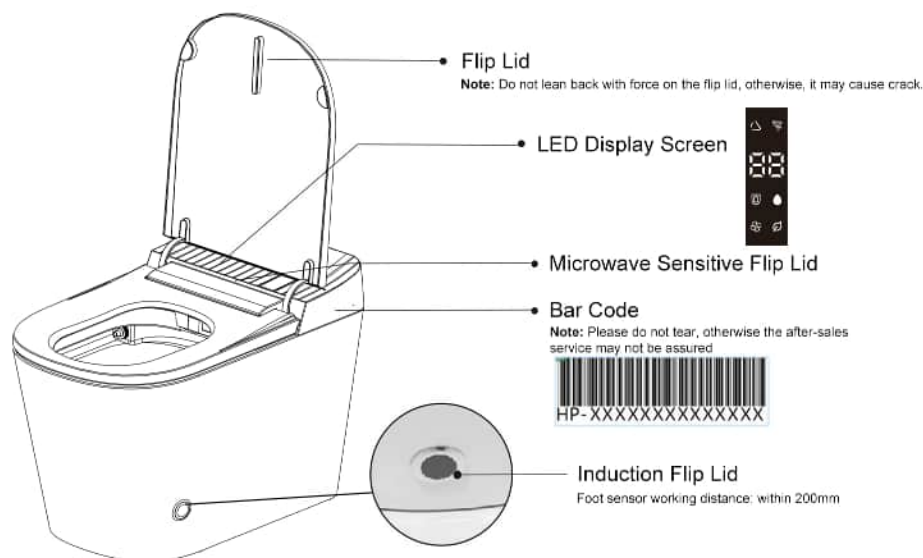


## Installation Guidance

### List of Materials

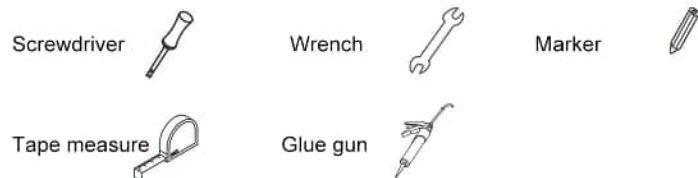

### Installation drawings

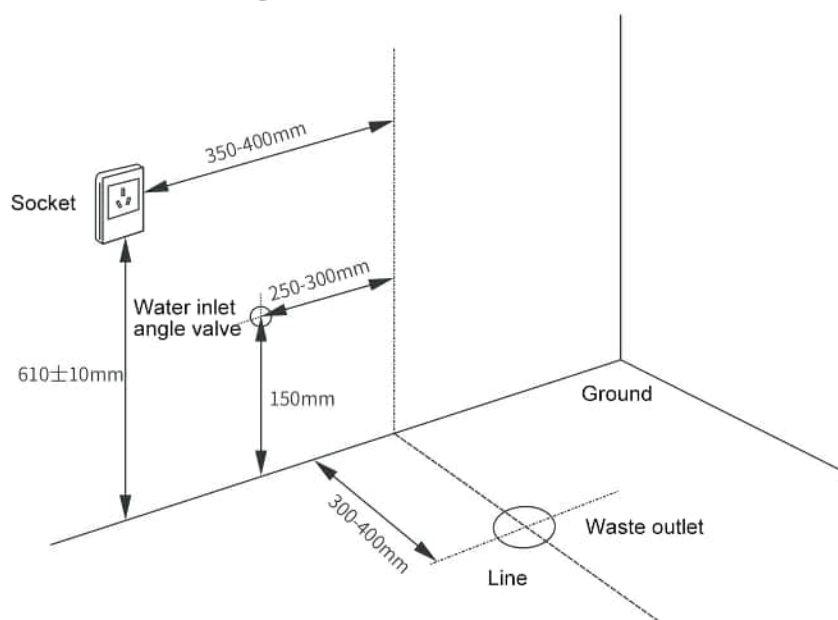


### Caution

#### Please set the socket as follows

1. Ensure the socket properly grounded.
2. The power cord length is 1.5m and be located close to the socket, convenient to install and remove, and as far away from the bathtub as possible.
3. Use waterproof socket and don't use extension power cord to connect.  
- May cause a fire or electric shock.

## Size Drawings

unit: mm

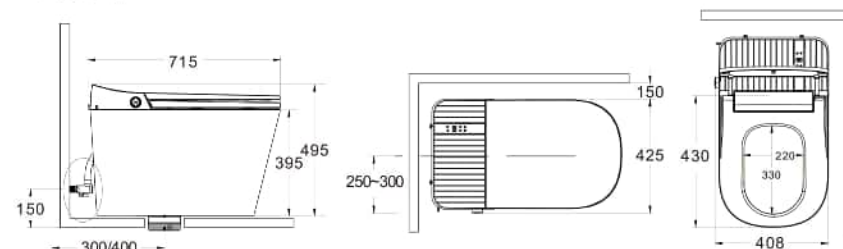

### Notice before installation


1. Test water pressure: more than 1.32 gallons within 15 seconds.
2. Before installation, turn on the water pipe for 2 minutes and then connect to the inlet pipe.



## Installation Steps


1. For the bathroom newly installing a toilet, a wax ring with bolt shall be added.

**Note:** You need to purchase your own wax ring according to the size and position of the two bolt holes at the bottom of the ceramic.  
See Figure 1

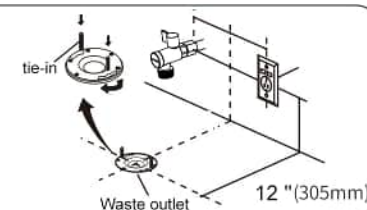


2. Lift the flip lid assembly from the toilet, up from the inside.


**Note:** Do not pull the lid roughly when lifting the toilet flip lid

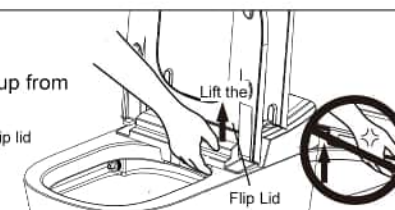

3. Install a wax ring under the toilet.

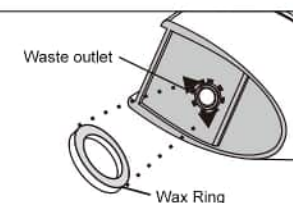


4. Attach the toilet to the wax ring, making sure the bolts line up with the holes in the toilet.  
(from the top)

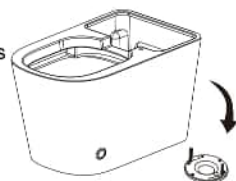


5. Use a wrench to lock the nut and other accessories to the retaining bolts.  
(from the top)


Nuts  
Gasket  
Plastic screw washer

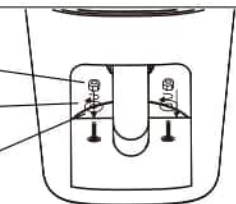


6. To install seat ring and toilet main body: the seat ring positioning hole shall be aligned with the ceramic body positioning column. Then in the seat ring's horizontal state, the hands pressure the back part of the seat ring, so that it can be completely installed.

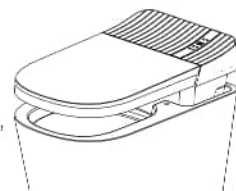

 7. Install the water inlet angle valve and connect the dedicated hose (before connecting the dedicated hose, please discharge water in the hose for 3-5 minutes, ensuring it is clean and that the water inlet angle valve is not blocked)



8. Apply the anti-mold sealant at the contact between the toilet and the ground. After the sealant has solidified, plug in the power supply, slowly open the water inlet angle valve. Adjust the water pressure to within 7.5 kg, and check the sealing of the connection points.

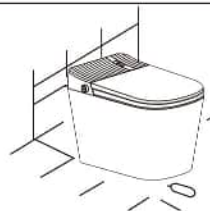


#### Note

1. Smart toilet accessories have been commissioned, personal disassembly is strictly prohibited. Please use the fittings and hoses provided by our company. Old fittings and hoses cannot be reused. If have any questions, please contact local retailers or our after-sales service department.

2. All contents of this instruction manual are based on the latest conditions at the time of printing. We reserve the right to make changes without further notice.


## Hose Connection And Installation

1. Install the new water inlet angle valve, connect the dedicated hose - end to the angle valve, and the other end to the filter housing.
2. Plug in the power supply, adjust the angle valve to control the water pressure within 7.5kg.

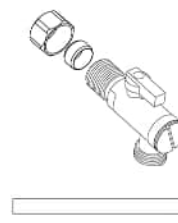

Remove the old water inlet angle valve and replace it with the new one

old water inlet angle valve

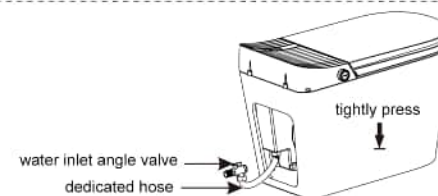


**Note:** The hose shall not be folded, otherwise it may cause the water pressure too low to operate the toilet.

new water inlet angle valve

#### Note:

This product uses super vortex siphon jet flushing technology. There will be a little splashing and excessive jet noise when working. You can slowly adjust the angle valve to the right to reduce the water pressure so flushing can work properly.

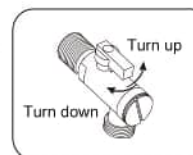


Adjust the angle valve

#### Note:

1. In case of power failure during the cleaning process, please close the angle valve and stop the water supply. The function can be normal after the self-test when the power comes in.

2. Installation shall use the new hose assembly that comes with the apparatus and other parts specified in the apparatus. The old hose assembly cannot be reused, otherwise it may cause water leakage.

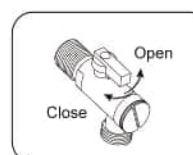


Turn off the angle valve



## Remote Control Installation

### Installation Method

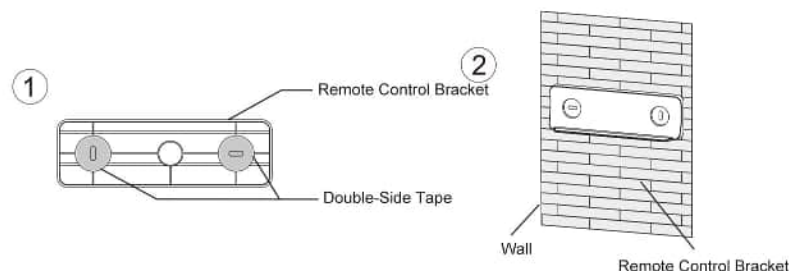

#### Note:

1. Clean the installation area before taping. Press the tape firmly and evenly when applying. Can be used after 15 minutes.
2. Double-side tape is suitable for tile-type flat walls, not for wallpaper-type walls.

## Trial Run

### 1. Seating Sensor

The picture shown is the seating sensor area. The rear/front wash and , drying function are set to work only when the seat is seated. You could test it with sitting on the seat or cover the seat sensor with hand palm or a piece of wet cloth. When the seat sensor detects that it's seated, the buzzer will beep once to react as the above function are ready and available. Most model of the smart toilet would give a small flow of flush to prevent objects from sticking on the inner bowl. When the sensor detects it's no longer seated, the buzzer will also beep once and carry out the standard flush automatically.



### 2. Check Fundamental Functions

When the seat is seated and the toilet react with one beep, spin the side knob to turn on the "Feminine Cleaning" or "Bowl Cleaning" function.




### 3. Check the Drying Function

When the seat is seated and the toilet react with one beep, long press the side knob to turn on the warm air drying function.




## Side Control Panel Instruction

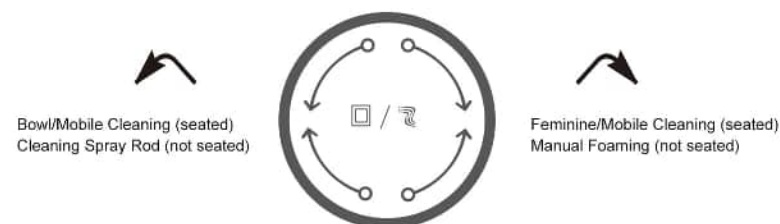


Knob Forward: Feminine Cleaning/Mobile Cleaning (seated), Manual Foaming (not seated).  
Knob Back: Bowl Cleaning/Mobile Cleaning (seated), Cleaning (not seated).  
Click Center Area: Drying/Stop (Seated).  
Click Center Area: Flush (not seated) Power Failure Flush.

## LED Display Screen Instruction

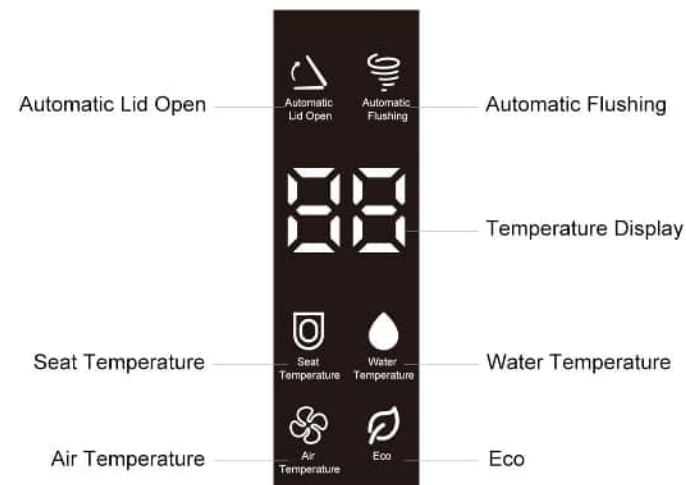

## Remote Control Instruction

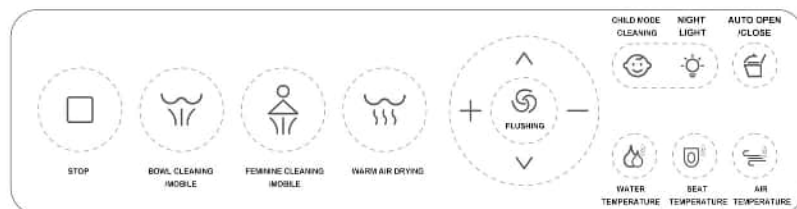

### Notice: Remote Control pairing

The remote control pairing method: Long press the "Warm Air Drying" button on the remote control, until all three lights go on at once. Power on the toilet, It will beep which means pairing successfully.

## Usage Instruction



Stop

### Stop

Press this button to end the current running function and enter the standby mode.



Bowl Cleaning /Mobile

### Bowl Cleaning/Mobile

When seated, press this button to start the bowl cleaning function, the default is mobile cleaning. The water column moves back and forth to achieve the massage effect, the cleaning mode will automatically end after 90 seconds and the nozzle will start self-cleaning. Press this button again to end bowl cleaning, and water column fixed position cleaning; Tap again to start mobile cleaning mode.



Feminine Cleaning /Mobile

### Feminine Cleaning/Mobile

When seated, press this button to start the feminine cleaning function, the default is mobile cleaning. The water column moves back and forth to achieve the massage effect, the cleaning mode will automatically end after 90 seconds and the nozzle will start self-cleaning. Press this button again to end feminine cleaning, and water column fixed position cleaning; Tap again to start mobile cleaning mode.



Warm Air Drying

### Warm Air Drying

When seated, press this button to start the warm air drying function. Use toilet paper to absorb water droplets before drying after blowing for 180 seconds to speed up the drying effect.



Flushing

### Flushing

Press to flush the toilet once (Pressing this button again while the toilet is flushing will not work)



### Cleaning Pressure Strength

The cleaning force can be adjusted according to the different cleaning water pressure of each person. Short press the remote control water pressure adjustment "+" "-" button and the buzzer buzzes, can adjust the cleaning water pressure in the bowl cleaning/feminine cleaning mode. The water pressure is set up in 5 gear, press the "+" or "-" button, and the water pressure increases or decreases one gear.



### Cleaning Position

Due to the different sitting positions of each person, the cleaning position can be adjusted. Short press the remote control "∧" and "∨" buttons to adjust the position, the buzzer buzzes, and the nozzle position in the bowl cleaning/feminine cleaning mode can be adjusted. There are 5 positions in the nozzle, press "∧" or "∨", and the tube moves forward or back one gear.



Child Mode Cleaning

### Child Mode Cleaning

Press this button to start the children's cleaning mode, and the toilet automatically sets the water temperature, seat temperature and air temperature to the lowest gear.



Night Light

### Night Light

Press this button to on/off the nightlight function.



Open Lid/ Seat Ring

### Open Lid/Seat Ring

Close Lid/Seat Ring Command: Hold down for 3 seconds when the device is on.

1. Lid Open /Seat Ring Close : Long press 3 seconds to close the seat lid;
2. Lid Open /Seat Ring Close : Long press for 3 seconds to start automatic flushing, while closing the ring and lid.
3. Click the first time to open the lid automatically;
4. Click the second time to open the seat ring automatically;
5. Click the third time to perform the function the lid/seat ring will close automatically 30 seconds after the human body leaves.



Water Temperature

### Water Temperature

Press this button to adjust the cleaning water temperature, 4 cycles can be adjusted: 0 (—); 1 (about 34 °C); 2 (about 37 °C); 3 (about 40 °C).

## Usage Method



Seat Ring  
Heating

### Seat Ring Heating

Click to adjust the cleaning water temperature, 4 cycles can be adjusted: 0 (—); 1 (about 34 °C); 2 (about 37 °C); 3 (about 40 °C).



Cleaning Water  
Temperature

### Cleaning Water Temperature

Click to adjust the temperature of the toilet seat, 4 cycles can be adjusted: 0 (—); 1 (about 34 °C); 2 (about 37 °C); 3 (about 40 °C).



Drying Air  
Temperature

### Drying Air Temperature

Click to adjust the warm air drying temperature, 4 cycles can be adjusted: 0 (—); 1 (about 45 °C); 2 (about 50 °C); 3 (about 55 °C).

## Automatic Sensing Function



Microwave  
sensing flip lid

### Microwave Sensing Flip Lid

When the human body reaches the sensing area, the flip lid will be opened automatically. If the toilet is opened without operating any function, the flip lid will be automatically closed in 90 seconds.



Foot sensing

### Foot Sensing

If the foot gets close to the sensing area for the first time, the flip lid will be opened automatically. For the second time, the seat ring will be opened. For the third time, the seat ring will be closed and the flip lid can only be closed by remote control instead of the "foot sensing" function. If the seat ring is opened and no other operation is performed, the seat ring will be automatically closed after 1.5 minutes.

## Remote Control Battery Replacement


When the battery runs out, the remote control maybe insensitive or out of control occasionally. Please replace the alkaline batteries immediately.



### Note

The polarity of battery must be put in the right position and the compression spring extends from the negative pole.

- New and old batteries should not be mixed.
- Please use alkaline batteries.

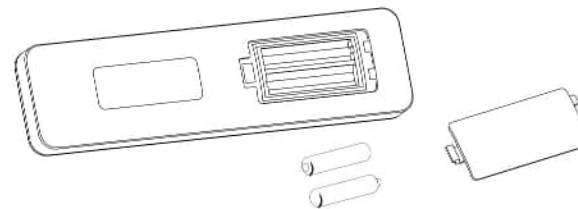


**Note:** Remote control with batteries. Please appropriately store it in a location that is out of reach of young children.

## Backup Battery Replacement

### Steps

1. Unplug the power outlet.
2. Lift the toilet flip lid.
3. Find the external battery box.
4. Unplug the old battery and plug in the new one.
5. Press the "Flushing" button to ensure appropriate flushing.
6. Put the cover back on the toilet.

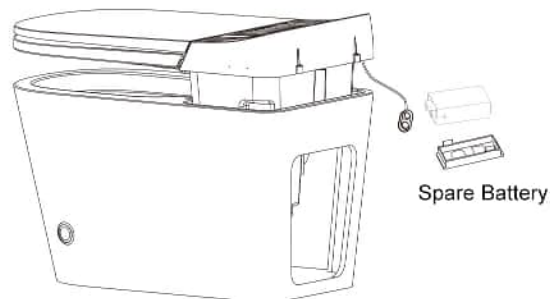

### Note

1. The backup battery must be the 9V alkaline batteries. Do not use carbon or other batteries.
2. If the battery is low or not installed, it will cause an abnormal flush. And the flush function will be abnormal even if the power is off.
3. Recommend checking the 9V backup battery and replacing it with a new one every two years.
4. Please replace the old battery and recycle it appropriately.

## Usage Instruction

### Water Amount And Temperature

Due to the storage water heating mode, the water temperature will not decrease when cleaning for a long time. Although the water temperature may fluctuates, it doesn't effect the normal use.

#### Water Amount

Cleaning water will be controlled according to original setting temperature.

Normal: spouting water without heat.

Low: about 34°C

Medium: about 37°C


High: about 40°C

Heating time depends on external water inlet temperature.



### Installation with the Seat Sensor

When you are not seated and accidentally press the button, the spout will not operate due to the seat sensor. All cleaning functions will not be set when not seated.

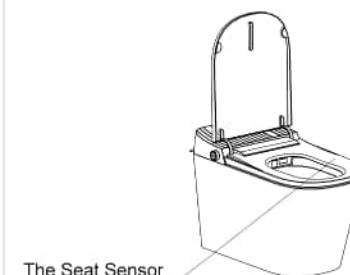

#### The seat sensor will not work if the following conditions occur:

- ✘ The human body does not sit on the seat ring.

#### Environment usage instruction:

It is recommended that there should be no obstacle within 1.5m of the toilet, otherwise it will cause the flip lid to make wrong instructions.




## Fault Judgement And Maintenance

### Fault Judgement And Maintenance

Symptom	Inspection Method	Countermeasure
Does not start at all	Whether there is a power outage or the power outlet is not connected	Please make sure to insert the power plug Please unplug and plug in again
	Check whether the leakage protection power cord indicator is on	No. Please check the circuit to ensure that the external power supply is normal.
No water supply or weak water spouting	Whether water is stopped or the water supply valve is closed	Please check the water source and open the water supply valve
	Whether the water supply filter is blocked	Please clean the filter
	Whether the nozzle is clogged with scale	Please clean the nozzle with a toothbrush
	Whether the water pipe is bent	Please smooth the water pipe
	Check whether the cleaning water pressure is set at the appropriate level	Refer to the manual to adjust the water pressure level.
The Nozzle drips usually	Whether there is no water dripping after closing the angle valve	Clean the angle valve filter net or replace the solenoid valve
Leak	Whether the water pipe connection part is tightened	Please tighten the water pipe connection
Water temperature/ Cool seat	Whether the water temperature and cover temperature are adjusted to normal temperature	Please readjust the temperature
Unable to use the wash and dry function	Check whether you sit in the seat sensor area	Yes, it still cannot be used, the seat sensor is faulty, replace the seat ring.
Cold air drying	Check that the heater is set to normal temperature	Refer to the manual to adjust the air temperature level
	Whether the heater element is damaged	Replace drying components
Abnormal flushing /the sewage discharging does not work	Put around 2.1 Gal(8L) water into the toilet to check whether the sewage drainage pipe is blocked	If the sewage in the toilet cannot be discharged quickly after pouring water, the sewage drainage pipe may be blocked. Please clean the drainage pipe.
	Check whether the external water pressure is too low	Waiting for water supply to be restored
	Check whether the angle valve filter net is clogged	Clean angle valve filter net
Normal water pressure with incomplete flushing	Check whether the sewage outlet is leaking	Install it again
	Check if the S trap is blocked	Please use the plunger and other dredging tools to deal with it
Normal water pressure with no flushing action	Whether the mainboard makes a beep sound when pressing the flush button	Yes. Replace the pulse valve and other flushing parts
		No. Replace the mainboard or remote control and other related parts
Remote control cannot display	Low battery power	Please replace the battery with a new one
	Recheck the code	Please refer to page 15 about remote control pairing.
	Check whether the remote control indicator is dimmed or off	Replace and install the new battery correctly
The seat cover/ring closed too fast	Whether the seat cover/ring is restored to normal after being opened	No. Replace damping components
Each function cycle runs in order	Check whether to enter project debugging mode	Power on the toilet after plugging out for 1 minute

### Remote Fault Diagnosis

Operating through the toilet side button, you can check whether the flushing function and the trial run work appropriately. (Start the cleaning and drying function after seated)

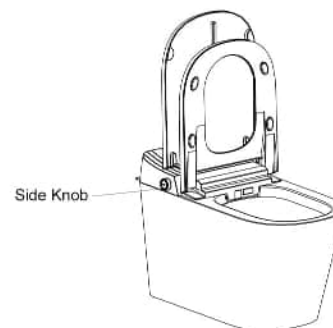

### Emergency Fault Judgement

Under no water supply circumstance, put around 2.1 Gal(8L) water into a barrel and flush the bowl of ceramic.

**Note:** Avoid water spilling from bowl.



### When the product is left unused for a long time

- Especially in winter when no one at home for a long time, please drain out the water inside the tank and the pipe to prevent freezing

### To Discharge Water

1. Unplug and cut off the electricity.
  2. Unscrew the hose connector off angle valve, drain the water in the pipe and reinstall.
  3. Handle the remaining water in ceramic body.
- It is suggested to put some antifreeze into water inside the ceramic body.

**Tips:** Make sure to turn on water angle valve and power supply when you use the toilet again.



**Note:** Before water discharging, the power must be cut off!





## Daily Maintenance

### Main unit care and maintenance

1. Wipe the surface with a sponge or soft damp cloth or neutral detergent cloth.

2. **Note:** Do not use thinners, light gasoline, detergents, chemicals, etc. to wipe. Do not spray insecticides, aromatics, deodorants, etc.

**Note:** The material of the product is new plastic material, which is not discolored. Most of the discoloration phenomenon is oxidation reaction. Product contact with perfume, toilet cleaner, nail polish and other liquids, if not wiped off in time will cause product surface oxidation.


Some users may place a seat cushion on the seat ring with a heating function. Generally, the cushion and the contact surface of the seat are non-slip rubber, once heated, it is easy to cause the seat in contact with the location to discolor.

### Nozzle Cleaning Method

Click "Hip Cleaning" on the side of the machine when the machine is on and not seated.

Press the button to start the nozzle cleaning function, and the cleaner is extended, but it will not face spray water to facilitate manual washer cleaning. If nozzle dirt, please use a toothbrush to clean it.

Do not use too much force when brushing the nozzle, otherwise it will damage the cleaner.

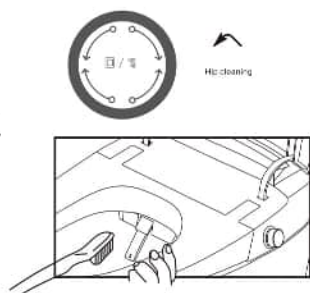


### Filter Net Cleaning Method

For your health, please clean the filter (or replace the filter) according to the local water quality.

When the cleaning strength is found to be weakened, clean the filter in time (or replace the filter port).

Be sure to close the water supply angle valve when removing the filter. When installing the filter, tighten it firmly to avoid water leakage. Turn the filter counterclockwise with a \$1 coin to easily open it.

It is recommended to clean the air filter once every 1-2 months.

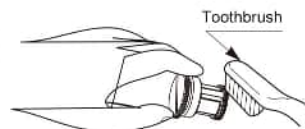

## Technical Support

Name			Smart Toilet
Power			AC 110V 50/60Hz
Cleaning Device	Inlet Water Temperature		1°C-30°C
	Inlet Water Pressure		0.15-0.75MPa
	Warm Water Temperature		Adjustment:About 30°C-40°C
	Spray Water Amount	Rear	About 0.35-1.2L/min (When water pressure is 0.2MPa)
		Bidet (female-specific)	
	Spout Position	Rear	50mm—90mm
		Bidet (female-specific)	
	Heating Power		1600W
Safety Equipment		Flow SensoR, Water temperature sensor, Temperature switch,Thermal fuse	
Rated Power			1150W (inlet water temperature 15°C ±2°C,water pressure 0.2MPa)
Drying Device	Wind Speed		≥ 4m/s
	Temperature Adjustment		4 stages (room temperature - about 55°C)
	Heating Power		250W
	Safety Equipment		Thermal controller,Thermal fuse
Seat Heating Device	Temperature Adjustment		4 stages (room temperature-about 40°C)
	Heating Power		45W
	Safety Equipment		Thermal controller,Thermal fuse
	Open And Close Device		Seat ring and flip lid with damping cushioning device
	Safety Equipment		Leakage protector,The cover temperature sensor
Power Cord Length			1.5m

## List of Materials

### Main Unit



A Smart Toilet



A Set Of Remote Control Components  
(include remote control, bracket, double-side  
tape)




A Wax Ring



A Water Barrier Cap  
(Please keep this accessory for functional testing)



An Installation Manual

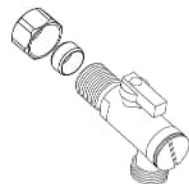

1/2" Compression Angle Stop Valve