




Ax1

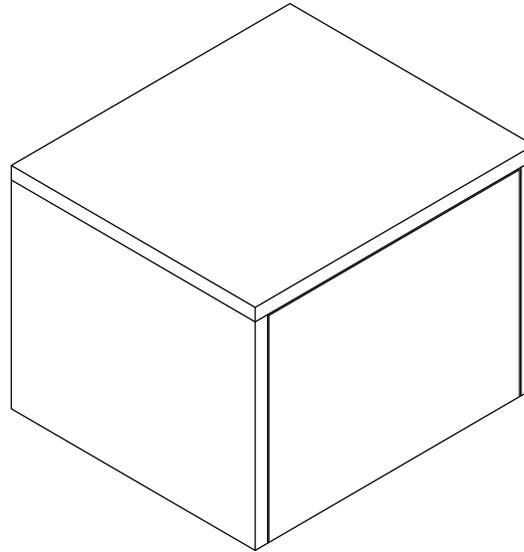


Bx1

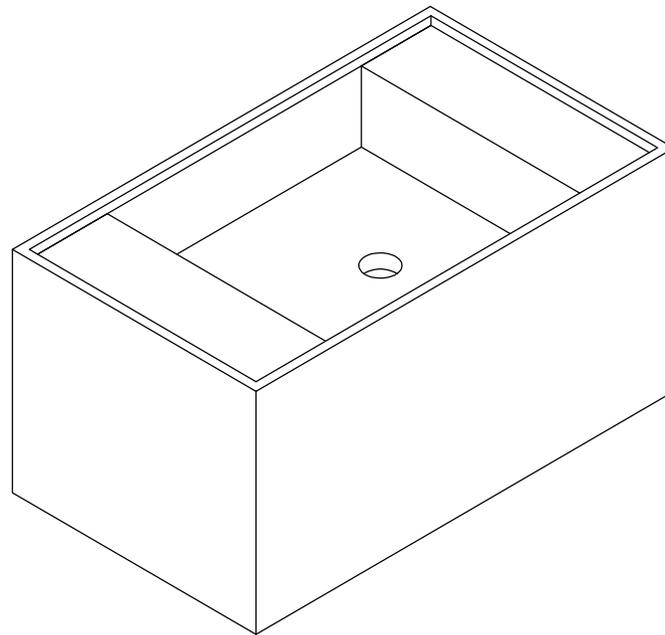

 Cx6



Dx6

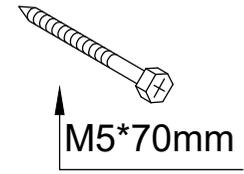

Ex4





Fx4



 Gx2



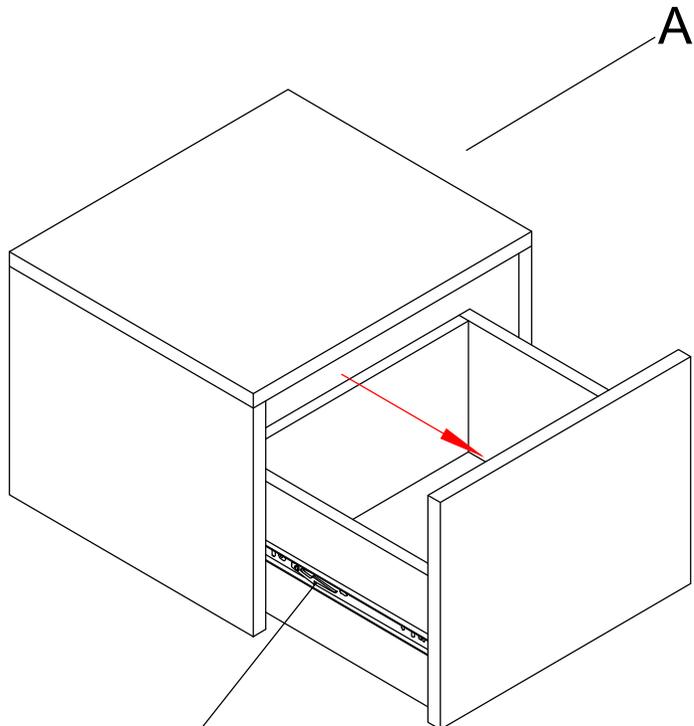

(Valve switch) Press the valve switch to open and remove the drawer


C  x6


D  x6

E  x4

F  x4

G  x2

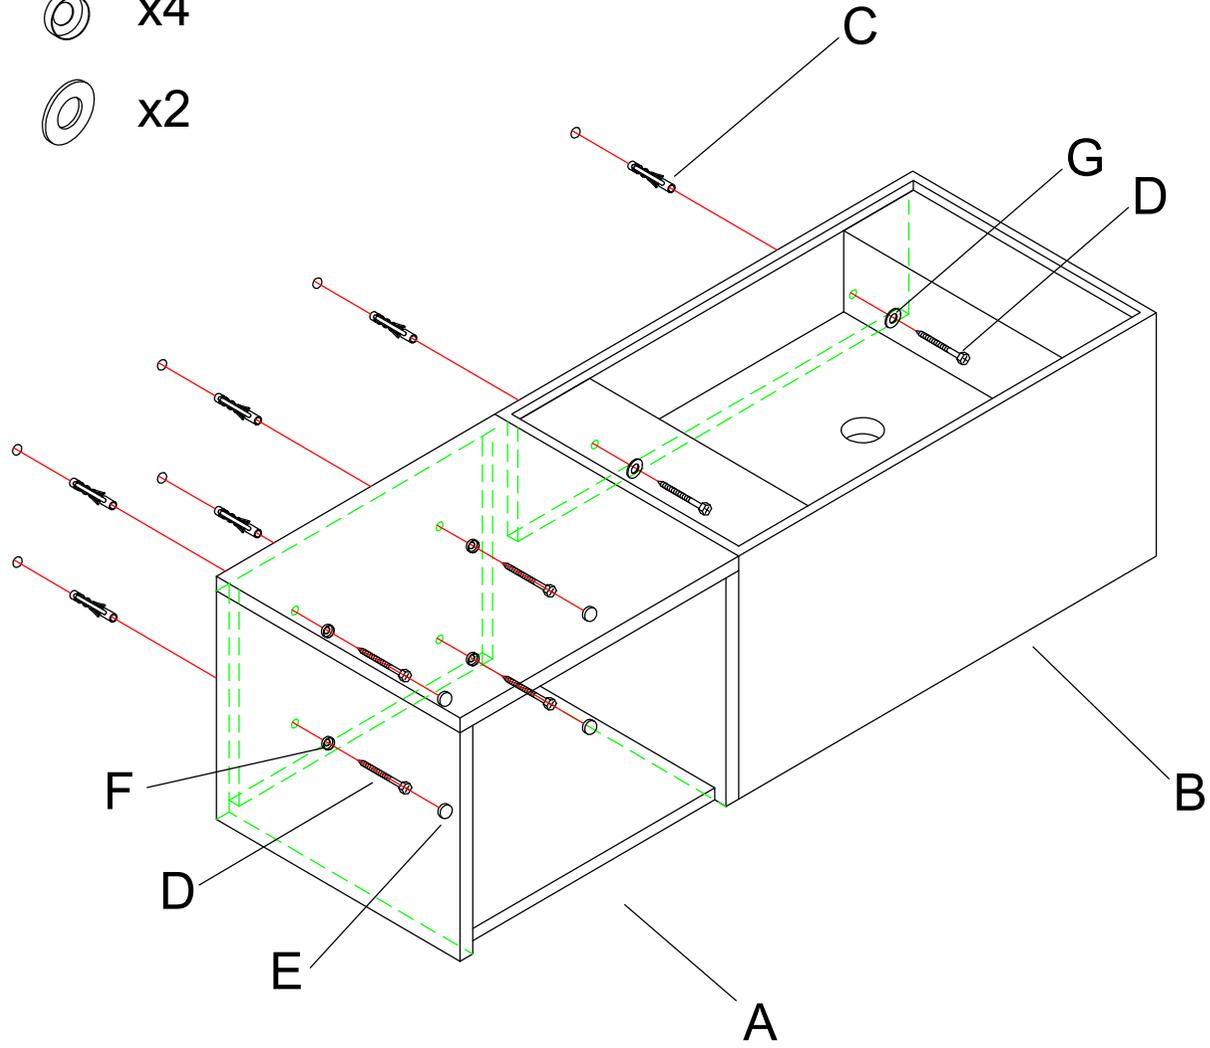

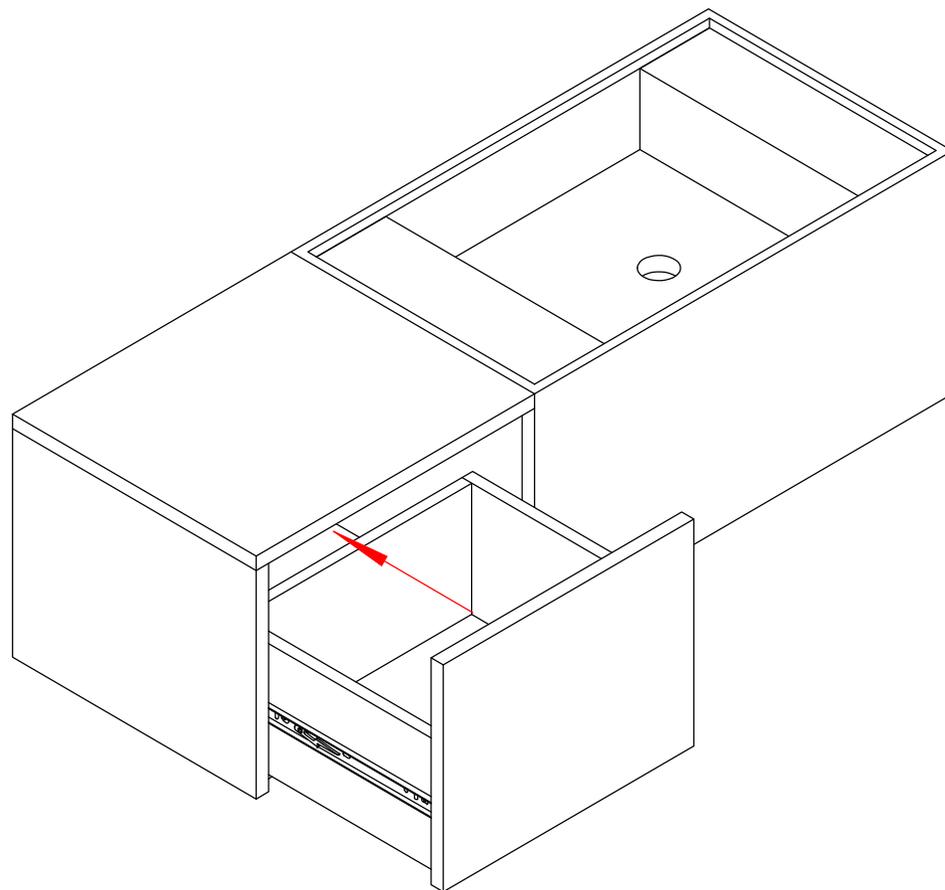

Install the drawer