



# Contents

## Instructions before Use

Safety Precautions.....	01
Precautions for Use.....	05
Parts Name.....	07

## Installation Guide

Pnstallation Steps.....	09
Connection and Installation of Water Pipes.....	10
Install the Rumor Controller.....	12
Trial Line.....	13
Install the Rumor Controller.....	13

Thank you for purchasing our products. Please read this manual carefully and use it correctly. After reading the manual, please keep it in a convenient place.

There are differences in the product shapes of various models. Please refer to the actual product for the product shape. The product shape in this manual is for reference only.

## Instructions

Description of Side Control Panel.....	14
LED Display Description.....	14
Remote Control Instructions.....	15
Instructions.....	16
Advanced Features.....	18



## Appendix

Replacing the Remote Control Batteries.....	18
Replace Backup Battery.....	19
Terms and Conditions.....	20
Problem Judgment and Elimination.....	21
Daily Maintenance.....	23
product Specification.....	24
Packing List.....	25



## Safety Precautions

Please read this safety precaution carefully before using it correctly.  
The precautions listed here are important contents related to safety, please be sure to follow them.

### The identification and meaning are as follows

	<b>Warn</b>	Indicates that serious injury or death may be caused if this sign is ignored and mishandled
	<b>Notice</b>	Indicates that injury or property damage may result if the symbol is ignored and mishandled.

### Examples and descriptions of icons

	Indicates that it is not feasible. The left picture shows.
	Indicates what must be executed.

## Warn



Do not splash water or detergent on the product body or the power plug

- It may cause fire or electric shock
- It may cause toilet breakage, damage or water seepage in the room.

Safety Precautions

This product is an electrical product, so please do not install it in a place where it is easy to be splashed by water or where the humidity is high. When using it in the bathroom, please install a ventilation fan or a ventilation port to maintain good air circulation in the bathroom.

It may cause fire or electric shock.

Set the socket for power wiring as follows

If you do not wire according to the following requirements, it may cause fire or electric shock.

a. The circuit of the socket should be protected by a high-sensitivity and fast leakage switch (rated induction current below 10mA) or an insulating transformer (above 1.5KVA and below 3KVA).

b. The installation position of the socket must be more than 0.3m away from the ground, and as far away from the bathtub as possible

The grounding wire of the product must be grounded, and must be connected to the grounding wire

If not grounded, it may cause electric shock.

Note: The grounding treatment mentioned here means that the grounding resistance is below the 4Q protective grounding, and the grounding wire uses a steel wire with a diameter of 1.6mm or more

When using in the bathroom

Please confirm that the power plug has been waterproofed with silicone

If it is not waterproofed, it may cause fire or electric shock.

## Warn



Do not use in wet places

Do not install this product in humid places such as Shower room.  
(Prevent water from entering electronic components)

May cause a fire or electric shock.



Prohibition of disassembly

Never disassemble, repair, or modify the product without permission. It may cause fire or electric shock



No wet hands

Do not plug or unplug the power plug with wet hands  
It may cause electric shock.



prohibit

Do not continue to use the product when it fails. When the following situations occur, please pull out the power plug, close the water inlet angle valve, and stop the water



prohibit

Do not damage the power cord or toilet seat connection cord

Trouble content: Cracks and cracks in the piping and main body, abnormal sound from the product, abnormal smell, smoke from the product,

If you continue to use it in a faulty condition, it may cause problems such as fire, electric shock or indoor water seepage

Do not pull, do not process, do not heat, do not forcibly bend, do not pull, do not place heavy objects on the power cord and toilet seat connection line

Continuing to use regardless of product damage may cause fire, electric shock, short circuit



prohibit

Do not use loose and unstable power outlets  
It may cause fire or electric shock



prohibit

Do not use multiple wire outlets  
Do not connect extension cables or use extension cables in the middle, as this will cause overheating, fire and electric shock.



prohibit

Do not use water sources other than tap water  
May cause problems such as dermatitis

## Warn



Must be obeyed

Pay attention to prevent low temperature burns

If you sit on the toilet seat for a long time, please adjust the temperature of the toilet seat to normal temperature. When the following people use the heat-retaining toilet seat and the warm air to dry, please adjust the temperature of the toilet seat to the normal temperature position, and adjust the temperature adjustment button of the warm air to [Low].

Children and the elderly who cannot adjust the temperature to an appropriate level by themselves. People with limited mobility such as sick people and the disabled. Sleepy people who have taken sleep-inducing drugs (sleeping pills, cold medicine, etc.), heavy drinking, and excessive fatigue.

## Warn



Ban Tinder

Do not let cigarettes and other fires get close to the product  
• It may cause fire



Prohibition

Do not put your fingers or other objects into or block the warm air outlet. Do not block the warm air outlet with your hands. Do not cover the warm air outlet with clothes, etc.  
• It may cause burns, electric shock, or burns.  
• Please be careful when using it by children and the elderly



Prohibition

Please do not apply strong force or impact, do not stand on the toilet seat, toilet cover or body, and do not place heavy objects  
• The product may crack, the body may fall apart, and people may be injured.  
• Damage of the toilet can lead to flooding in the room.



Prohibition

For maintenance, please use diluted kitchen detergent (neutral), do not use the following products  
(Toilet detergent, household detergent, gasoline, banana water, decontamination powder, nylon brush, etc.)  
• The plastic may be damaged, deformed and cracked, resulting in personal injury.



Prohibition

When the water inlet angle valve is opened, the water inlet filter and the water discharge cock attached to the water inlet filter cannot be removed.  
• It may cause water leakage.



Prohibition

Do not twist or damage the water inlet hose  
• It may cause water leakage



Prohibition

Do not use the toilet to flush things other than urine, urine and toilet paper  
• Otherwise, the toilet may be blocked and sewage may overflow.



Must be obeyed

When not in use for a long time, please pull out the power plug  
• For safety reasons, please unplug the power plug.  
• When used again, spoiled water may cause dermatitis.



Must be obeyed

In case of water leakage, please close the water inlet angle valve to stop the water inlet



Must be obeyed

When installing the water inlet filter, please tighten it firmly  
• Otherwise it may cause water leakage



Must be obeyed

Prevent damage from freezing  
• Freezing can cause damage to the water inlet device and the inside of the main body, resulting in water leakage. Please implement heat preservation, etc., and increase the temperature of the toilet



Must be obeyed

Plug in the power cord

• Before use, please make sure the plug of the power cord is plugged in. The plug and the socket are tightly fitted and there must be no loose or incomplete insertion, otherwise it will cause accidental fire due to heat.

• When you do not use this product for a long time, please unplug the power plug.



Must be obeyed


When the toilet is clogged, please pull out the power plug and use a commercially available pipe cleaner to remove the clog

If the power plug is not pulled out, when the equipment performs automatic cleaning, it may cause sewage overflow and indoor flooding



Must be obeyed


Do not expose this product to direct sunlight  
Discoloration, aging, deformation and damage to the product

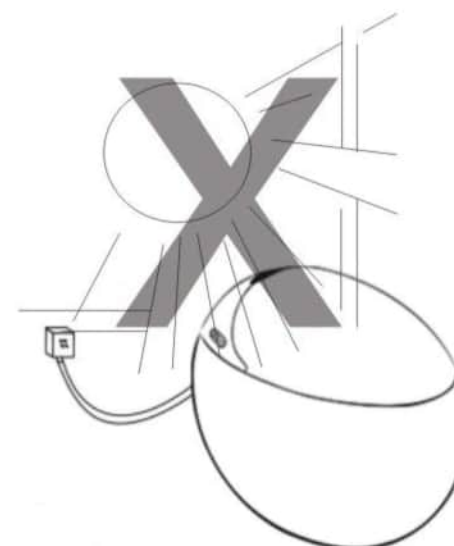

## Precautions for use

### Cleaning mistakes

Do not wipe the product body with hard and rough.

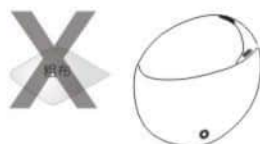

Do not rinse directly with water.



### Daily maintenance

Do not pour urine on the body and nozzle



During thunderstorms, pull out the power plug.



### Do not lean back on the seat cover


• May cause damage to the case

When placing an auxiliary seat for infants on the seat, please take it away after use


• Some functions may not be available.

## Precautions for use


During winter nights when freezing may occur,  
To prevent damage caused by freezing,  
Please take antifreeze measures.

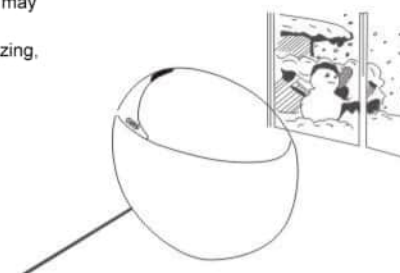

Please do not put heaters or stoves  
close to the main body.  
• Discoloration or malfunction may occur


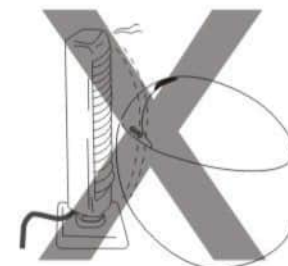


Please do not open the seat ring or seat  
cover roughly  
Will crack or malfunction

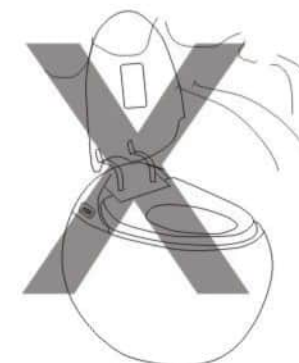





## Parts Name

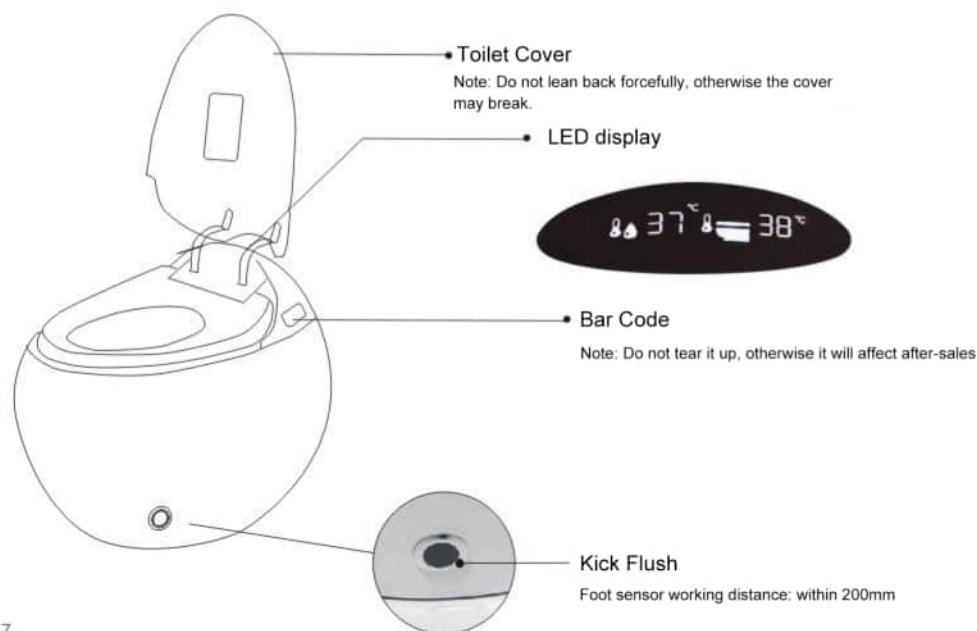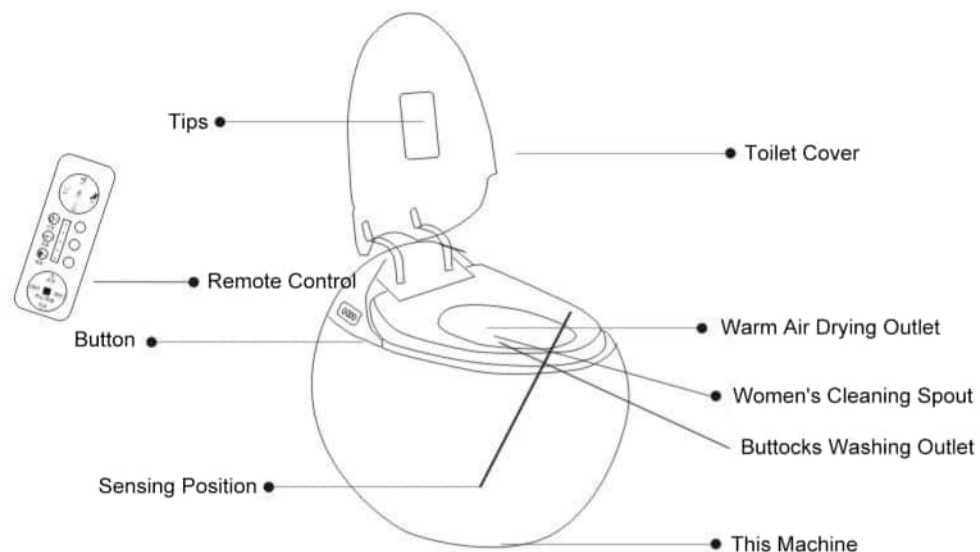

## The Main Function

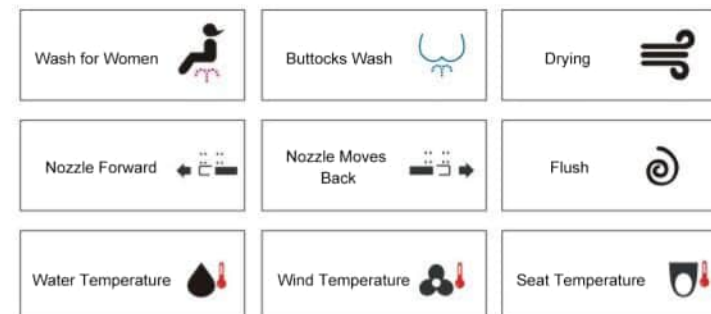

## Humanized Function

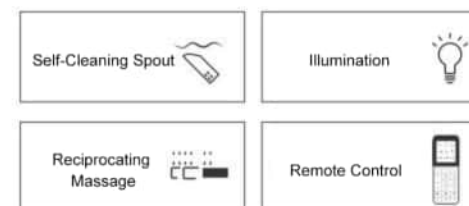

## Safety




## Installation Guide

### Required Tools



### Installation Diagram

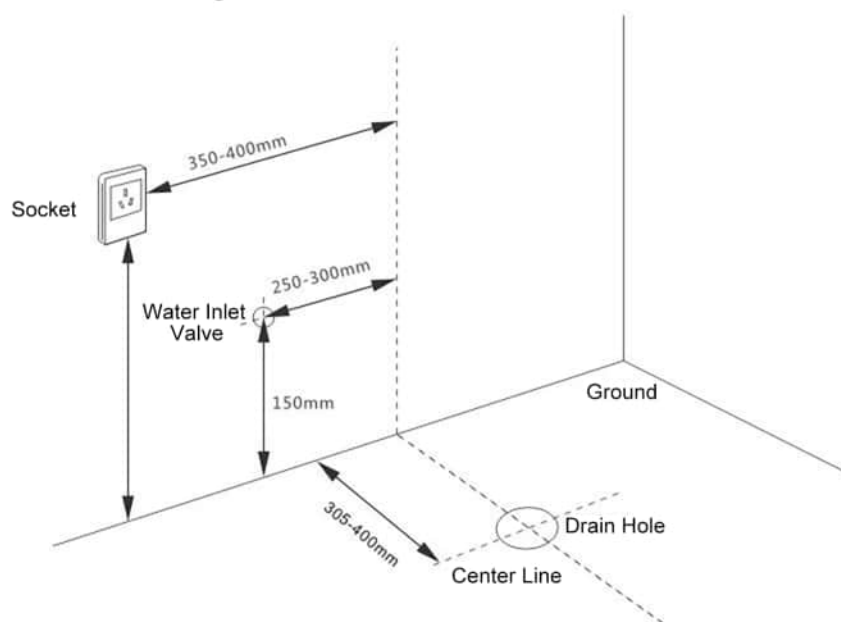

#### Warnings


Please set the power socket according to the following regulations

1. Confirm that the power plug used is properly grounded.
2. The length of the electro-hydraulic line is 1.5m, and the power socket should be close to facilitate the installation and disassembly of this product, and it should be as far away from the bathtub as possible
3. It is recommended to use a waterproof socket, do not use an extension cord to connect the product.

- Otherwise it may cause fire, electric shock

## Product Dimensions

unit:

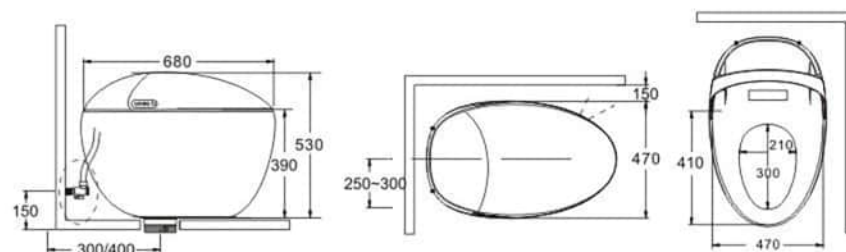

### Before Installation

Water pressure test: The water output within 15 seconds is greater than 1.32 gallons. Before installation, the water pipe should be boiled for 2 minutes before being connected to the water inlet. The police can be installed.



## Installation Steps

Mark the center line of the drain outlet on the ground. According to the size of the toilet, install the water inlet angle valve at a suitable position on the wall

Install the water inlet angle valve (as shown in Figure 1)


Construction and installation instructions (as shown in Figure 2, Figure 3, and Figure 4)

A Align the wall to the center line of the drainpipe (there are two options for the pit distance of 305mm and 400mm).


B depicts the position of the center hole (select the mounting hole according to actual needs).

C Gently turn the toilet sideways, and press the oily side of the sealing ring of the accessories to the sewage outlet at the bottom of the toilet


D Align the drain outlet of the toilet to the vertical position of the drain outlet.

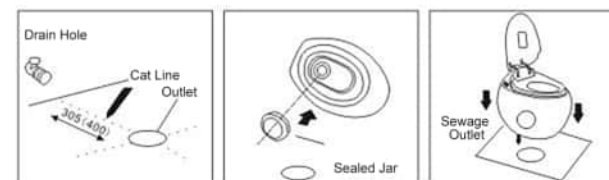


### Install the Toilet

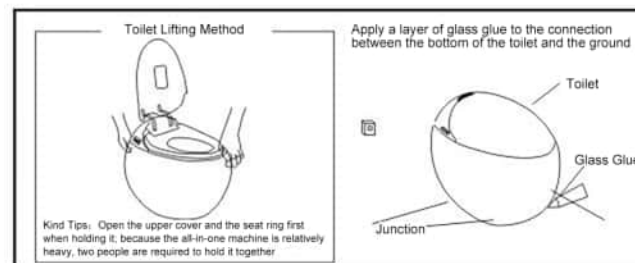

7. Install the water inlet angle valve and connect the braided hose (before connecting the braided hose, please release the water in the pipe for 3-5 minutes to ensure that the pipe is clean and the water inlet valve will not be blocked).

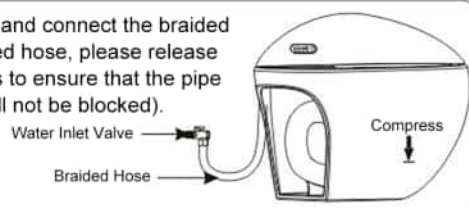

8. Apply a circle of anti-mildew sealant on the contact between the toilet and the ground. After the sealant is solidified, plug in the power supply, slowly open the angle valve to adjust the water pressure within 7.5KG, and check the tightness of each connection point.

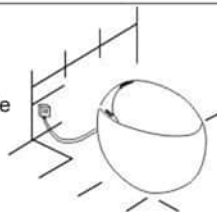

#### Warnings

1. The smart toilet accessories have been debugged before leaving the factory, and unauthorized disassembly and assembly are strictly prohibited. Please use the fittings and tubes provided by our company. Old fittings and tubes cannot be reused. If you have any questions, please contact your local dealer or our after-sales service department.
2. All contents of this instruction manual are based on the latest situation of the product at the time of printing, and the company reserves the right to change without further notice.


## Water pipe connection and installation

1. Install the new angle valve, connect one end of the braided hose to the angle valve, and connect the other end to the filter shell
2. After plugging in the power supply, adjust the angle valve to control the water pressure within <7.5kg



Remove the old angle valve and replace it with the original angle valve


Old Angle Valve

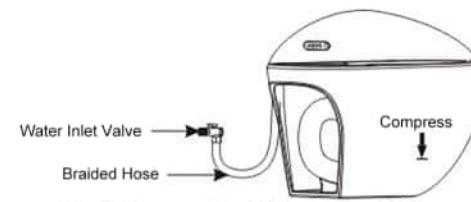

Note: The hose cannot be folded, otherwise the water pressure will be too low to use the machine equipment.

New Angle Valve

 Note: This product adopts the super-swirl siphon jet flushing technology. If the water pressure is high (over 3 kg water pressure), there will be a little splashing water and excessive jet noise when the ceramic inner wall is super-swirl flushing. You can slowly adjust the angle valve to the right, the water pressure is reduced so that the flushing can work normally.



Angle Valve



Close Angle Valve


#### Notice

1. If there is a power failure during the cleaning process, please close the angle valve, and the function will return to normal after stopping the water supply and electricity.
2. For installation, use the new hose assembly and other specified parts attached to the appliance. The old hose assembly cannot be reused, otherwise it may cause water leakage.



## Install the remote

### Installation Method

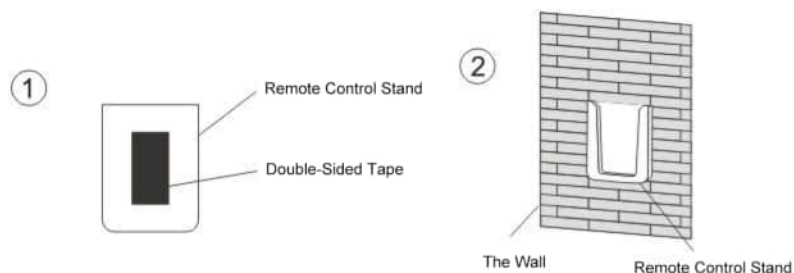

1. Clean the installation position before pasting. Press the tape firmly and evenly when applying. Use it after 15 minutes.
2. The double-sided adhesive is suitable for tile-type flat walls, not for wallpaper-type walls.

### Trial Line

Water and electricity for the first time:

After the water supply angle valve is turned on and the power is turned on, the soft light and the water temperature on the display screen will flicker, which means that the heating water tank is entering water. Wait for about 30 seconds for the soft light and the water temperature on the display to stop flashing, which means that the heating water tank is full of water. At this time, follow the steps below for trial operation


#### 1. Human Sitting Sensor

The area shown in the figure is the half-fall sensing area of the human body. The system function can only be activated when the system senses that someone is sitting down. When the system senses that someone is sitting, the buzzer sounds once to indicate that it has been sensed, and the system function can be started. When the human body leaves the system sensing position, the buzzer beeps.



#### 2. Check the Basic Functions

When the human sitting sensor is on, the buzzer beeps "DI". Press the "Police/Massage" or "Female/Massage" function on the shortcut panel. That is, the corresponding function can be activated. When testing, pay attention to the nozzle water will be sprayed out, pay attention to block

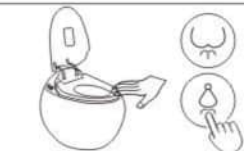

#### 3. Check the Drying Function

When the human sitting sensor is on and the buzzer "beeps", press the "warm air drying" function on the shortcut panel to start the corresponding function.



## Description of Side Control Panel



Long press the stop button on the side to enter the switching off/on, and short press for the "stop" command, which is used to stop some work before repairing.



Wash for Women

When seated, press this button to start the women's washing, press this button again to switch to mobile washing, and so on. Press the stop key to end. The function can also be exited after the personnel leave the seat map.



Buttocks Wash

When seated, press this button to start butt cleaning, press this button again to switch to mobile cleaning, and so on. Press the stop key to end. After the personnel leave the seat map, they can also exit the function of cleaning the intelligence department. When there is no seat, press this button to activate the self-cleaning function of the spray boom.



Drying

When someone is seated on the seat ring, press this button to start the warm air drying function, and press the stop button to end the drying.



Toilet Flush

Press this button to automatically flush the ceramic once, and only the side flush is available when the machine is turned off.

## LED Display Description



(Smart Toilet Top LED Display)



37°C



Indicates the temperature in degrees Celsius of the water sprayed from the rinse rod



38°C

Indicates the seat temperature in degrees Celsius of the seat ring

## Install the remote

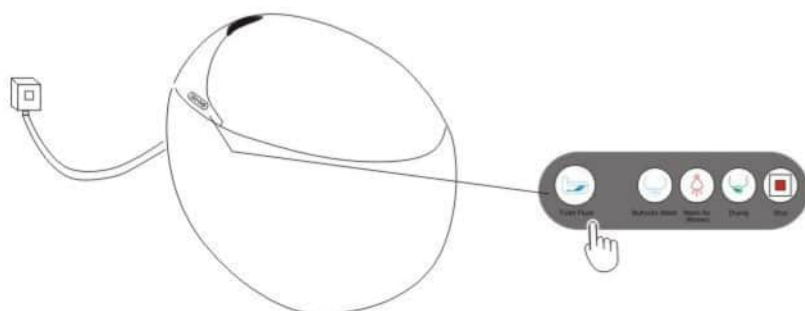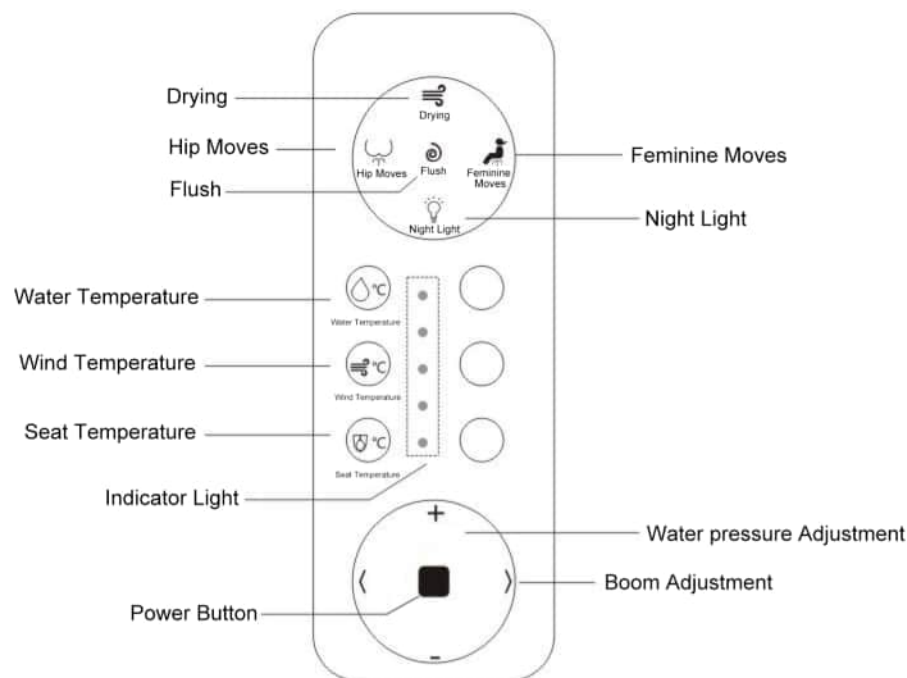

## Instructions for Use

Note: When using for the first time, if the remote control does not respond, you need to pair the code. (Operation method: press and hold the flush button on the side, hear three beeps from the smart toilet, then press any button on the remote control, and the smart toilet will beep once again, and the code matching is completed. After the code pairing time exceeds eight seconds, the smart toilet will beep twice to indicate code pairing failure.)

### Hip/Move

After the human body is seated and sensed, press the side button "buttock washing" or press the remote control "hip washing" button, the buttock washing nozzle will spray at a fixed position for two minutes and fifty seconds and then automatically stop spraying, or press the remote control "stop button" Stop the operation, or press the "Stop" button on the side to stop cleaning. After the buttock cleaning function is started, press the buttock cleaning button again, and the nozzle will move back and forth to enhance the cleaning effect. If you press the nozzle again, it will stop back and forth Move and stay in the working state before moving. After the buttocks, moving and drying are started, press the "stop" button on the remote control.

### Female/Move

After the human body is seated, press the side button "female washing" or press the remote control "women washing" button, the female washing nozzle will spray at a fixed position for two minutes and fifty seconds and then automatically stop spraying, or press the remote control "stop button" Stop the operation, or press the "Stop" button on the side to stop cleaning. After the feminine cleaning function is started, press the buttock cleaning button again, and the nozzle will move back and forth to enhance the cleaning effect. If you press the nozzle again, it will stop back and forth Move, stay in the working state before moving.

### Drying

After the human body is seated and sensed, press the "warm air drying" button on the side or the "drying" button on the remote control to enter the warm air drying, which will automatically stop after 3 minutes and 50 seconds. The "drying" button on the remote control is the air temperature adjustment button. Three-stage adjustment of air temperature and temperature: if the remote control is not on, the normal temperature is normal temperature.

## Toilet Flush

Press the "Toilet Flush/Flush" button on the side, or press the "Flush" button on the remote control, and the smart toilet will start the flushing function. If the AC power failure occurs, press and hold the "Toilet Flush/Flush" button for five seconds to execute the smart toilet flush function. At this time, the backup battery is used for power supply, so the state must ensure that the battery is charged before it can be operated. A 9V battery is used as a backup battery. The number of times of use is related to the battery capacity. The larger the capacity, the more times. The backup battery is only used for emergency when the AC power fails. It is not recommended to use this method all the time.

## Water Temperature

The "water temperature" key on the remote control is the water temperature adjustment key. Five-stage adjustment of water temperature: the remote control does not light up for normal temperature/digital display "--" for normal temperature: the remote control lights up with one digit for water temperature first level/digital display "31" the remote control lights for two digits for water temperature second level/digital display "33 "; the remote control lights up three lights, the water temperature is three levels / digital display "35"; the remote control lights four lights, water temperature four levels / digital display "37"; the remote control lights five lights, water temperature five levels / digital display "39".

## Seat Temperature

The "seat temperature" key on the remote control is the seat temperature adjustment key. Seat temperature five-stage adjustment: the remote control is not on for normal temperature/digital display "--" is normal temperature; Gear/digital display "34" remote control lights three lamp holder temperature third gear/digital display "36"; remote control lights four lamp holder temperature four gear/digital display "38"; remote control lights five lamp holder temperature five gear /Digital display "40".

## Night Light

The "night light" button on the remote control is the function key for operating the night light, which can turn on or off the light.

## Advanced Features



Flush

### Seat Flush Switch

Press and hold the remote control/side button and press the "Flush button" for 3 seconds to switch the "Flushing function from the seat"



### Soft Shutdown

Long press the "stop button" on the side to switch on and off



**Notice** The drying and washing functions cannot be used in the sitting state

## Replacing the Remote Control Batteries


When the battery is exhausted, the remote control is sometimes insensitive, or out of control, at this time you should replace the alkaline battery



### Notice

Battery must be placed correctly, with the compression spring protruding from the negative terminal

- New batteries cannot be mixed
- Please use alkaline batteries

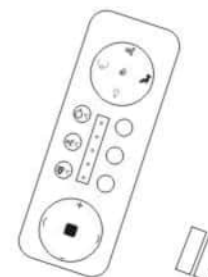


**Note:** The remote control contains batteries, please store it properly out of the reach of young children.

## Replace Backup Battery

### Step

1. Pull out the power plug
2. Lift the toilet seat cover
3. Take out the battery cover.
4. Put the battery in the correct position
5. Press the flush button to ensure normal flushing
6. Put the lid back in place and secure the toilet lid

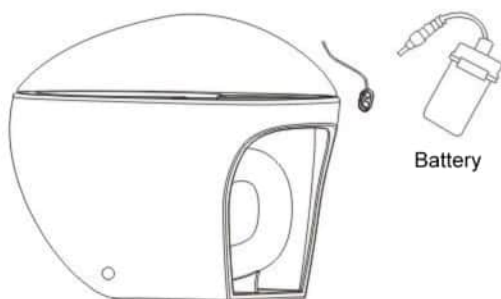


### Notice

1. The backup battery must use 9V alkaline batteries, do not use carbon or other batteries
2. If the battery is low or not installed, the flushing will not work normally, even if the power is off, the flushing function will be abnormal
3. We recommend checking and replacing the new 9V backup battery every two years
4. Please replace the old battery and recycle it properly

## Instructions for Use

### Seating Sensor

Because the seat sensor is installed, when there is no seat, even if the switch is pressed by mistake, the nozzle will not spray water, and the cleaning functions will not start.

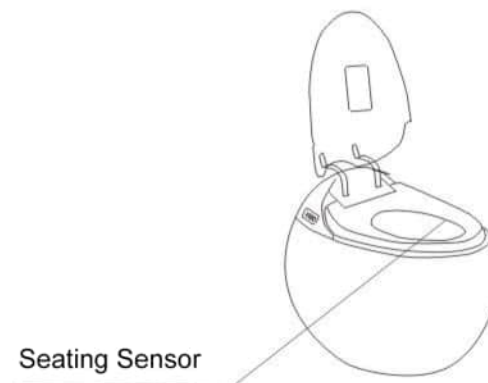

Seating sensor If the following conditions occur, the sensor will not work.


- ✗ The human body is not sitting on the seat ring




## Packing List



 a Smart Toilet



a Manual

 

A set of Remote Controls  
(Includes remote control, stand, double-sided tape)



a Wax Ring



Special Hose



DC Power Box



Angle Valve  
15/16 inch adapter, 1/2 inch  
phone adapter


## Problem Judgment and Elimination

### Troubleshooting and Troubleshooting

Symptom	Check method	Countermeasure
Does not start at all	Is there a power outage or the power outlet is not connected	Please make sure to insert the power plug Please unplug the power plug and plug it in again
No water or poor water flow during flushing	Whether the water is cut off or the water supply is shut down	Please check the water flow and open the water supply valve
	Whether the water supply filter is clogged	Please clean the filter
	Whether the nozzle is blocked by scale	Please use a toothbrush to clean the nozzle
water leakage	Whether the connection part of the water supply pipe is tightened	Please tighten the connection of the water supply pipe
water temperature, sitting circle cool	Whether the water temperature and seat temperature are adjusted to normal temperature	Please readjust the temperature

### Remote Troubleshooting

Operate the button on the toilet body to judge whether the flushing is normal and whether the trial operation is normal (start cleaning and drying after sitting)

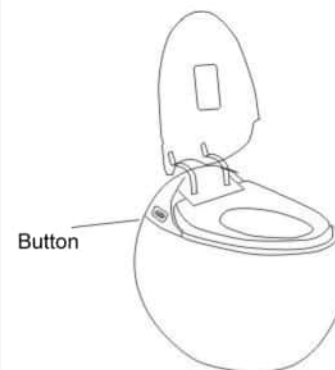

Button

### Emergency Troubleshooting

Put more than 2.1 gallons (8L) of water into the bucket to rinse the ceramic body without water supply. Note: Avoid water overflowing from the cavity.



When the product is not used for a long time, especially in winter when no one is at home for a long time, please drain the water in the water tank and pipes to prevent freezing.

### Drain

1. Unplug and cut off the power
2. Unscrew the hose connected to the angle valve to drain the water in the pipeline, and then reinstall the hose.
- 3 Water in the ceramic body Add some antifreeze to the water in the ceramic body

Reminder: When using the toilet again, be sure to turn on the water supply angle valve and power supply.



Note that the power must be cut off before the water is released



## Daily maintenance


### Main body cleaning

1. The surface of the main body should be wiped with a sponge or a soft dry cloth or a cloth with a neutral lotion
2. Note: Do not use thinner, light gasoline, detergent, chemicals, etc. to wipe, and do not spray insecticides, fragrances, deodorants, etc.

Note: The material of the product is a new plastic material, which itself will not change color. Most of the discoloration phenomenon is due to oxidation reaction. The product is exposed to liquids such as perfume, toilet cleaner, and nail polish, and is not wiped off in time, resulting in oxidation of the product surface. A few users place seat pads on the seat ring. The seat ring has a heating function. The contact surface between the mat and the seat ring is generally non-slip rubber. Once heated, it is easy to discolor, and the position where the seat ring touches will change color.

### Nozzle Cleaning Method

1. Please clean the nozzles regularly: first prepare a toothbrush and a soft cloth. When no one is seated, press the side butt wash button without a seat, and the spray rod will extend to clean the nozzles and nozzles.
2. Use a toothbrush and a soft cloth for cleaning. After cleaning, press the stop button and the spray bar will automatically return.

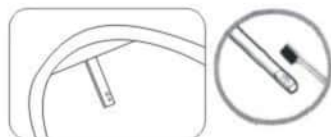

### Water supply filter cleaning method

1. Turn off the angle valve switch, use a flat screwdriver
2. Take out the filter and clean it with a toothbrush before putting it into the angle valve
3. Turn on the angle valve switch after tightening the filter



Unscrew the filter      Rinse filter dirt with water

## Technical Indicators

Water Supply	Way	Connect Directly to the Water Pipe
	Dynamic Pressure	0.15Mpa-0.75Mpa(1.5kgfcmi-7.5kgfcm)
Cleaning Device	Rump Washing Water volume	0.5L/min-0.9L/min
	Washing Water Bolume for Women	0.5L/min-0.9L/min
	Heating Method	Instant
	Temperature Adjustment	Normal Temperature/1st Gear 31°C/2nd Gear 33°C/3rd Gear 35°C/4th Gear 37°C/5th Gear 39°C
	Heating Power	1600W
	Safety Devices	Temperature Switch/Thermal Fuse
Seat Heater	Temperature Adjustment	Normal Temperature/1st Gear 32°C/2nd Gear 34°C/3rd Gear 38°C/4th Gear 38°C/5th Gear 40°C
Seat Heater	Heating Power	50W
	Safety Devices	Resettable / Thermal Cutoff / Blown Fuse
Warm Air Drying Heating Device	Heating Power	Warm/low temperature about 45°C/medium temperature about 50C/high temperature about 55C
	Safety Devices	200W
	Temperature Adjustment	Resettable / thermal cutoff / blown fuse
Other Safety Devices		Leakage Protector