


# ASSEMBLY INSTRUCTIONS

## HAND SANITIZER DISPENSER

### FLOOR STAND

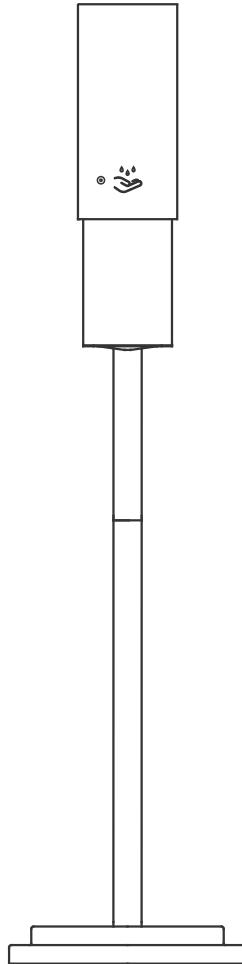

**APPROVED**

*By Michael J Almodova at 11:25 pm, Aug 05, 2020*

# TABLE OF CONTENTS

Instructions

1. Important Safety Information ..... 3

2. Parts Included ..... 4

3. Assembling ..... 5

4. Using the Device .....12

5. LED Indicator Light ..... 12

6. Cleaning and Maintenance .....13

7. Troubleshooting ..... 14

8. Warranty Information ..... 15


# IMPORTANT SAFETY INFORMATION

## READ THIS INFORMATION BEFORE USING YOUR PRODUCT

Before you use your product, it is important that you read and understand the information found in this guide. Basic precautions should always be followed, including the following:

- \* This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- \* This product is not a toy. Intended for adult use only.
- \* This product is for indoor use only.
- \* Do not allow children to play with this product.
- \* Ensure product is always in an upright position.
- \* Cleaning and user maintenance shall not be made by children without supervision.

## PARTS INCLUDED

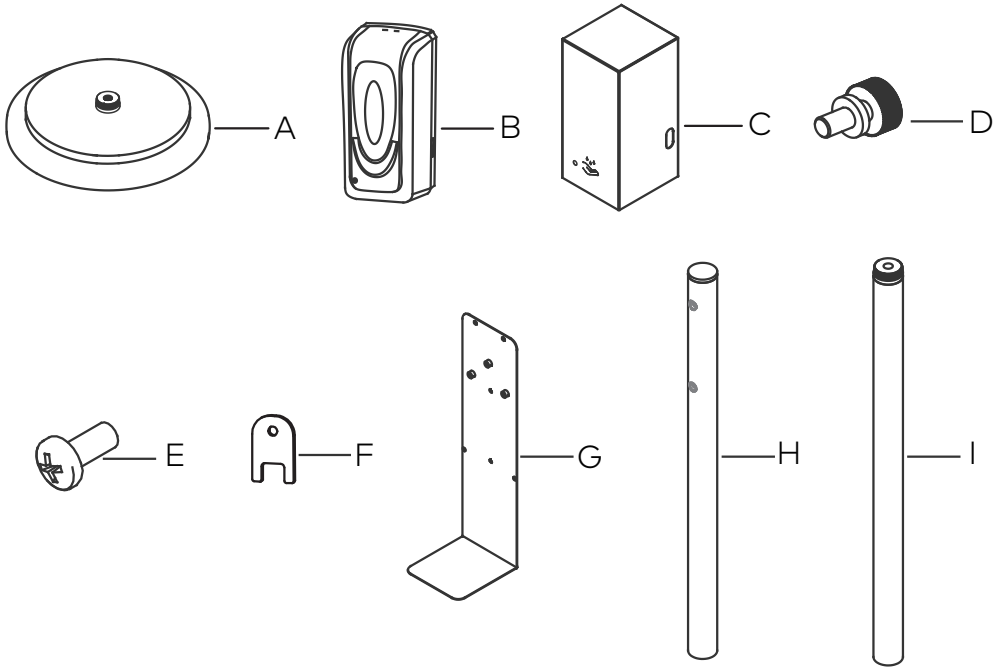


- Part A: Stand Base (1)
- Part B: Hand sanitizer dispenser (1)
- Part C: Metal cover (1)
- Part D: Knurled Screws (4)
- Part E: Mounting Screws (5)
- Part F: Key (1)
- Part G: Drip Tray (1)
- Part H: Upper Tube (1)
- Part I : Lower Tube (1)

## ASSEMBLING

Carefully unpack your new product and lay out all the parts on a clear area. Take care not to lose any small parts.


### STEP 1

Assemble the Lower Tube (I) onto the Stand Base (A) by threading clockwise.

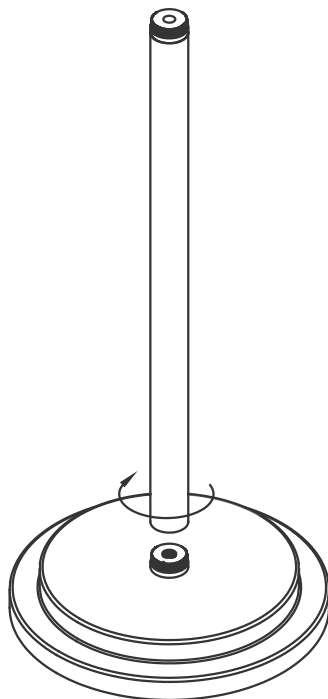


STEP 2

Thread the Upper Tube (H) to the Lower Tube (I) until fully tightened.

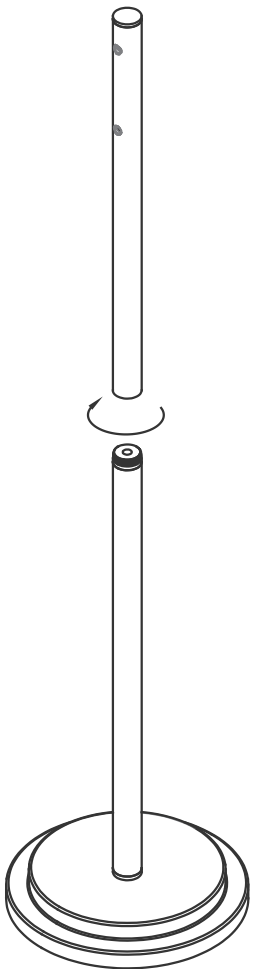


STEP 3

Align the two holes on the Drip Tray (G) to the holes on the Upper Tube (H), and secure by the provided Mounting Screws (E).

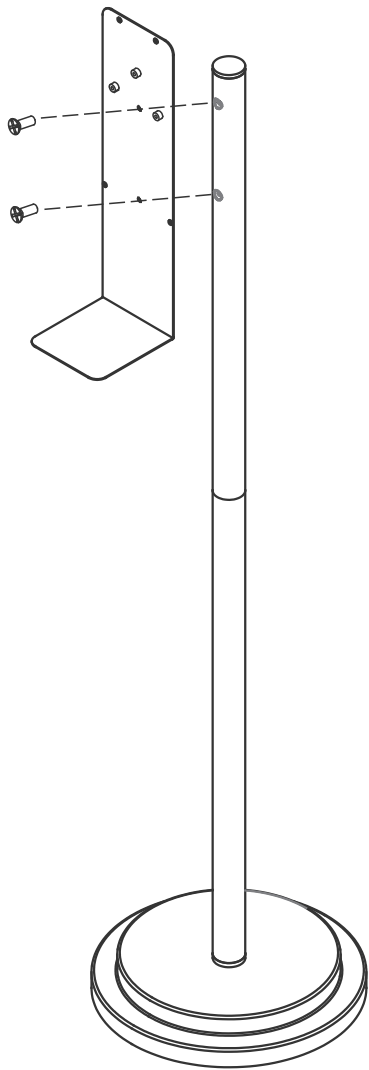

STEP 4


To open the dispenser, use the provided Key (F) to press down at the top of the front housing where the key slots are located. Hold the dispenser from the top and gently pull the front housing down and toward you. The front housing is hinged at the bottom of the dispenser.

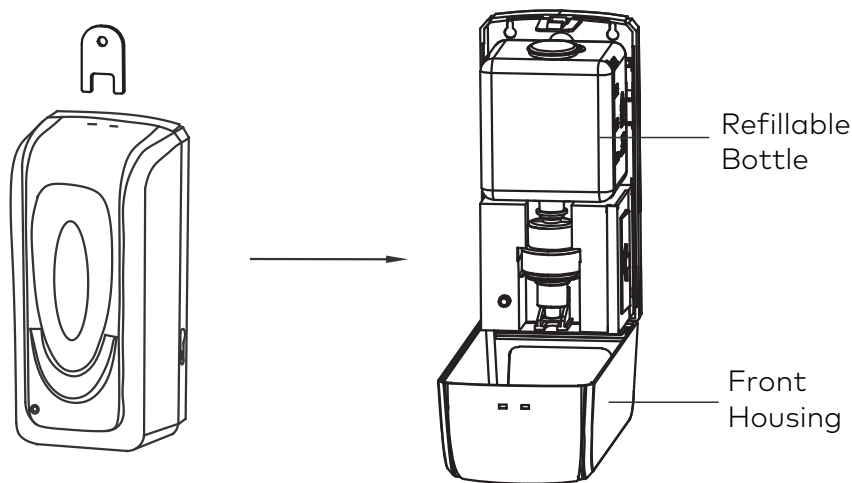




STEP 5

Take out the refillable bottle, align the holes on the dispenser back housing to the holes on the Drip Tray (G), and secure with the provided Mounting Screws (E).

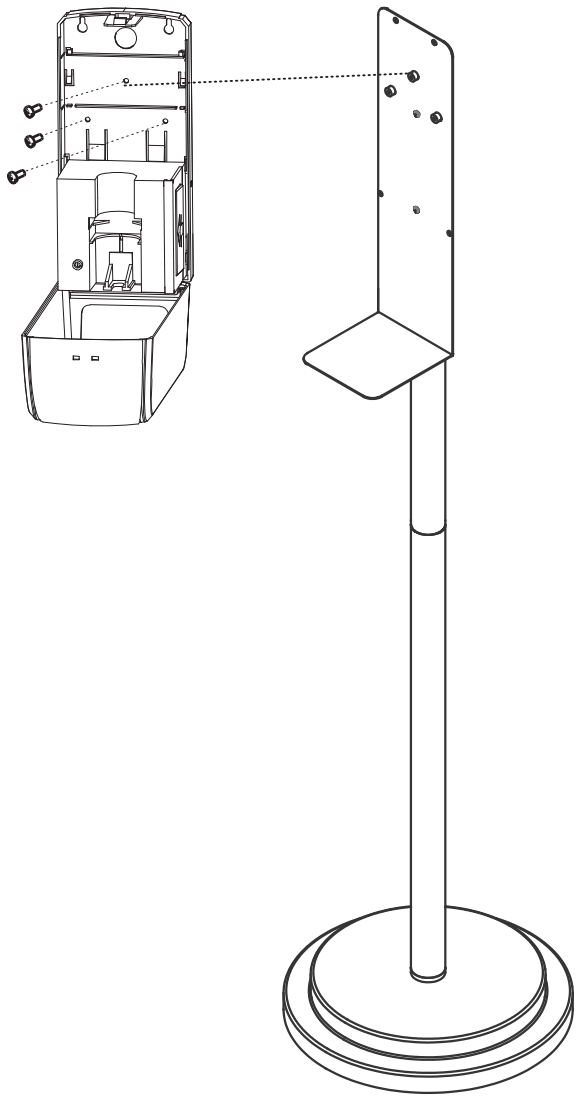


## STEP 6

Locate the battery box, slide the battery box cover forward, place four (4) C cell alkaline batteries in the proper orientation and replace the battery box cover. Do not mix old and new batteries. The use of re-chargeable batteries is not recommended.

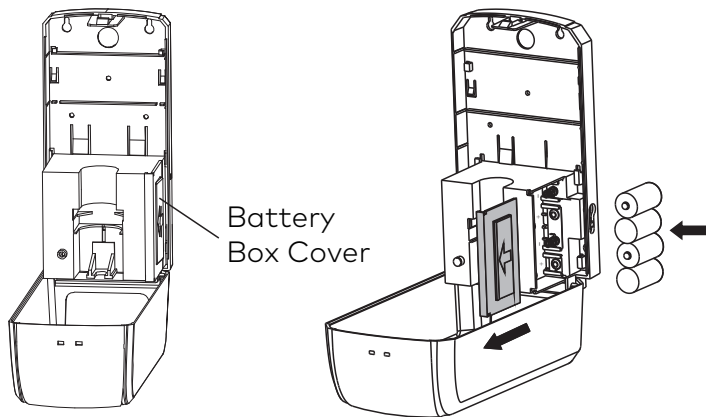


## STEP 7

Insert the refillable bottle into the dispenser. Pour the sanitizer into the refillable bottle, and close the dispenser front housing.

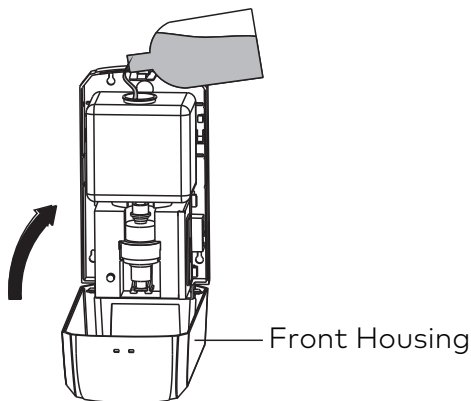


STEP 8

Place the Metal Cover (C) over the dispenser, and align the holes on the Metal Cover (C) to the holes on the Drip Tray (G), and secure with the provided Knurled Screws (D).

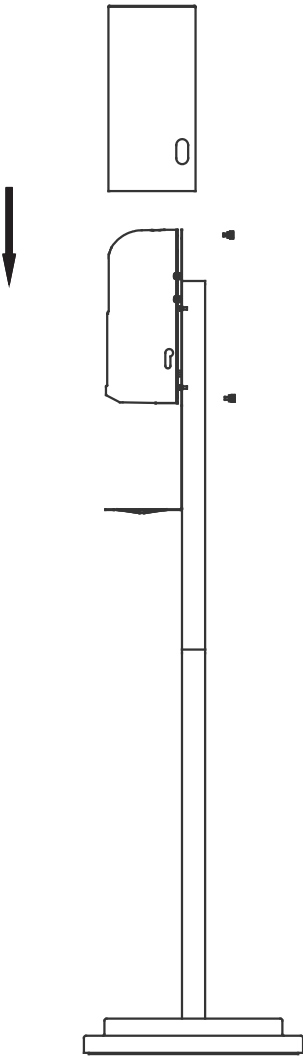

## USING THE DEVICE

1. Turn on the switch.
2. Place hand(s) underneath the dispenser within 8cm of the sensor. The LED will blink GREEN and dispense 0.8ml of sanitizer into your hand(s).
3. To receive additional sanitizer, remove hands from below dispenser and repeat 2.

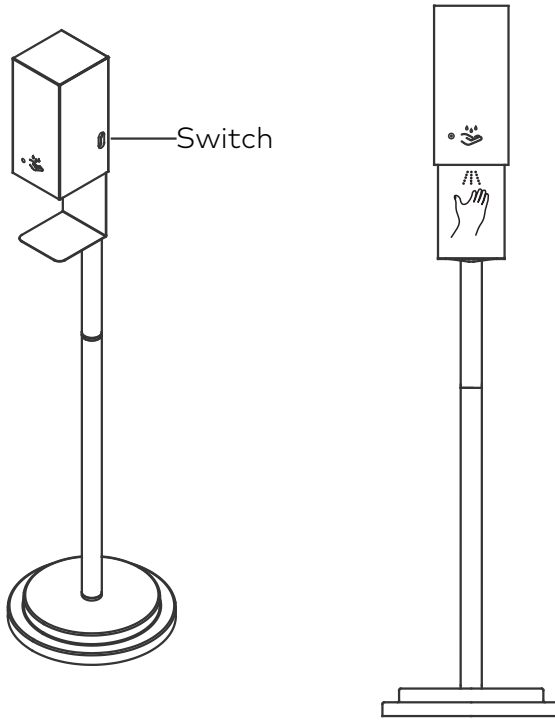

## LED INDICATOR LIGHT

1. Green color 5 seconds flash: working condition.
2. Red color 5 seconds flash: low battery charge.
3. Red color 2 seconds flash: something is under sensor and should be removed.
4. Red color keeps flashing: low volume sanitizer.

## CLEANING AND MAINTENANCE

\* To clean the outside of the product, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the product.

\* Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

## TROUBLESHOOTING

### No Dispense, Motor Does Not Run

- \* Hands are not directly underneath sensor
- \* No refill is loaded
- \* Incorrect refill is loaded
- \* Batteries are not loaded, or are loaded incorrectly

### No Dispense, Motor Runs

- \* Refillable bottle is empty or is loaded improperly
- \* Pump is not primed

## WARRANTY INFORMATION

This product is one year warranty of manufacturer's defects from date of purchase.

