


Wall Clock

Parts List

Ax1

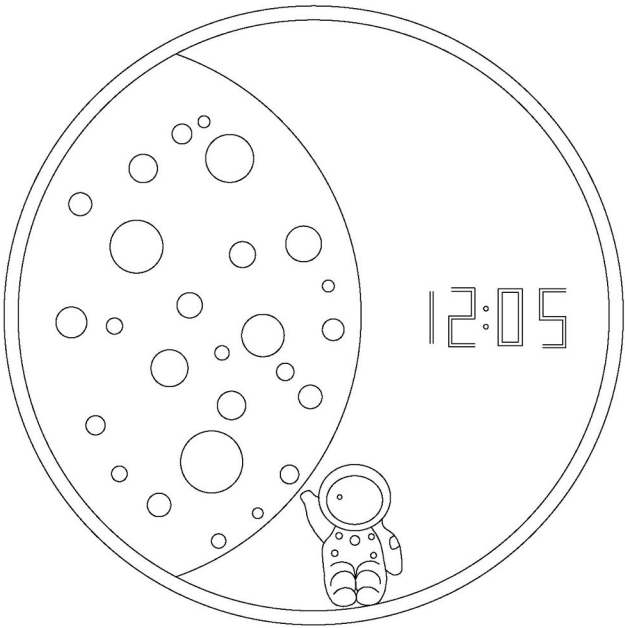

Bx2




Cx2




Exploded Views

EXPLODED

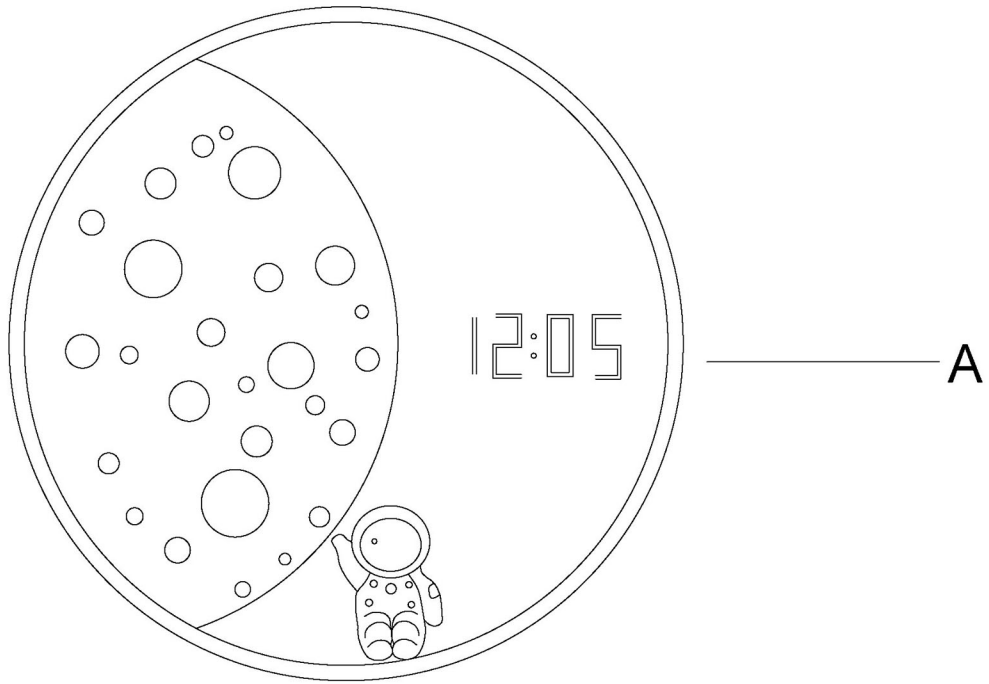


COMPLETE

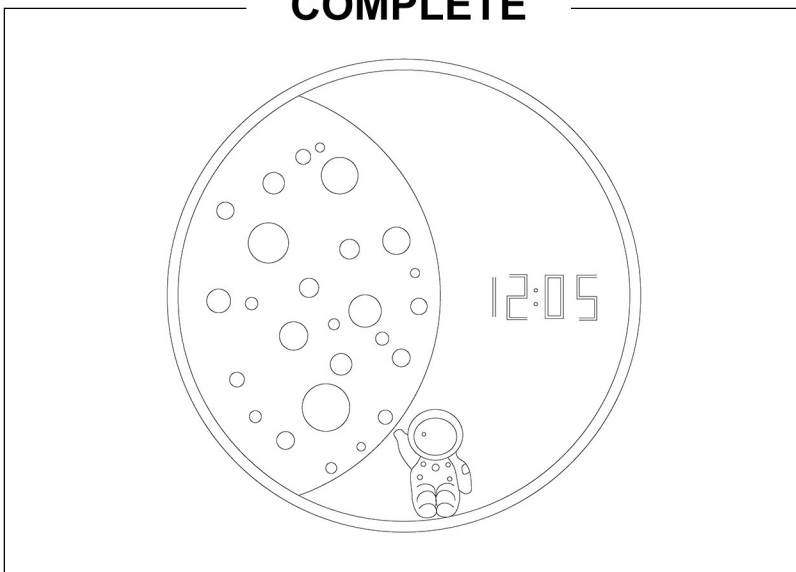

USER MANUAL

1. FUNCTION

- 1) 5 Function Buttons: MODE, ALARM, UP, DOWN, SNOOZE/LIGHT
- 2) LED time display: 12/24 hour modes selectable.
- 3) Dates display
- 4) Alarm function: set workday alarm and snooze
- 5) Temperature display: °C/°F, Temperature range: -10°C~50°C (14°F~122°F).
- 6) Display mode selection: hold the MODE button for 2s to select the display mode
- 7) Sound Control to wake up the LED display, hold the SNOOZE button for 3s to enter the sound control mode
- 8) Brightness adjustment: Press the UP button to adjust 3 levels of brightness
- 9) Night Mode (18:00-06:00), the LED light will dim automatically and can be set in the range of time
- 10) Memory function (CR2032)

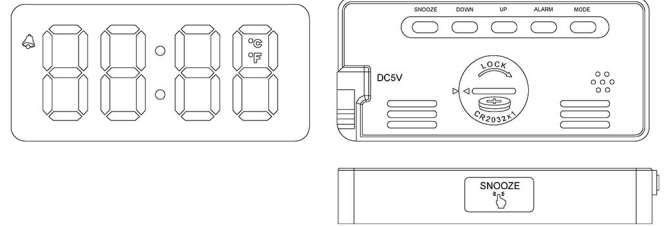

Please prepare the button battery.

2. OVERVIEW

- 1) Insert the USB cable, and the clock will display 0:00 in the default
Under time display, press the MODE button to enter the setting sequence:
Time display->Date display->Temp display->Night mode ON/OFF
- 2) Under time or date display mode, hold the MODE button for 2s to setting, press UP/DOWN to adjust the value, and hold UP/DOWN for 2s to speed adjust the value
- 3) Under time display mode, press the ALARM button to enter to alarm setting;
Under alarm mode, press ALARM to turn on or off the alarm
- 4) Under any display mode, hold the ALARM button for 2s to set, press UP/DOWN to adjust the value, and hold UP/DOWN for 2s to speed adjust the value
- 5) Under temperature mode, hold the MODE button for 2s until the BI sound is heard. The LED will switch display: Time(10s)->Temperature(3s)->Date(3s)->repeat
Hold the MODE button again until the BI sound is heard, it will back to time mode, and won't switch the display
- 6) Under temp mode, press the DOWN button to switch the temperature display between C/F units.
- 7) Sound control: hold the SNOOZE button for 3s to enter the sound control mode, the LED will show on 15s and then will enter sleep.

3. OPERATION

1) Time setting

- a. Under time mode, hold the MODE button for 2s to enter the time setting mode.
The setting sequence: "12HR/24HR" -> "Hour" -> "Minute" -> exit
- b. During the setting process, the setting article will flick.
- c. Press the UP button once and ahead to adjust the time onwards and the DOWN button to adjust the time backward.
- d. For 12HR format, with PM display in the afternoon, but no AM display in the morning time.
- e. Press the MODE button or without any operation within 10 seconds, the setting will automatically go back to the normal display.

2) Date setting

- a. Under time display, press MODE button to enter date mode, the default display is 2021/1/1
- b. Under date mode, hold the MODE button to enter the date setting mode.
The setting sequence: Year->Month->Day->exit
- c. During the setting process, the setting article will flick.
- d. Press the UP button once and ahead to adjust the time onwards and the DOWN button to adjust the time backward.
- e. Press the MODE button or without any operation within 10 seconds, the setting will automatically go back to the normal display.

3) Alarm setting

- a. Under any mode, press the ALARM button once to enter alarm mode
- b. Under alarm mode, press the ALARM button once to turn on or off the alarm
- c. Under time mode, hold the ALARM button for 2 seconds to enter the alarm time setting mode. The setting sequence: hour->minute->snooze(from 1-60 minutes)->choose working day alarm(1-7/1-6/1-5)->exit
- d. During the setting process, the setting article will flick.
- e. Press the UP button once and ahead to adjust the time onwards and the DOWN button to adjust the time backward.
- f. Hold the ALARM button for 2 seconds, and the setting article for MINUTES will flick.
- g. Press the UP button once and ahead to adjust the time onwards and the DOWN button to adjust the time backward.
- h. Press the ALARM button or without any operation within 10 seconds, the setting will automatically go back to the normal display.
- i. Press ALARM once to return the alarm mode, and press ALARM to activate/deactivate the alarm function.
- j. The alarm will BIBIBIBI buzzer for 1 minute and the icon will flick
- k. Press any button to silence the alarm. The AL icon is still there and will ring at the same time the next day. Press the ALARM button again, the AL icon disappears, and the alarm clock function is turned off.

4) Snooze Function

- a. The default snooze interval time is 5 minutes. The interval time is from 1-60 minutes.
- b. Press the UP button once and ahead to adjust the time onwards and the DOWN button to adjust the time backward.
- c. Press SNOOZE/LIGHT to silent alarm and active snooze function, the alarm icon will flick until it reaches to next alarm time.

5) Temperature Display

- a. Insert the power, and the clock will display the temp in real-time. The temp range: -10°C~50°C (14°F~122°F).
- b. Press the DOWN button to switch the temperature display between C/F units.
- c. Under temperature mode, hold the MODE button until the BI sound is heard. The LED will switch display: Time(10 second)->Temperature(3 second)->Date(3 second)->repeat.
- d. Hold the MODE button again until the BI sound is heard, it will back to time mode, and won't switch the display.

USER MANUAL

3. OPERATION

6) Sound Control


- a. Hold the SNOOZE button for 3s to enter the sound control mode, and will light on 15s. You clap or make some noise to wake up the clock if the clock enters sleep mode.
- b. The clock still works when it is in sleep
- c. Press any button to light on the clock
- d. The clock will light on when the alarming

7) Night Mode function


- a. Night Mode function means the LED display will automatically lower the luminance during nighttime.
- b. Under any mode, press UP button to adjust 3 levels of brightness
- c. Under time display mode, press the MODE button 3 times and enter Night Mode. Press UP/DOWN to ON/OFF the night mode function.
- d. Default night mode period is 18:00 to 6:00.
- e. Under the Night mode function "ON", hold the MODE button to enter the night mode setting process; Setting sequence: Start hour->MODE->Start minute->MODE->stop hour->-MODE>stop a minute.
- f. Under power save mode, the clock will light on 16s

Digital Display Instruction


Step 1

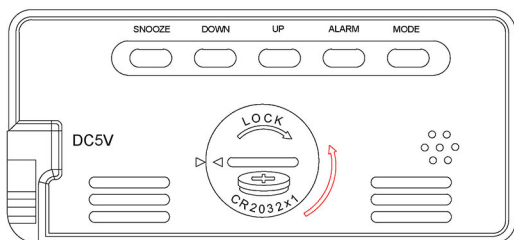


Step 2

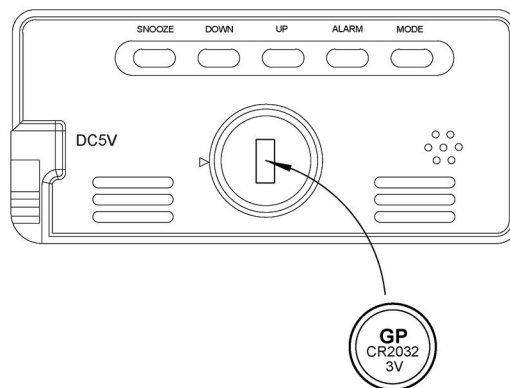

Step 3

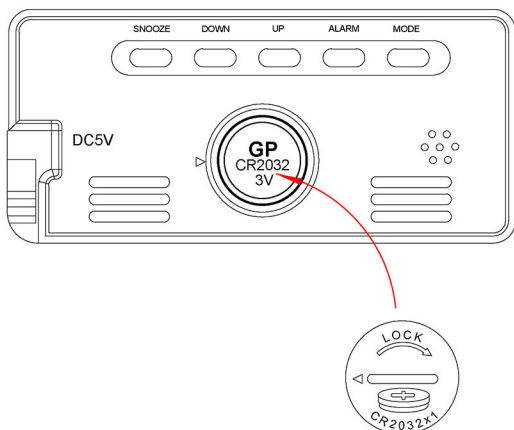


Step 4

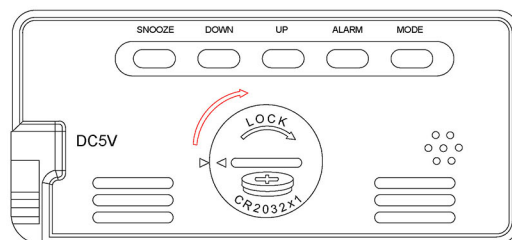


Remote Control Instruction


Step 1

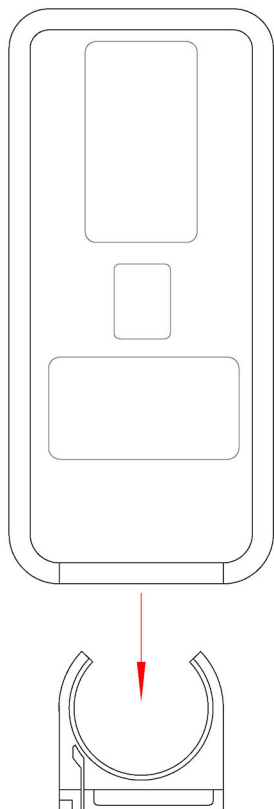

Step 2

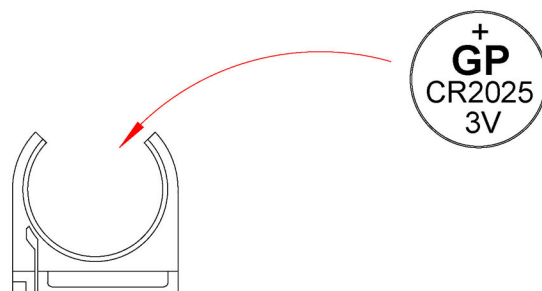



Step 3

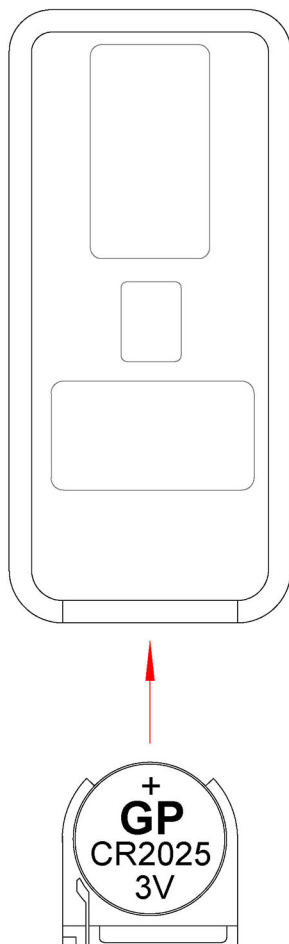

Batteries Instruction


Correct Use Method

The use of button batteries.

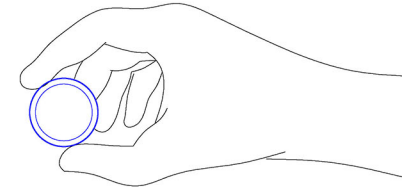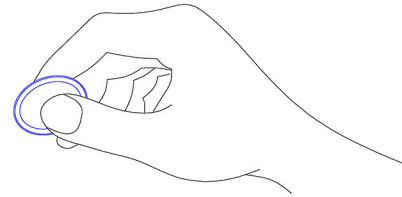

Not pinching the positive and negative poles.

Remote Control Instruction

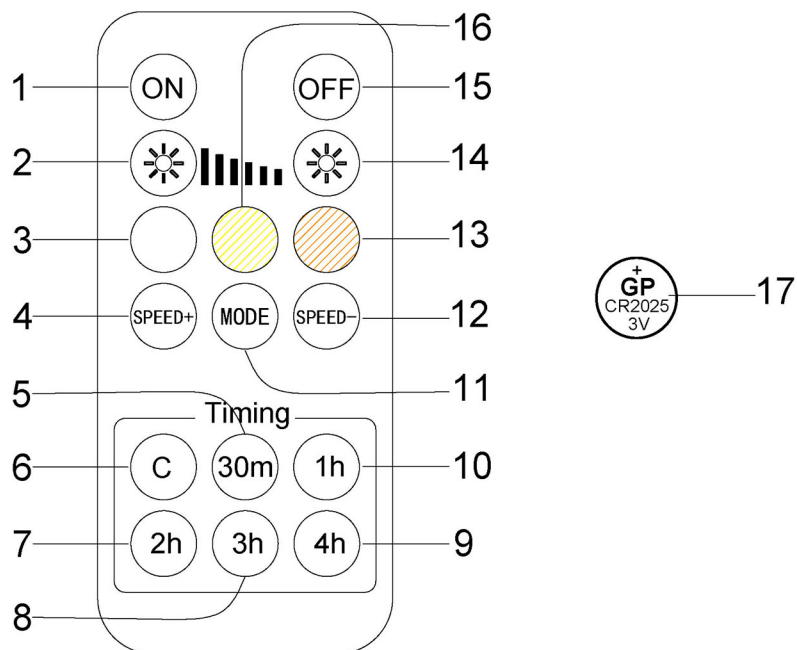

1. Turn On

Press this key to turn on unit.

2/14. Brightness Adjust (Dimmer)

Adjust lighting mode brightness. Press

* to increase brightness
and press * to decrease brightness.

3/13/16. Lighting mode

Switch to lighting mode from dynamic mode

Switch to brightness lighting mode.

4/12. Speed Adjust

Adjust playing speed of dynamic modes. Press SPEED
+ to increase speed and press SPEED- to decrease.

5/7/8/9/10. Timing Adjust

Switch to 30m, 1h, 2h, 3h, 4h
adjust timing

6. Cancel Timing

Switch to cancel all timing

11. Dynamic Mode Adjust

Switch to dynamic mode from
lighting mode, or switch
between different dynamic modes.

15. Turnoff

Press this key to turn off unit

17. Button cell