



Wall Accent

Parts List


Ax1

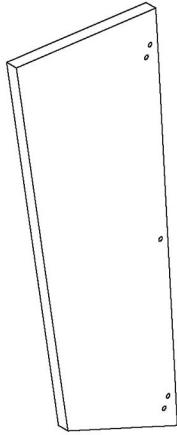


Bx1

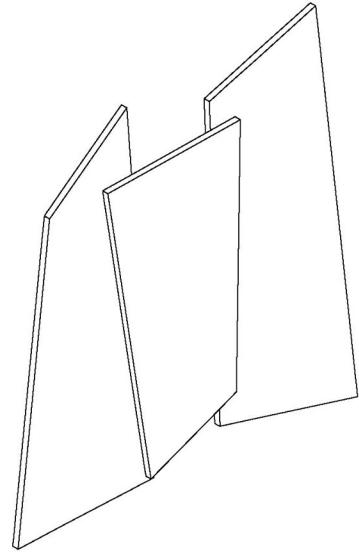

Cx1

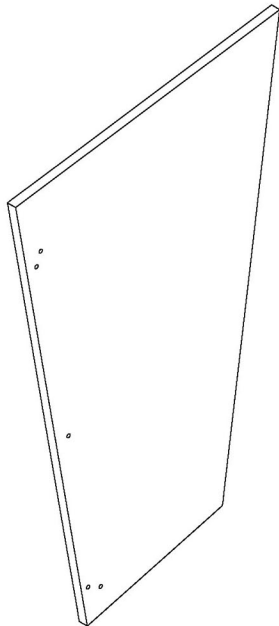

Dx1

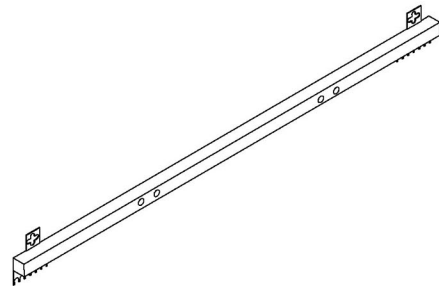

Accessories List

Ex10



Pre installed accessories

Fx10




Pre installed accessories

Gx4




Exploded Views

EXPLODED

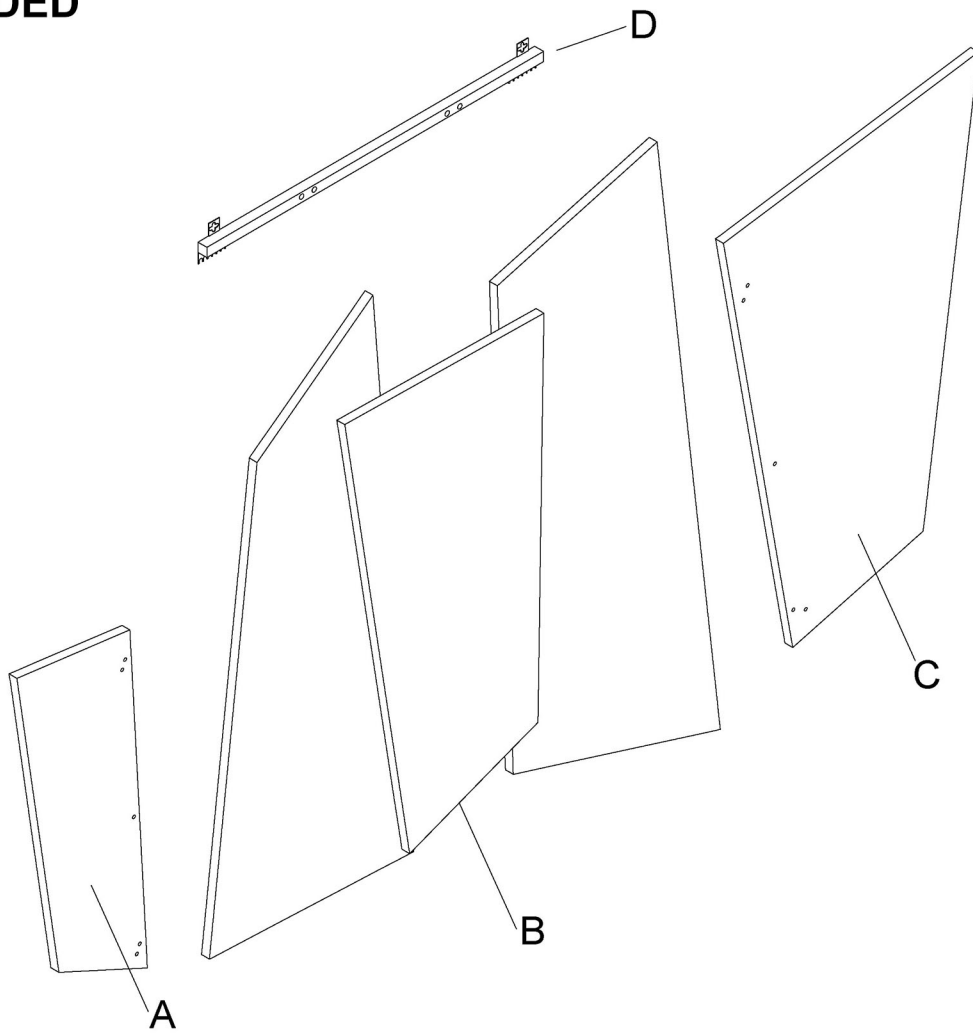


COMPLETE

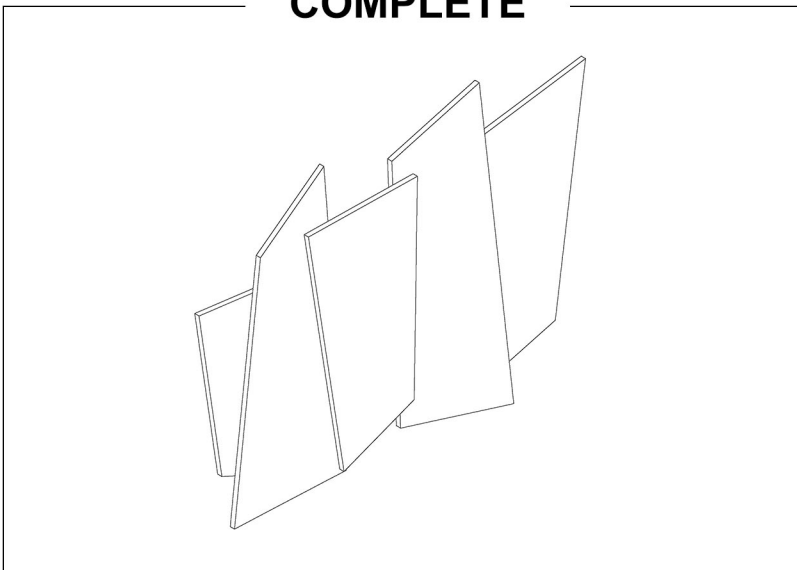

Installation Steps


Step 1

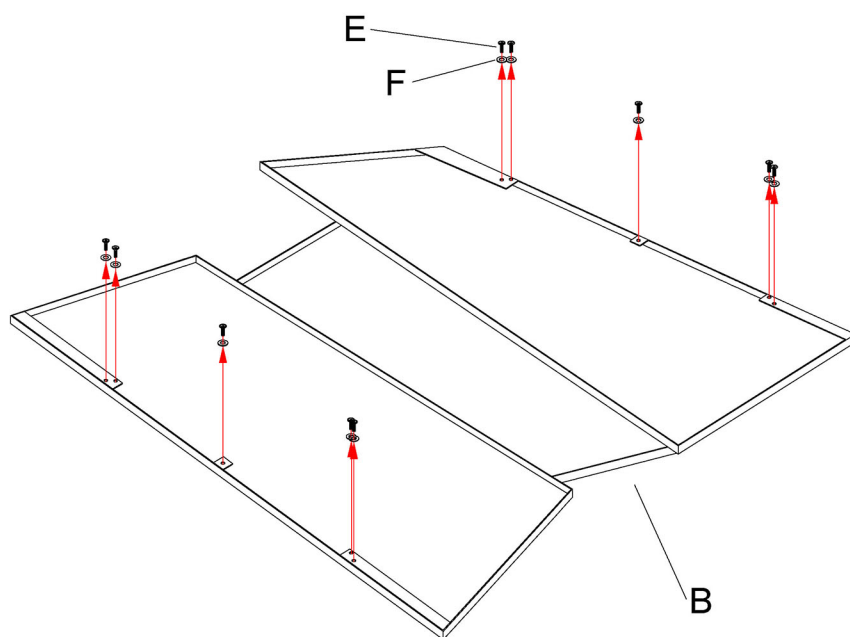

Step 2

E  x10


E  x10

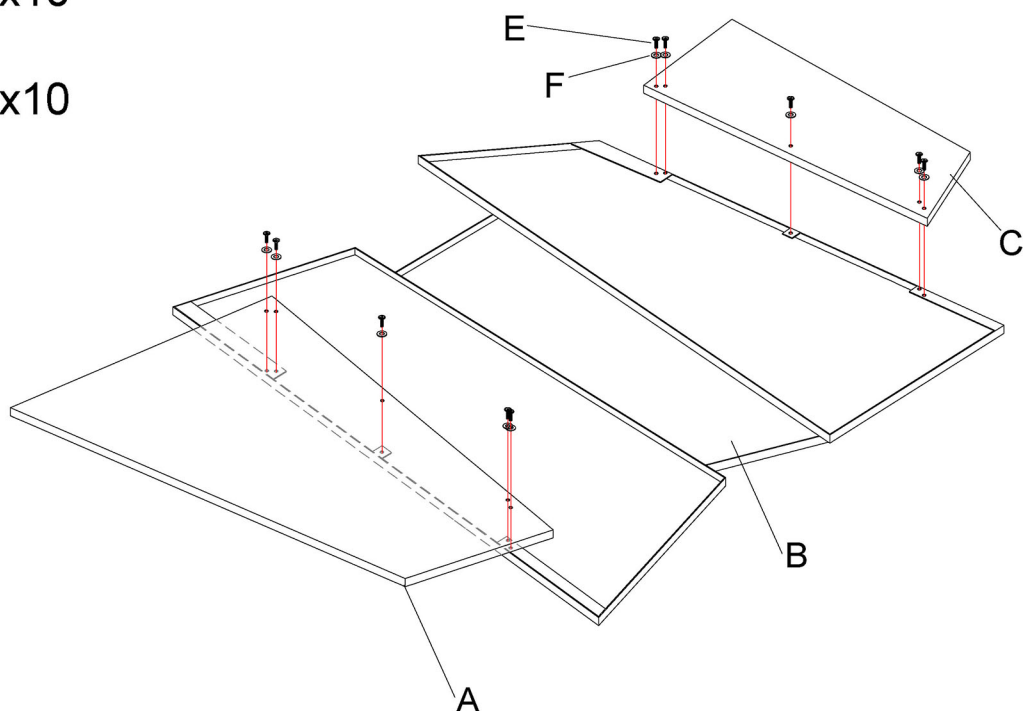

Installation Steps

Step 3

G  x4

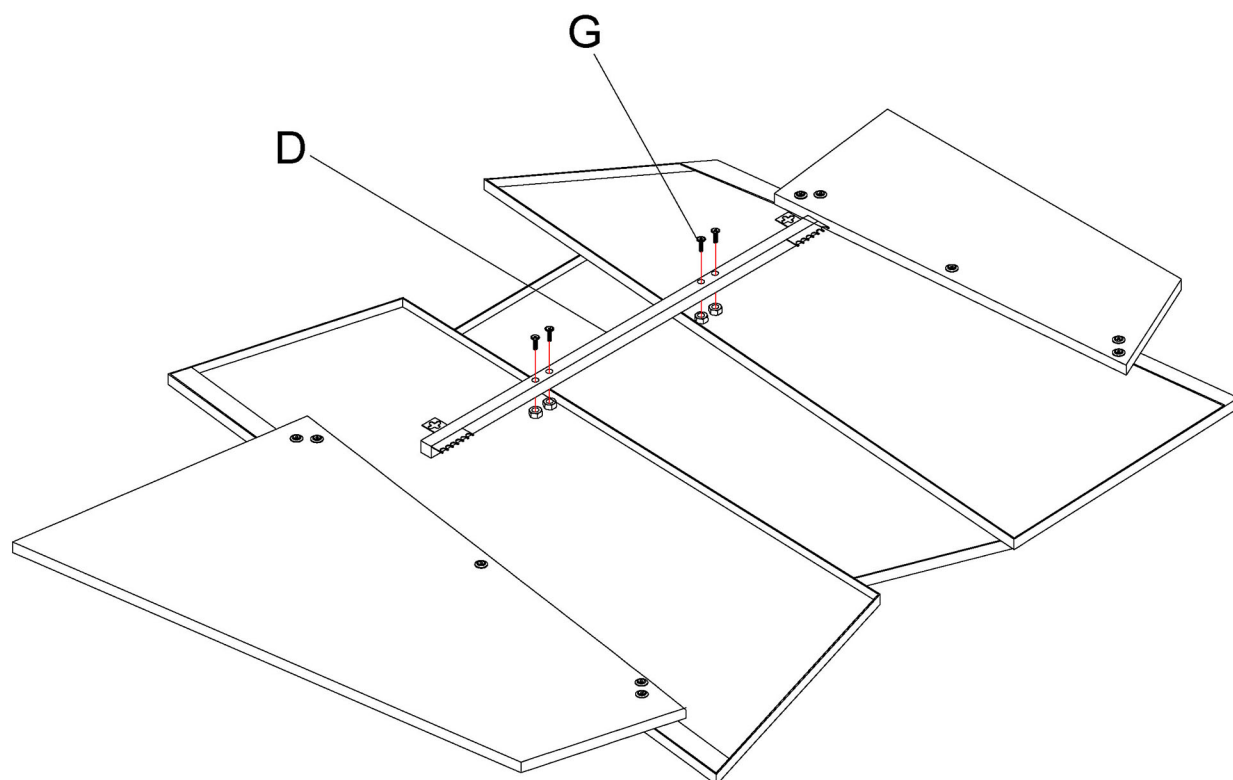


Wall Accent


Hanging Instruction

- Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us.
- Assemble this item on a soft surface, such as carpet to protect the finish.
- During assembly, keep any small part out of reach of children as they may be fatal if swallowed or inhaled. Keep plastic packing bags out of reach of children to avoid any potential danger, such as suffocation.
- Avoid sharp objects and corrosive chemicals to prevent damage to the product or bodily injury.
- Clean with damp cloth. To protect the finish, avoid use chemicals and household cleaners.


Wall clock installation:

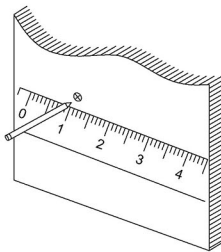


Step 1: Mark the hole position on the wall with a pen,

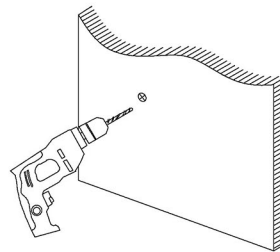

Step 2: Punch holes at the marked positions with an electric drill, the depth of which is the length of the expanded rubber cap.

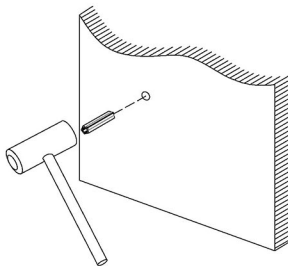

Step 3: Plug the expansion rubber cap into the hole.

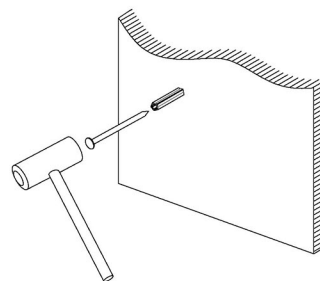

Step 4: Nail the screw into the expanded rubber cap, with the nail head reserved for 5mm, and hang the product back hook on the screw to finish.

This summary may not include every detail of all variations and considered steps. Please contact us when further information and helps are needed.

You may need to purchase extra specific mounting set if the installation is for plaster wall.