



Picture 1

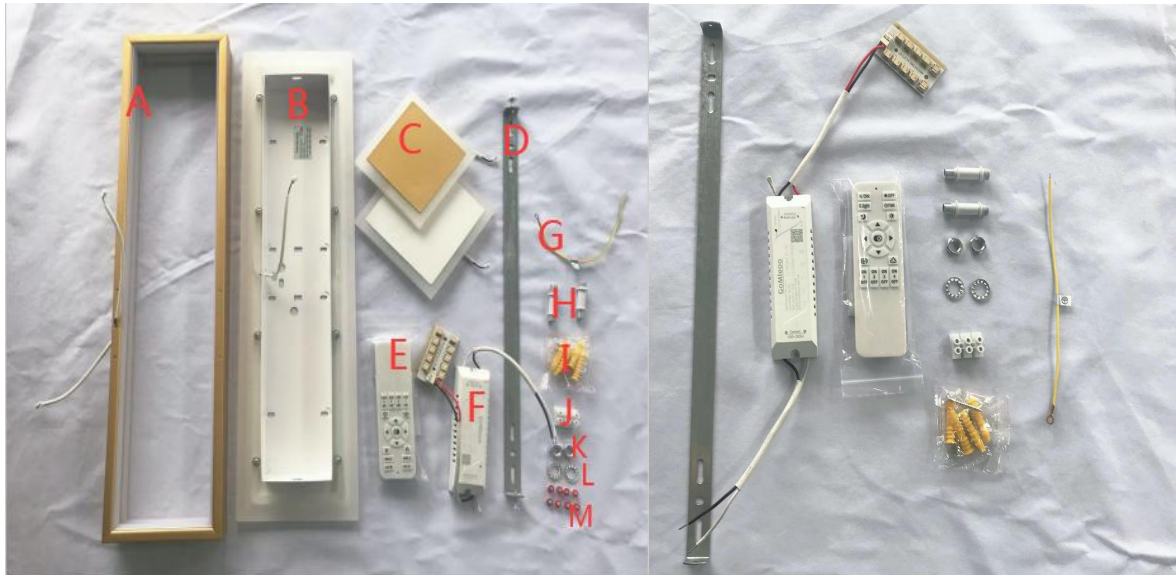

Picture 2





Picture 3

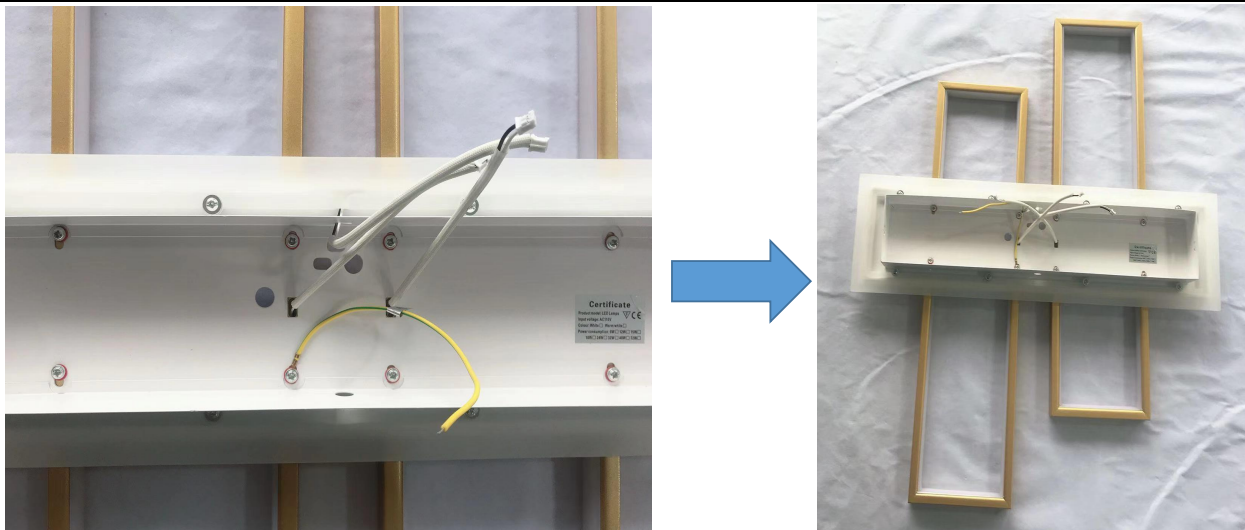


Step 2: As shown in the picture, wire the lamp frame A into the suction top plate B, and fixed with screws.

Picture 4

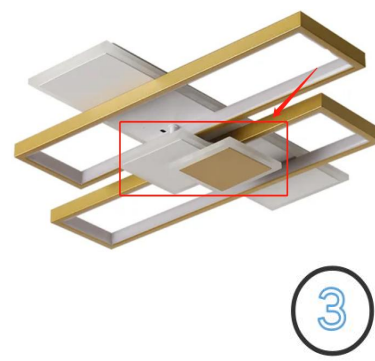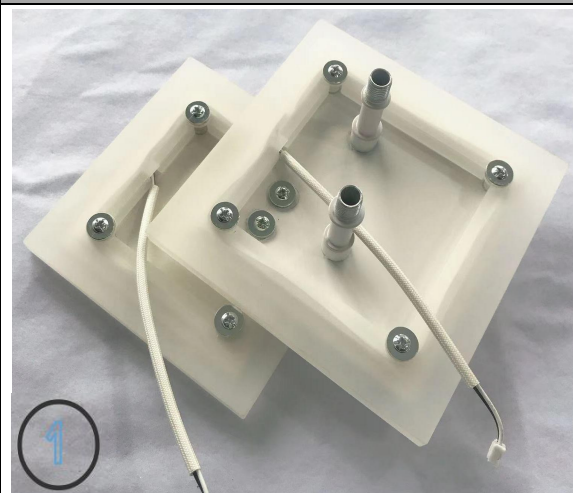

Step 3: As shown in the picture, tighten the short side thread of the H thread rod down on the light frame C, and then the wire is inserted into the suction top plate B and fixed with nut.

Picture 5

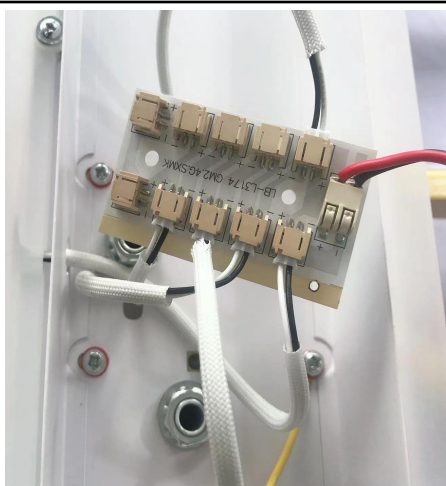


Picture 6



Step 4: Connect the driver and wire as shown in the figure, and connect one end of the red and blue wire to the circuit board (note that the convex side of the terminal is inserted upward into the interface of the circuit board).

Step 5: As shown in the picture wiring, insert one end of the black and white wire into the terminal, and the yellow and green wire is the ground wire (If you connect to the home power supply, there is no need to distinguish between the zero line and fire line).

Picture 7

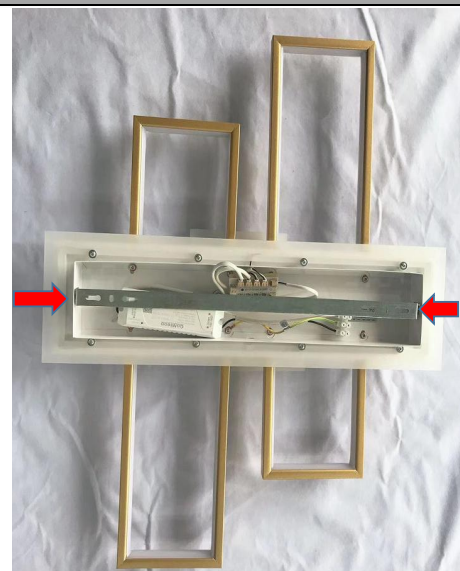

Picture 8



Step 6: As shown fix the top plate o the hanging plate with screws.

Complete the installation.