

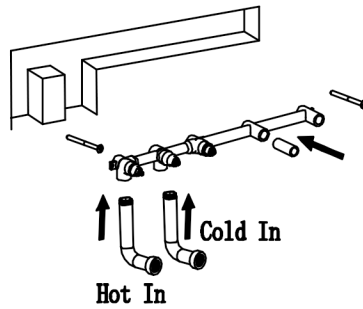


Installation Steps


The valve body excavates hole size.
L570 * H70 * D75-85 mm (L22.44 *
H2.75 * D2.95-3.34 IN)

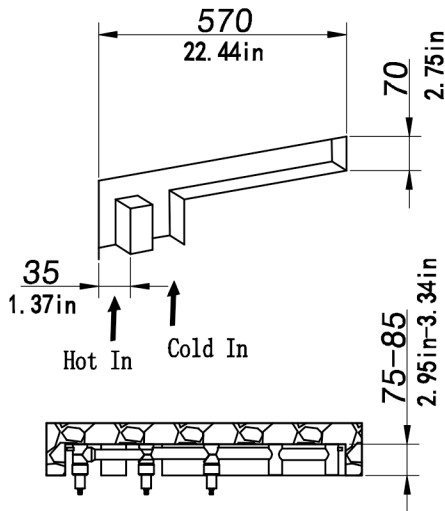


2. Turn off the main switch, adjust the cold and hot water inlet interface and the upper and lower water outlet interface, and use screws to fix the valve body in the wall.

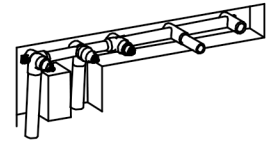


3. The installation in the wall is completed and the switch is opened for sealing test.

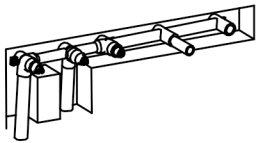


4. Installation panel: the valve body is fixed, and the panel is covered on the valve body.

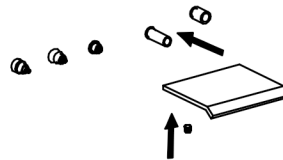


5. Install the lower water outlet part: use the connecting pipe connecting the valve body of the outlet to the lower interface.

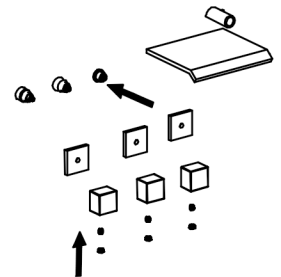

6. Install handle: put three handles on top and lock with hexagonal wrench.

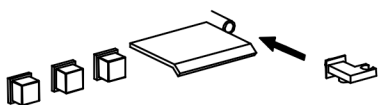

7. Install the handheld shower holder.

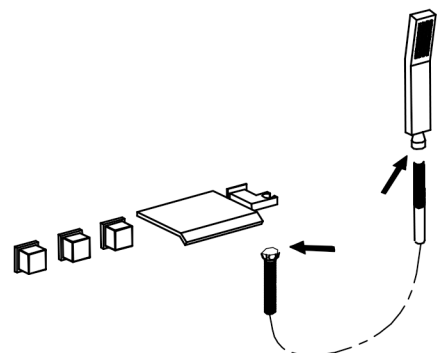

8. Install rain shower and hand shower: install the rain shower on the shower arm and the hose connect to the lower water outlet and hand shower.