



Roman Bathroom Sink Faucet Installation


INSTALLATION MANUAL Tools You Will Need:

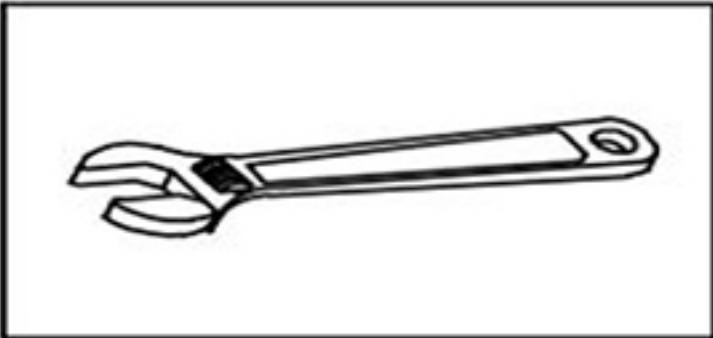

Adjustable wrench

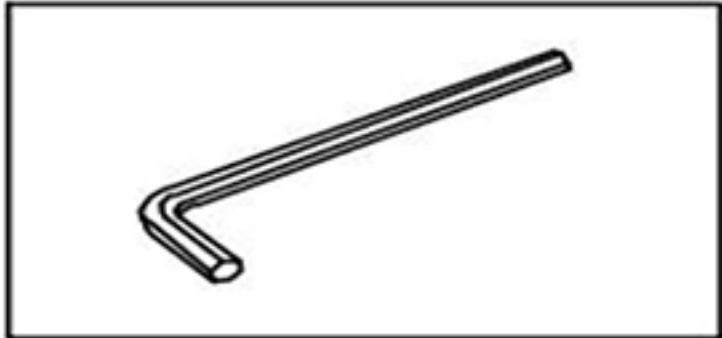

Hexagon wrench

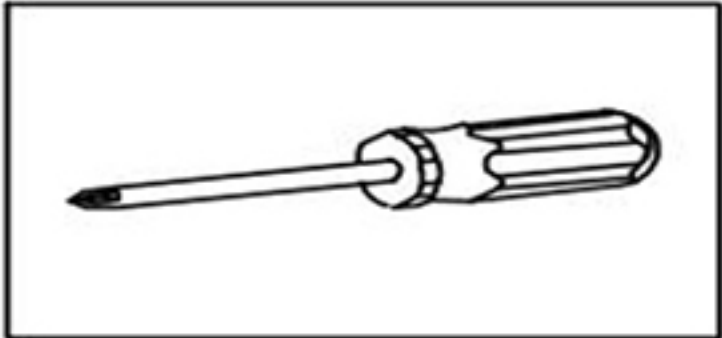

Philips Screwdriver


Before the Installation

1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. Shut off the main water supply prior to beginning installation.
4. Do flush the water supply lines to remove any dirt and debris before installation **(IMPORTANT)**.
5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance

1. Rinse with clean water and dry with a soft cloth.
2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
3. Do not use cloth with a coarse surface.


Parts List

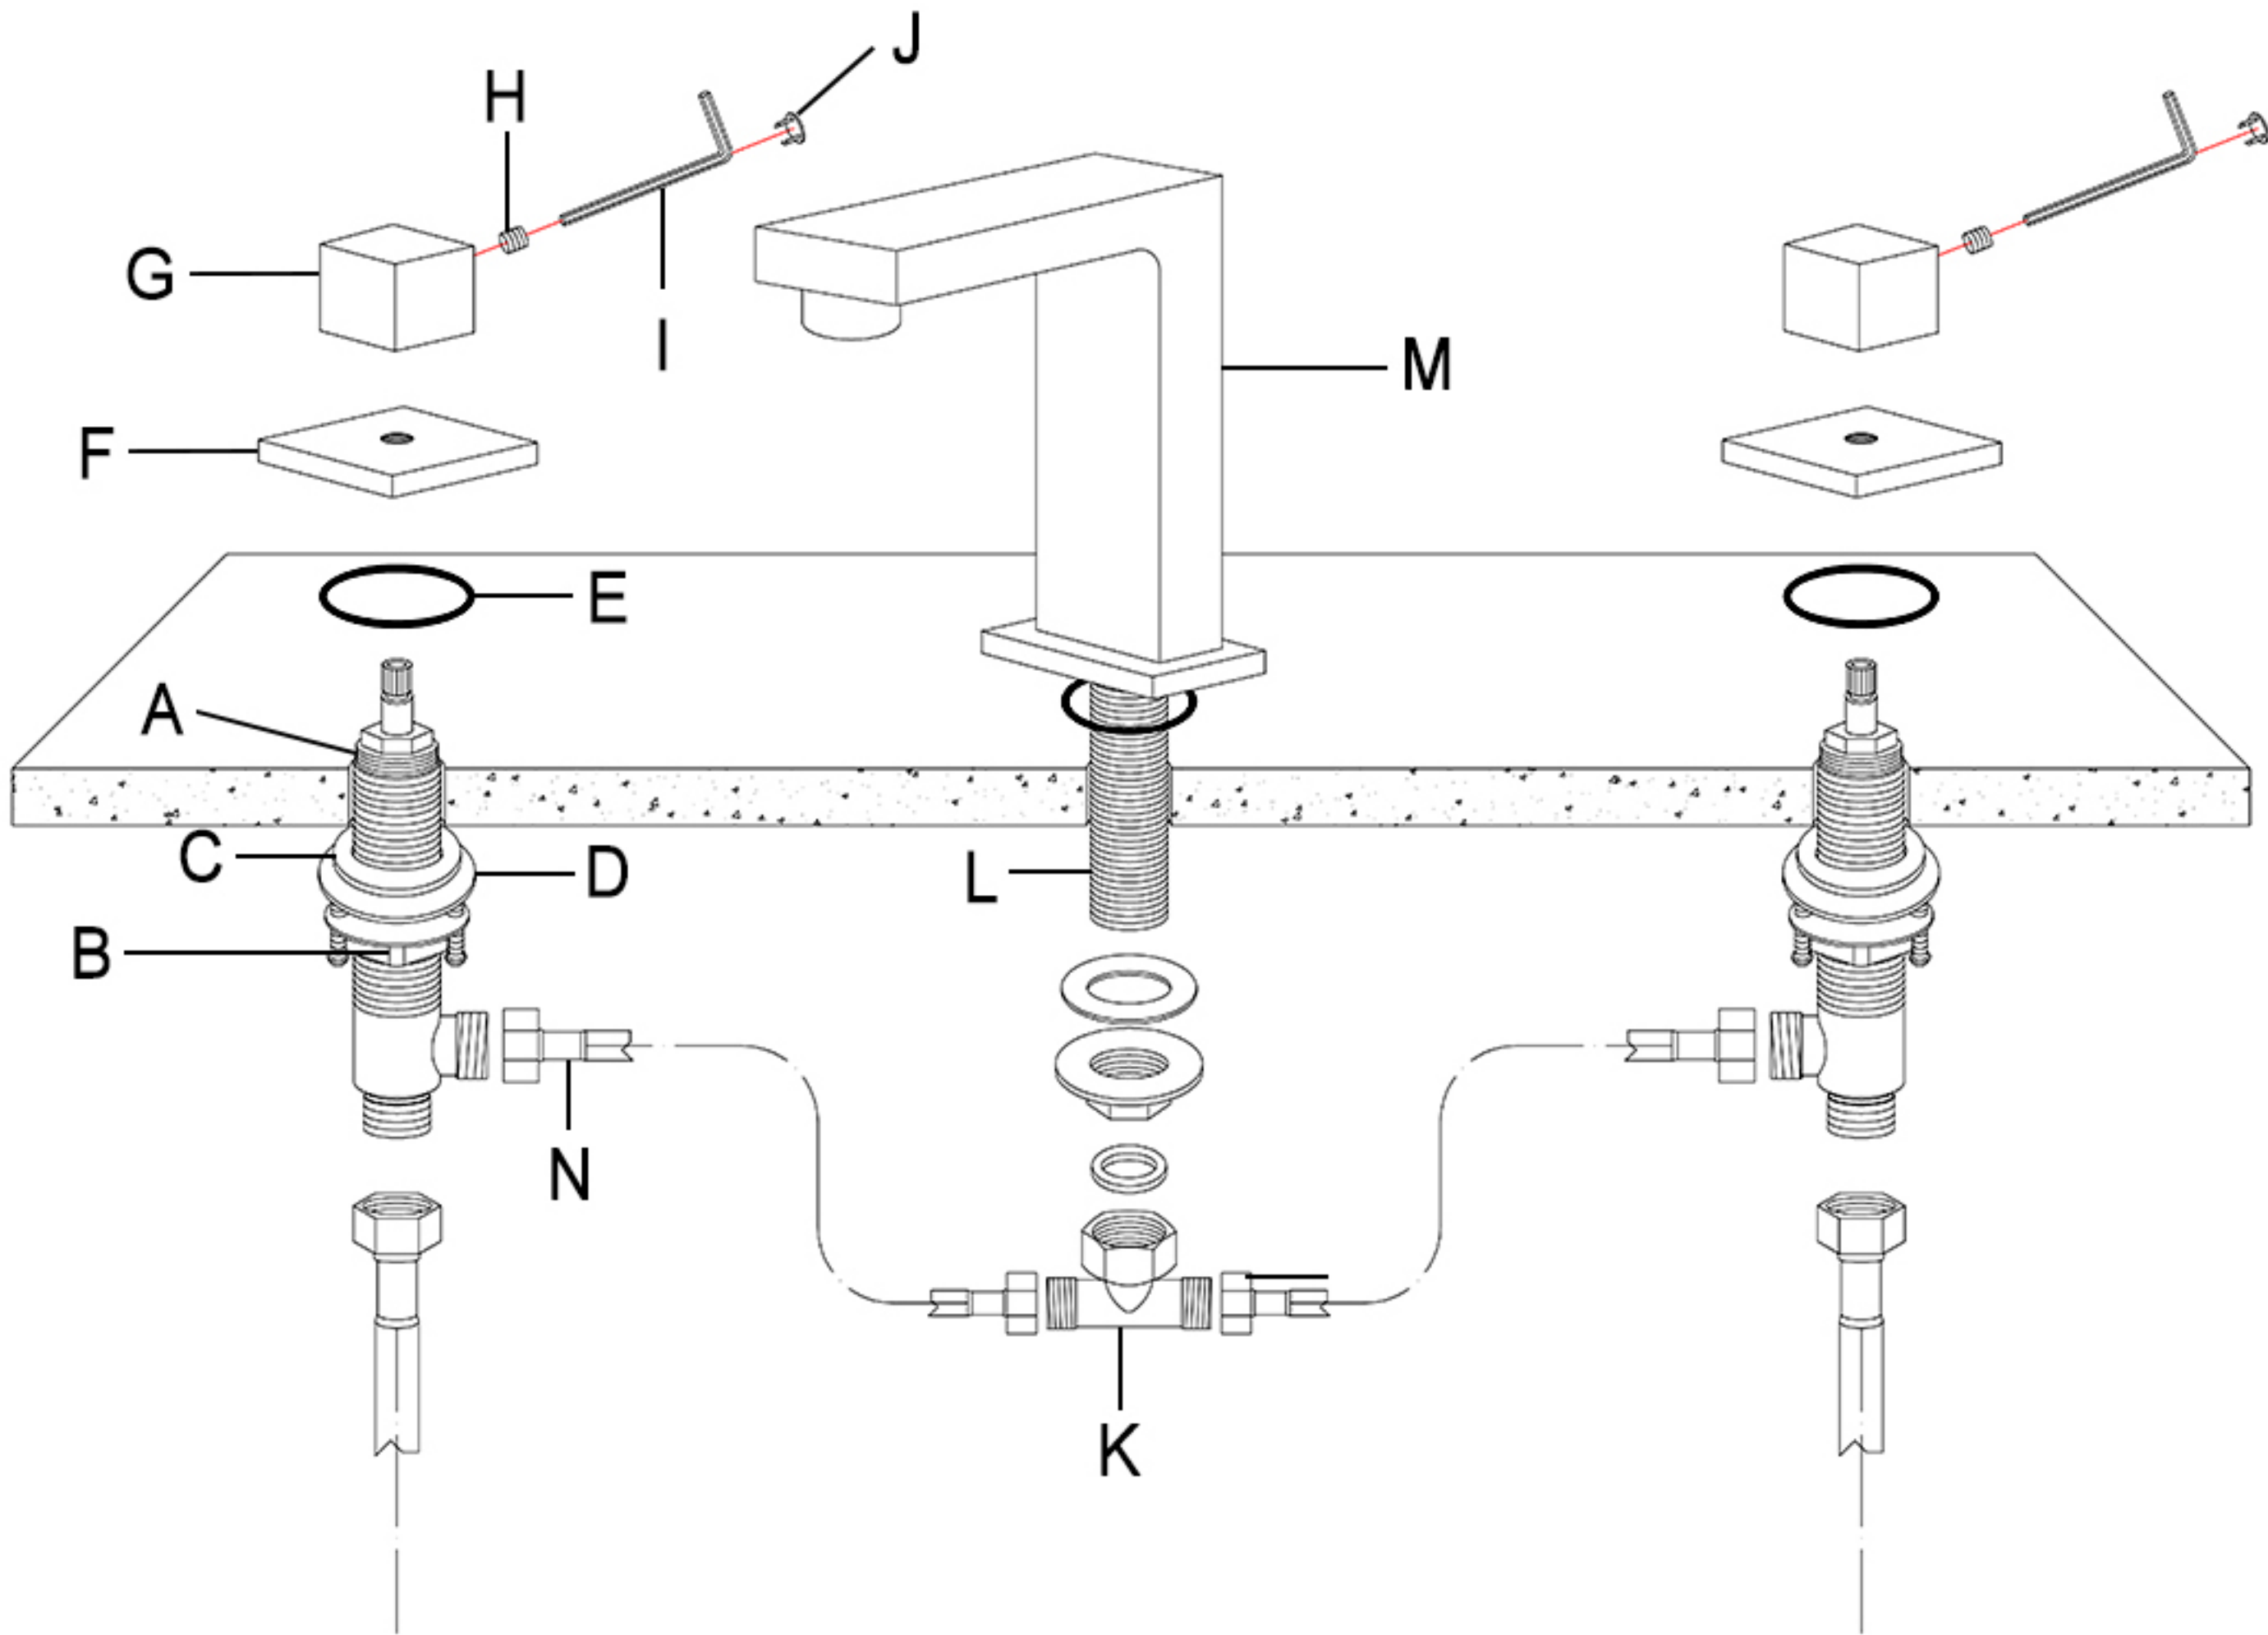


Part	Name	Quantity
A	valve	2
B	mounting nut	3
C	rubber washer	4
D	metal washer	2
E	O-ring	3
F	base plate	2
G	handle	2

Part	Name	Quantity
H	set screw	2
I	Allen key	2
J	indication button	2
K	triple tube	1
L	threaded pipe	1
M	spout body	1
N	waterlines	2


Installation Guide

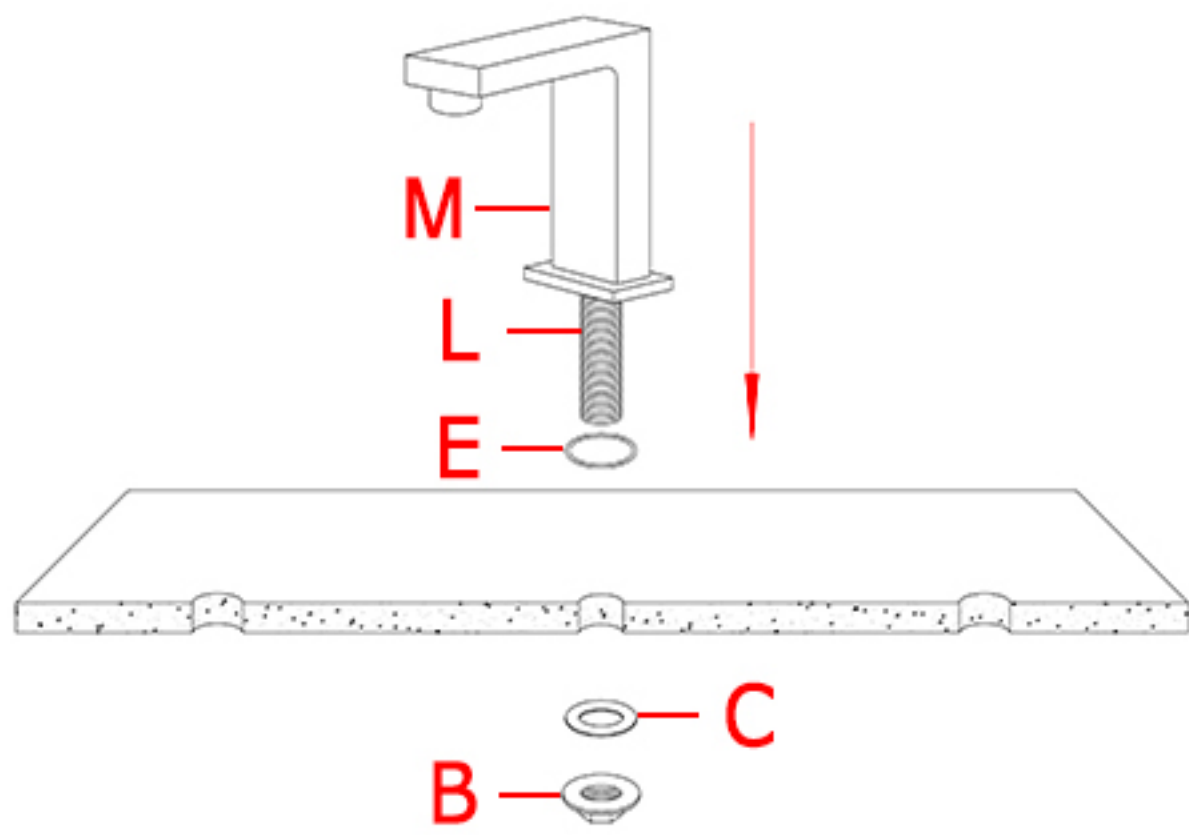


1. Fit O-ring (E) into the bottom groove of spout body(M) and insert spout body (M) into specified drill hole on the counter top. Install rubber washer (C) to the threaded tail pipe (L) of the spout body (M) from underneath the counter top and then screw the mounting nut (B).

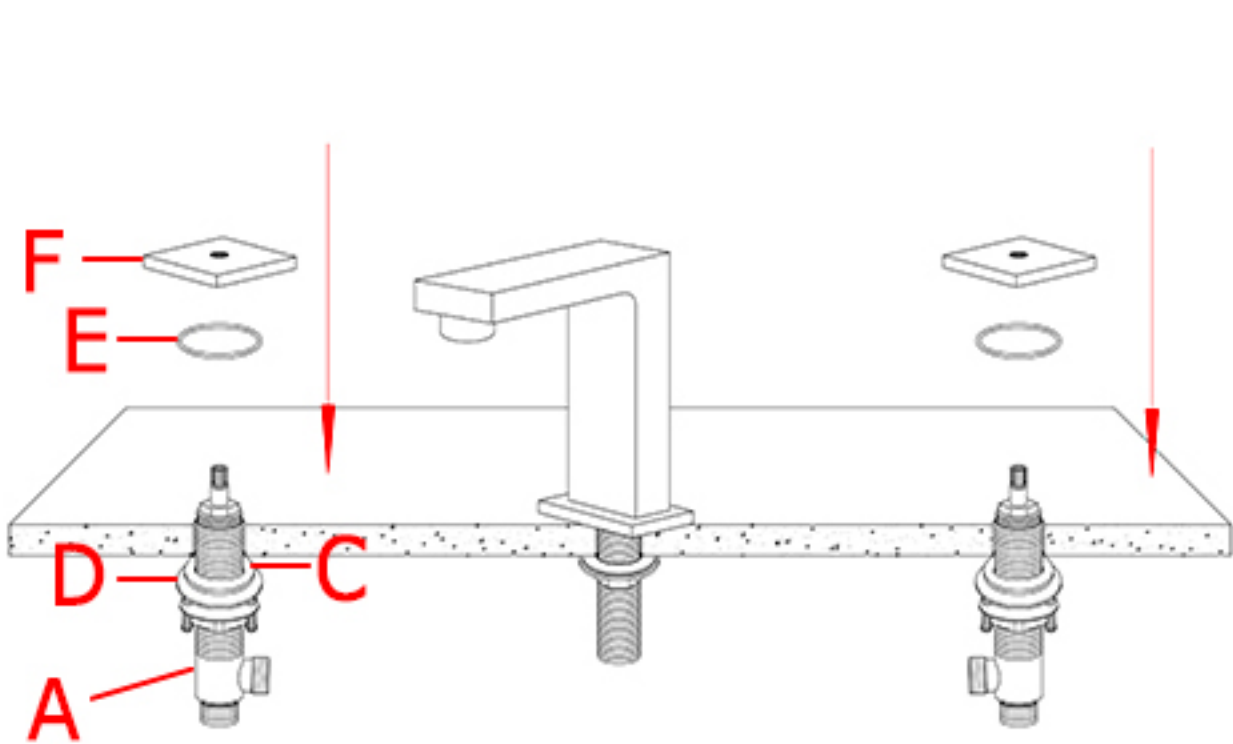


2. Add rubber washer (C) and metal washer (D) into the valve (A). Then install valve (A) into specified drill hole underneath the counter top. Fix O-ring (E) into the base plate (F). Then screw base plate (F) into valve (A).

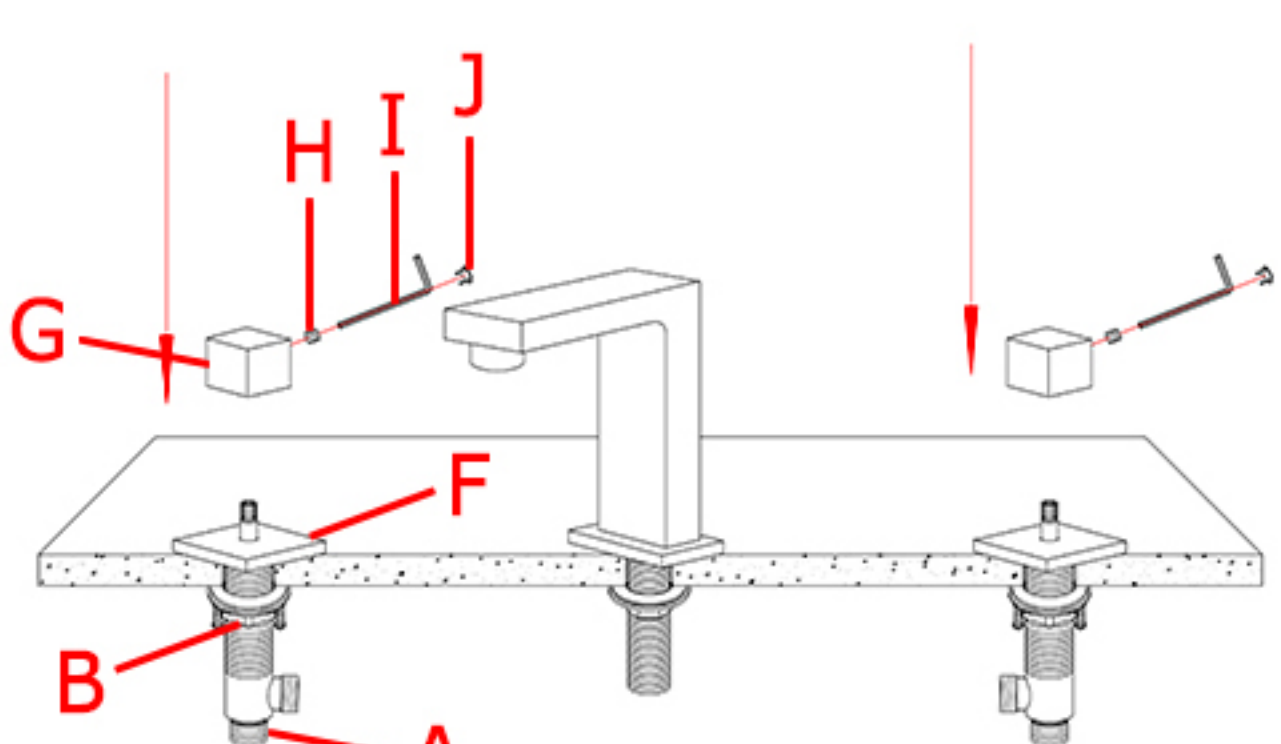


3. Fix the handle (G) into base plate (F). Adjust the height and position of valve (A), then screw mounting nut (B) to tighten valve (A) underneath counter top securely. Tighten set screw (H) with Alley key (I) to fix the handle (G) and then put the indication button (J) on.

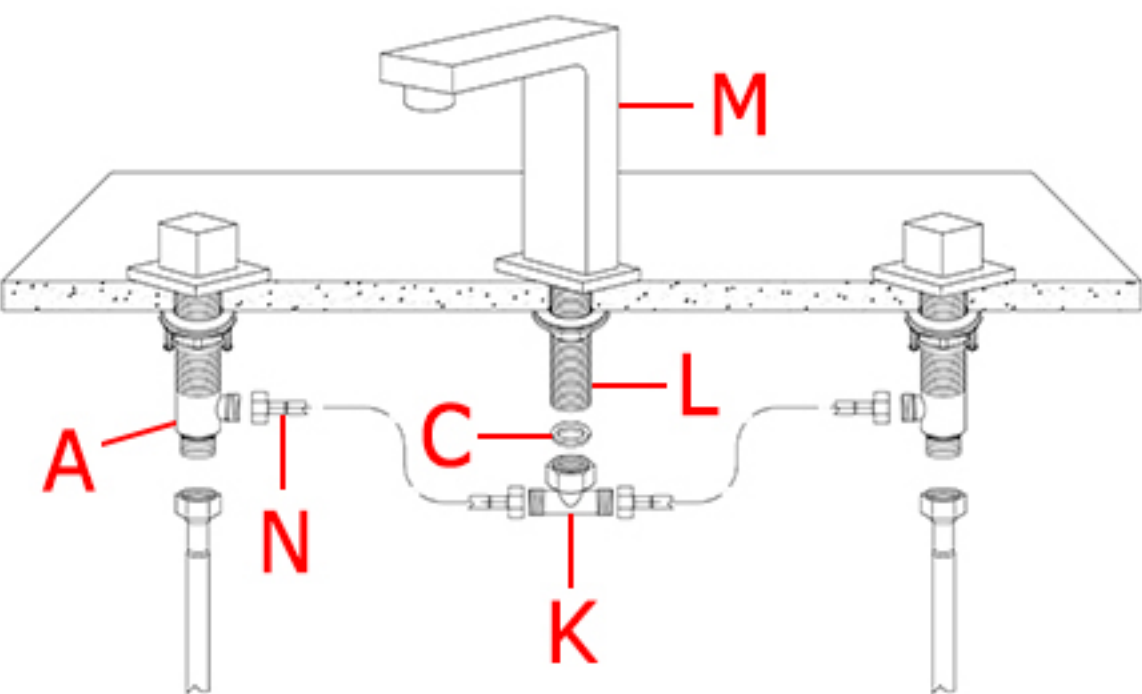

4. Install the triple tube (K) by screwing onto the threaded pipe (L) of the spout body (M). Make sure to add the rubber washer (C) inside of the female end of the triple tube (K). Screw waterlines (N) into tripe tube (K) and valve (A) according to the picture.

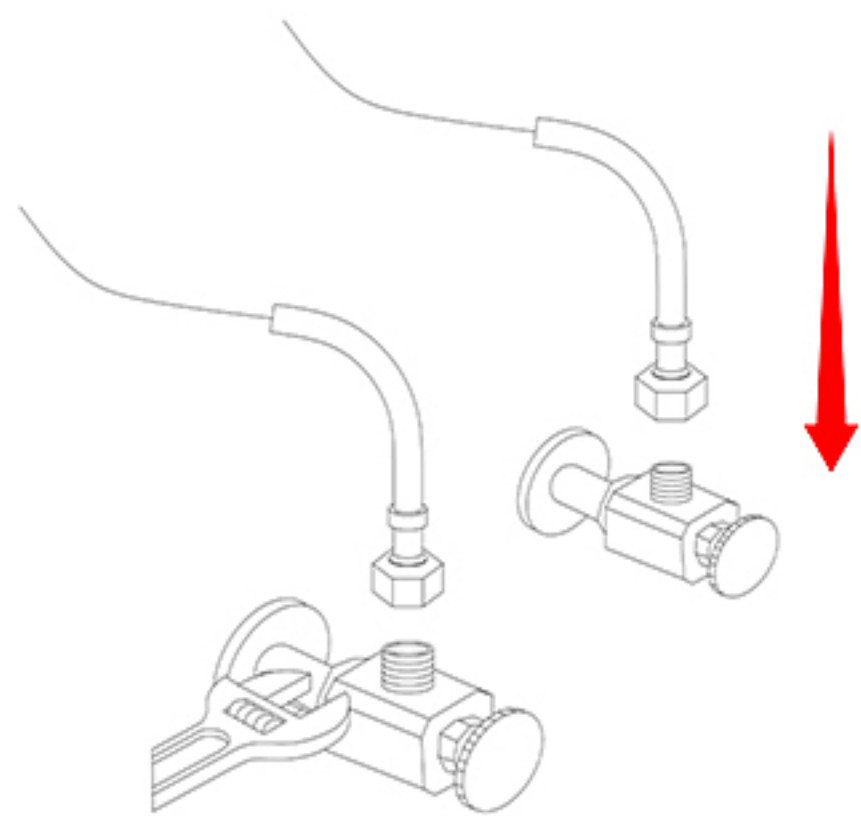

5. Connect waterlines **(not included)** onto the bottom of valve and then to main water supply line.

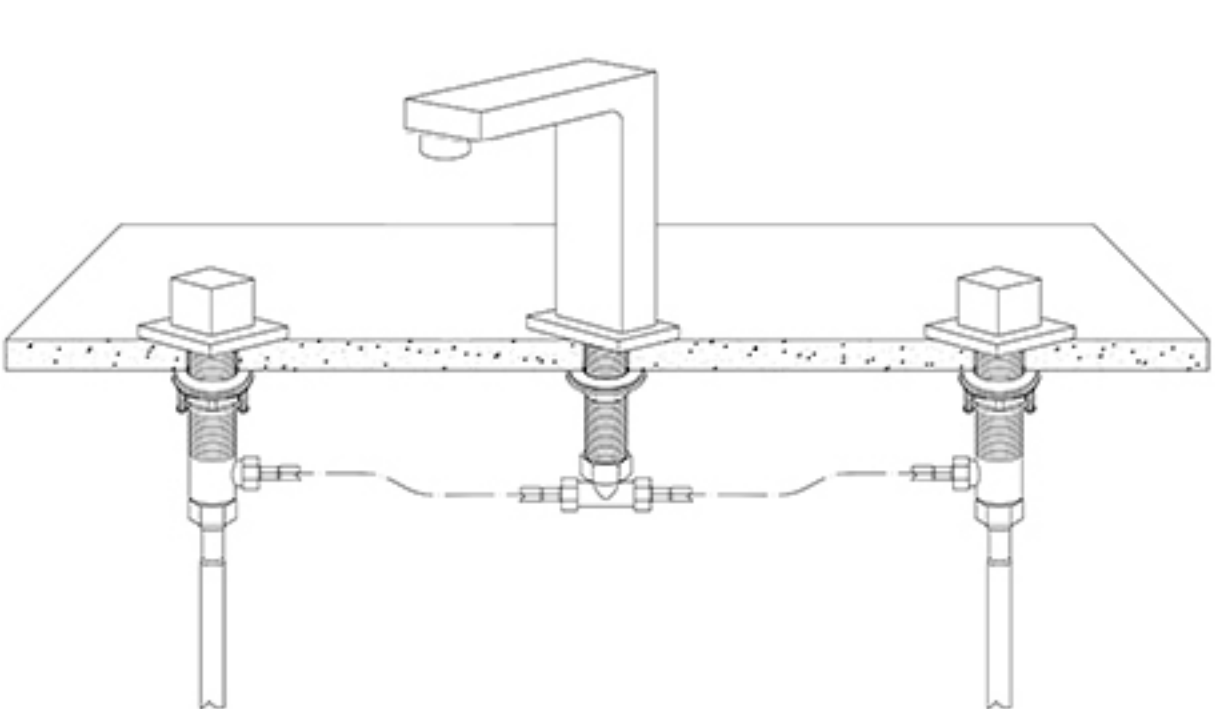

6. Turn faucet on for 1 minute to flush any debris.

Troubleshooting

Problem	Possible Cause	Corrective Action
Water does not shut off completely.	1. O-ring is not seated correctly or worn. 2. Cartridge may be defective.	1. Reseat or replace O-ring. 2. Replace cartridge.
Leaks at waterline connection.	1. Worn or broken washer. 2. Faucet body may be defective.	1. Replace washer. 2. Replace faucet (contact us for the replacement).
Leaks from handle.	1. Cartridge may come loose. 2. Cartridge may be defective.	1. Reseat cartridge tight. 2. Replace cartridge.
Leaks at hose connection.	1. Hose connection is loose	1. Tighten hose. 2. Replace hose.
Leaks at shower valve connection.	1. Connection may come loose or not sealed completely. 2. Defective shower valve inlet or outlet connector.	1. Check connections. 2. Replace valve body.
Diverter knob does not work.	1. Diverter cartridge may be defective.	1. Replace cartridge.
LED light does not Light or noisy LED showerhead.	1. Defective LED generator.	1. Replace LED spray head (for kitchen faucet). 2. Replace LED threaded pipe (for seperate faucet spout). 3. Replace LED generator (for others).
Low flow.	1. Check for water pressure problems. 2. Aerator may be dirty or clogged.	1. Clean or replace the aerator. 2. Remove waterflow restrictor if available. 3. Install booster or pump (if applicable).