


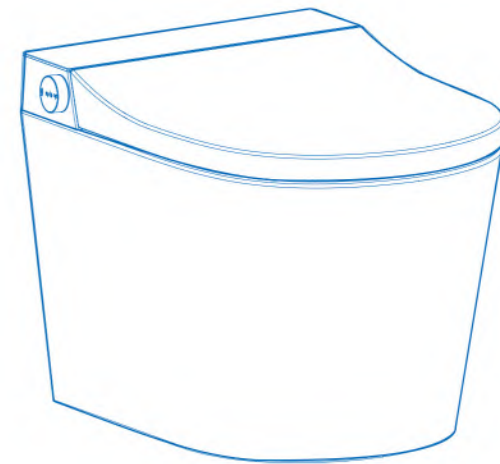

Smart Toilet Installation Guide

Intelligent toilet manual precautions for use

Content

Before Using

Safety Instructions.....	01
Precautions for Use.....	06
Parts Identification.....	07

Toilet Installation

Installation Guidance.....	09
Installation Steps for Water Tank Sets.....	10
Installation Steps for The Toilet Set.....	14
Remote Control Installation.....	17
Trial Run.....	17

Instruction for Use

Side Control Knob Instruction.....	18
LED Display Screen Instruction.....	18
Remote Control Instruction.....	19
Usage Instruction.....	20
Automatic Sensing Function.....	21
Advanced Function.....	22

Appendix

Remote Control Battery Replacement.....	22
Usage Instruction.....	23
Fault Judgement And Solutions.....	24
Daily Maintenance.....	26
Technical Support.....	27
List of Materials.....	28

Safety Instructions

Please read the safety instructions carefully before using.

The precautions listed here are important in relation to safety and should always be strictly observed.

The meaning of the diagram is as follows

	Caution	It means that if this sign is ignored and product handled improperly, the users will be dead or be injured seriously.
	Note	It means that if this sign is ignored and product handled improperly, the users will be injured seriously or subject to property loss.

Examples and descriptions of the Diagram

	- It means prohibition. - The left diagram indicates "Disassemble prohibited"
	- It means that it must be observed. - The left diagram indicates "strictly abide by"

Caution



Do not spray water or detergent on the main body or electronic plug

No sprinkling

- May cause fire or electric shock.
- May cause breakage or damage to the toilet seat or water seepage in the room.

This product belongs to electronic products, please do not install the product in an easily splashed or humid place. Please install an exhaust fan and other exhaust equipment to ensure unobstructed air flow in the bathroom

- Otherwise, it may cause a fire or an electric shock.

Please set the socket for power wiring as follows

- If the wiring is not as follows, it may cause a fire or electric shock.

a. Please use high inductance, fast type leakage switch (rated induction current below 10mA) or protect with insulated transformer (above 1.5KVA, below 3KVA) for the circuit of socket.

b. The installation position of the socket must be more than 0.3m from the ground and as far away from the bathtub as possible.

The grounded wire equipped with the product must be grounded, please be sure to connect to the ground wire

- Otherwise, it may cause an electric shock.

Note: The grounding treatment mentioned here means that the grounding resistance is below 4Ω protective earthing, and the grounding wire uses copper wire of 1.6 mm or more in diameter.

When using in the bathroom

Please make sure power supply and the plug is sealed with silicone to prevent the water

- Otherwise, it may cause a fire or electric shock.

Caution



Do not use in humid places

Do not install this product in humid places such as Shower room. (Prevent water from entering electronic components)

- May cause a fire or electric shock.



Disassemble prohibited

Never disassemble or repair or modify by yourself

- May cause a fire or electric shock.



Prohibition

Malfunctioning products are forbidden to use

- Under the following circumstances, please unplug the power supply and close the water valve to stop supplying water.

Fault refers to:

- The main body or water pipe leaks water.
- The product is cracked or damaged.
- There is abnormal noise or peculiar smell.
- The product smokes and abnormally hot.
- Toilet blockage.

- Fault products are forbidden to use, otherwise, it may cause a fire or electric shock and even indoor water seepage, etc.



Prohibit the touch with wet hands

It is forbidden to plug or unplug the power supply with wet hands

- May cause an electric shock.



Prohibition

Do not damage the power cord and toilet connection line

It is forbidden to pull, modify, heat, twist, place heavy objects on the power cord and toilet connection line.

- Damaged products are forbidden to use, otherwise, it may cause a fire or electric shock or short circuit.



Prohibition

Do not use loose or shaking power outlets

- May cause a fire or electric shock.



Prohibition

Water except for tap water and potable water is forbidden to use

- May cause skin inflammation.



Prohibition

Do not use the multi-socket socket

- Please do not connect the wire or use the extension cord when using, it may lead to heat and cause a fire and electric shock.

Caution



Required

Attention to prevent low temperature burns

- Please adjust the seat temperature to normal level when sitting for a long time.
- Please adjust the seat temperature to the normal stage, the wind temperature to the low level, when the following people use "thermal seat" and "warm air drying" functions.

- Children, the elderly, and other users who cannot adjust the appropriate temperature by themselves.
- People with walking problems such as the sick and disabled.
- Sleepy people who took medicines, sleeping pills, cold medicines, etc., with sleepy side effects, drank too much, got overtired, etc.

Caution



Do not keep cigarettes and other burning stuff nearby

- May lead to a fire.



**It is forbidden to put your fingers or sundries at the warm air outlet
It is forbidden to touch the warm air outlet with hands or cover it with cloth**

- May cause burns, electric shock, fire.
- Please be careful when children and the elderly using.



Do not apply force, stand on the seat ring, the flip lid or the main body, and heavy objects are forbidden placed on it

- May cause product to crack, the main body to fall apart, the person to be injured.
- Toilet may be damaged and indoor water seepage will occur.



Use diluted kitchen detergent (neutral) to clean. Avoid these products:

(toilet cleaner, detergent, petrol, banana water, cleaning powder and nylon brushes, etc.)

- May damage and crack the plastic, deforming and cracking it and causing personal injury.
- May damage water pipes and cause water leakage.



When opening the water inlet angle valve, do not remove, or rotate, open the water filter net

- May cause water leakage.



Do not bend or damage the water filter screen

- May cause water leakage.



Do not flush any sundries except excrement and toilet paper

- May cause the water closet to be blocked and the sewage will leak out of the room.



Disconnect the power plug for a long time of not using.



Close the water angle valve to stop supplying water when water leaking



Prevent damage caused by freezing

- May cause damage to the water inlet configuration and the interior body, and leakage may occurs.



Tighten the water filter net when installing

- Otherwise, it may cause water leakage.

Please implement warming, to raise the rest room temperature



Make sure the power plug in

- Ensure the power plug is plugged in before using, and the plug and socket fit closely without looseness or incomplete insertion
- Otherwise, it may cause a fire due to heat.
- Disconnect the power plug for a long time of not using.




When the toilet is blocked, unplug it and use a commercially available pipe unblocker to remove the blockage

- Otherwise, it may lead to sewage leakage and indoor water seepage when automatically cleaning.



Do not install it in a place directly exposed to light

- May cause discoloration, aging, and deformation.

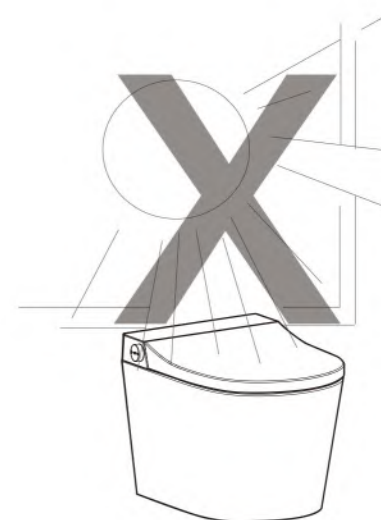

Precautions for Use

Cleaning Mistakes

Do not wipe the main body with hard and coarse cloth or tools to avoid scratching.




Avoid directly washing with water



Daily Maintenance

Avoid splashing urine on the main body or spray nozzle.

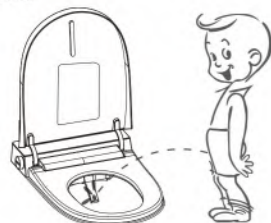

Pull out the power plug during the thunder storms.



Improper Operation

Shall not cover the seat sensor, human infrared sensor, and the transmitting signal and receiving signal of the remote control.

- May cause the smart toilet misoperation.

Keep away from the main body when using the radio, etc.

- The radio may be garbled

Do Not Lean Back On The Flip Lid

- May cause crack.

Put Away The Child's Seat Placed On The Seat After Using

- May cause some functions unavailable.


Precautions for Use

Take anti-freeze measures to prevent freezing damage during the freezing night in winter.



Do not put heaters near the main body.

- May cause discoloration or malfunction.

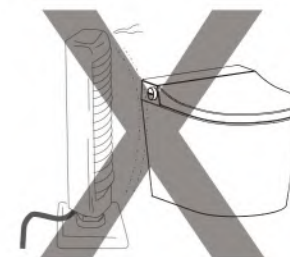


Do not roughly open the seat ring or flip lid

- May cause crack or malfunction.



Parts Identification

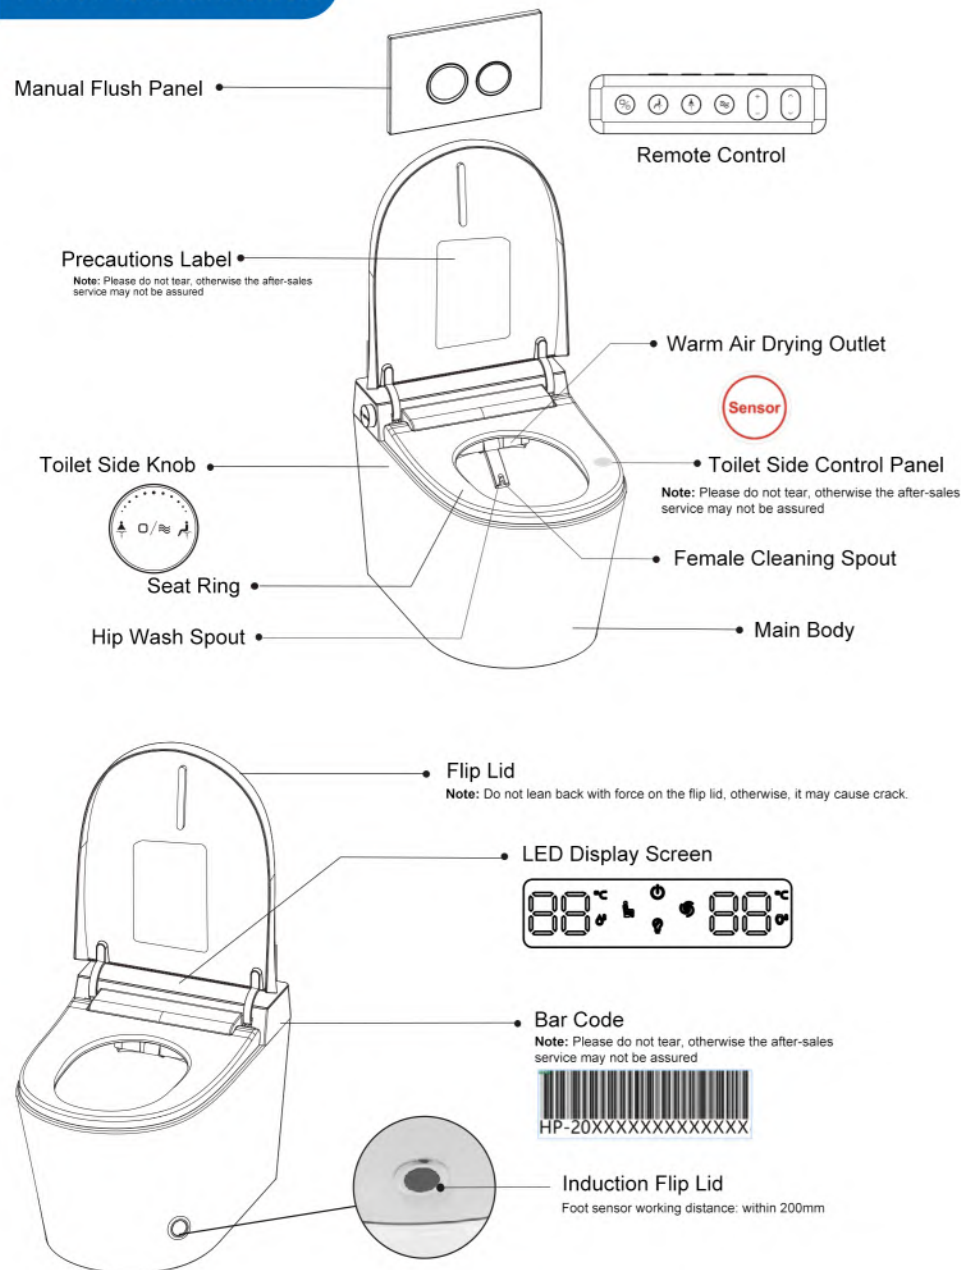

Main Functions

Bidet Wash 	Rear Wash 	drying 
Forward 	Backward 	Flush 
Water Temp 	Drying Temp 	Seat Temp 

Humanized Functions

Self-clean 	Lighting 	Eco Mode 
Massage 	Kids Mode 	Auto Mode 
Remote Control 	Automatic Lid Open 	

Humanized Functions


Earth Leakage Prevention 	Fireproof 	Antibacterial 
--	---	---

Installation Guidance

List of Materials



Installation drawings

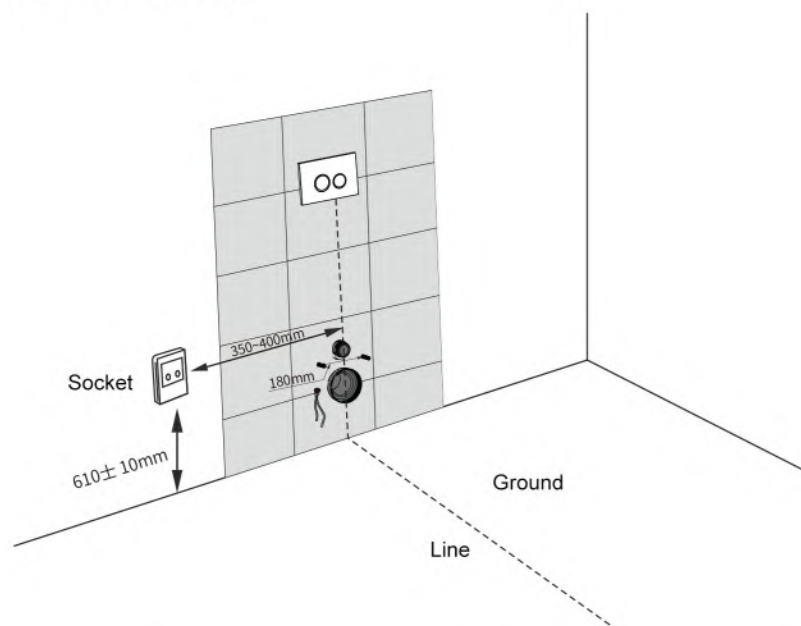


Caution

Please set the socket as follows


1. Ensure the socket properly grounded.
2. The power cord length is 1.5m and be located close to the socket, convenient to install and remove, and as far away from the bathtub as possible.
3. Use waterproof socket and don't use extension power cord to connect.
·May cause a fire or electric shock.

Size Drawings

unit: mm







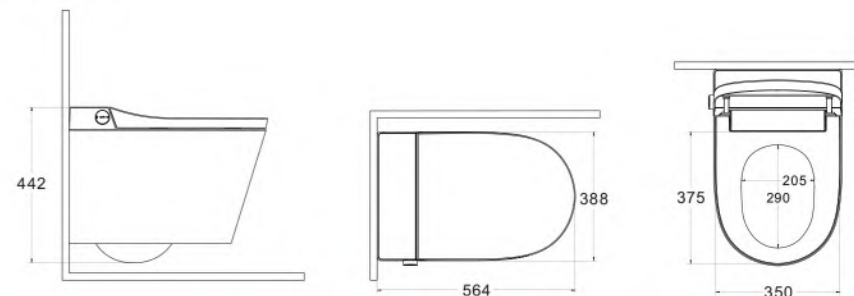


Installation Steps for Water Tank Sets


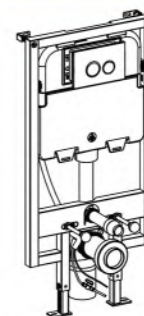


1. Check if all the necessary parts are received, contact the customer service if you find parts missing.
2. Check and clean the cistern to avoid any silt and mud staying in it.
3. Please keep the manual and the flush panel for later installation after finishing the wall.



No.	Name	QTY
1	Expansion screw set-cap	4
2	Expansion screw set-self tapping screw	4
3	Mounting set -bracket	2
4	Mounting set -washer	4
5	Mounting set -bolt	4
6	Mounting set -Nut	2
7	Concealed cistern metal frame	1
8	Hanging sets-bolt	2
9	Hanging sets-washer	2
10	Hanging sets-decorative cover	2
11	Flush pipe	1
12	L shape Drainage pipe	1
13	Straight Drainage pipe	1
14	Drainage pipe sealing ring	1
15	Drainage pipe dust proof cover	1
16	Manual Flushing panel set- box	1
17	Manual Flushing panel set-box cover	1
18	Manual Flushing panel set- holder & control rods	1
19	Manual Flushing panel set-retaining bolt	2
20	Manual Flushing panel set-button plate	1
21	Supply pipe set	1

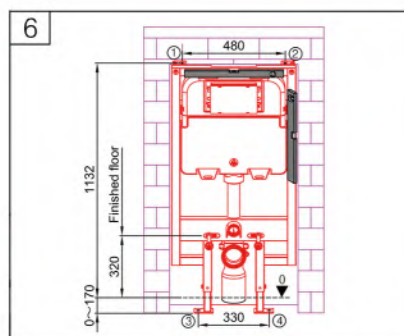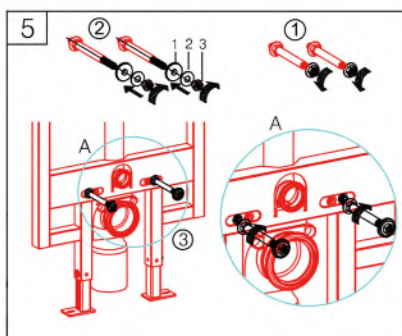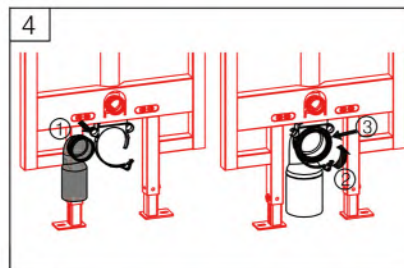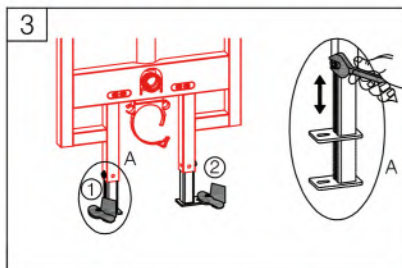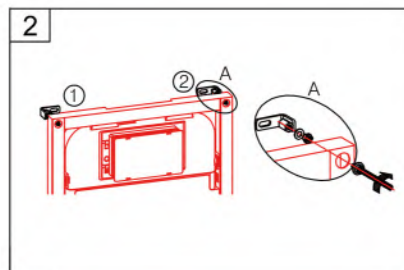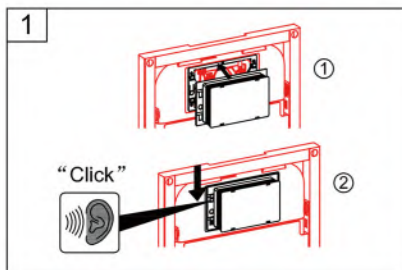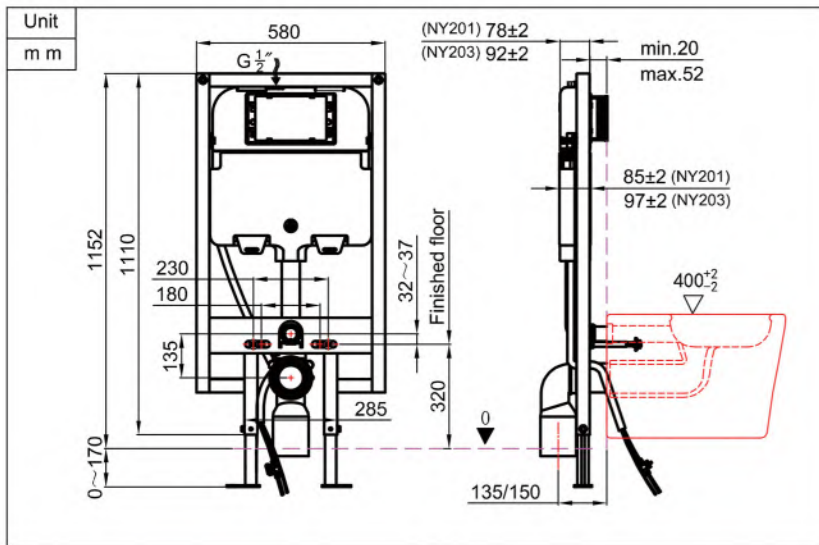

Installation Steps for Water Tank Sets

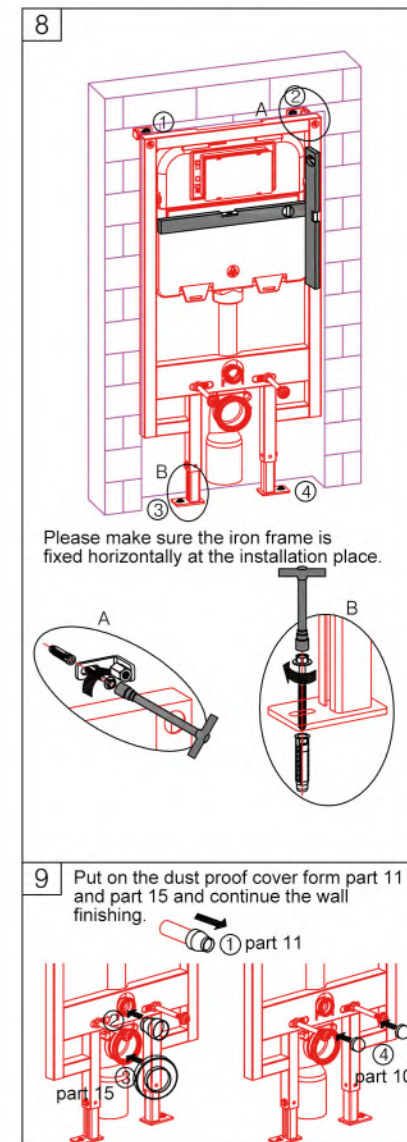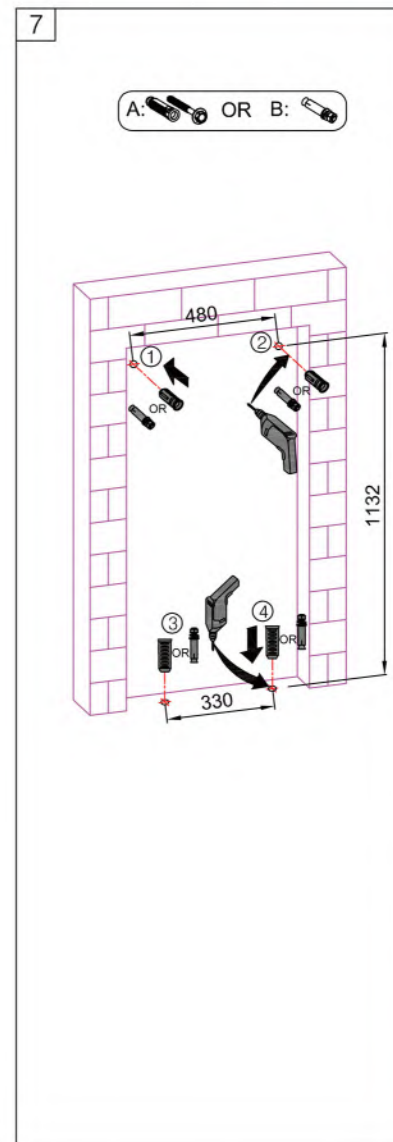


Installation Steps for Water Tank Sets

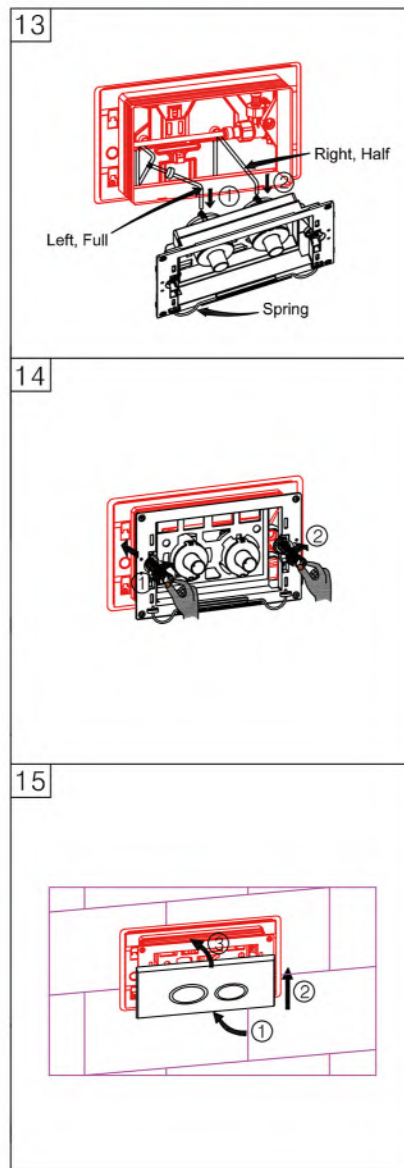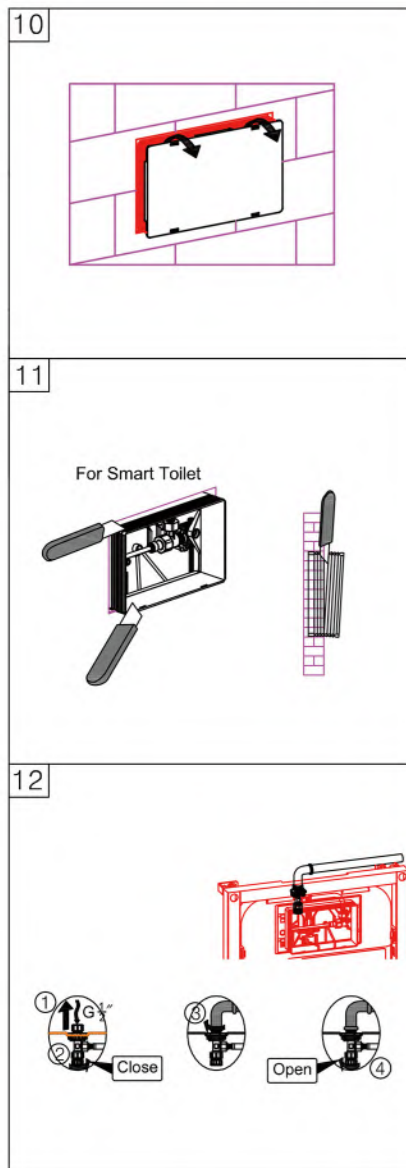


Installation Steps for The Toilet Set


1. Fix the drain pipe, bolt, flush pipe, and panel at the corresponding positions on the wall.

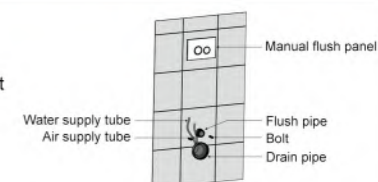


2. Dismantle the foot sensor cable, remove the smart top, hold the bottom with hands, and lift the toilet cover upwards.

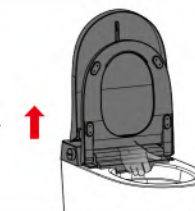


3. Glue the damping mat, tear off the back covering, and stick it on the back of the toilet according to its position.

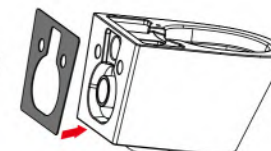

4. Follow the steps below to remove pipeline impurities.

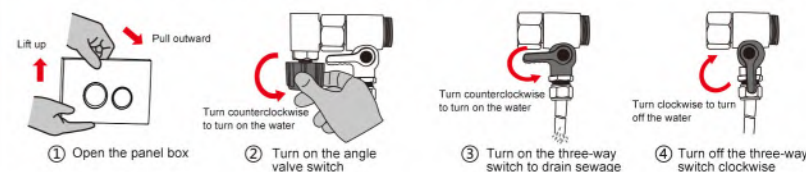


5. Fix the toilet in the corresponding position

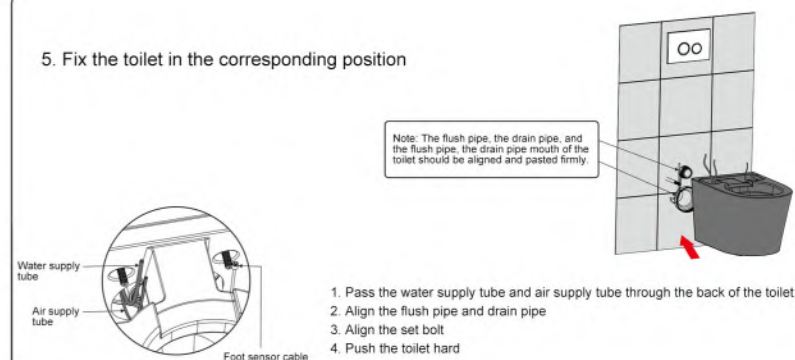

1. Pass the water supply tube and air supply tube through the back of the toilet
2. Align the flush pipe and drain pipe
3. Align the set bolt
4. Push the toilet hard


Installation Steps for The Toilet Set

6. After confirming that the toilet is horizontal, front and rear, install it according to step 7.

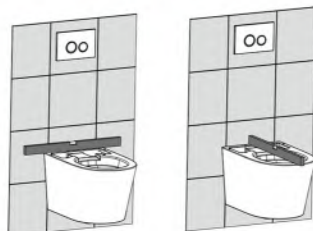


7. Install plastic gasket, metal gasket, nut, decorative cover, and other accessories in sequence.

Note: Try flushing manually after the installation is completed. If there is no leakage at the connection between the flush pipe and the drain pipe, it indicates that the installation is successful.

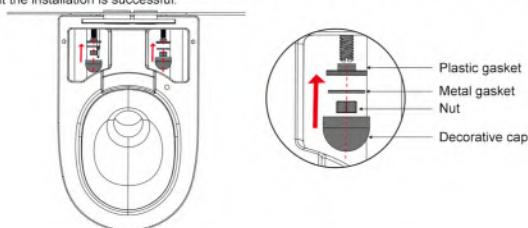


8. Connect air supply tube, water filter, water supply tube, and foot sensor cable.

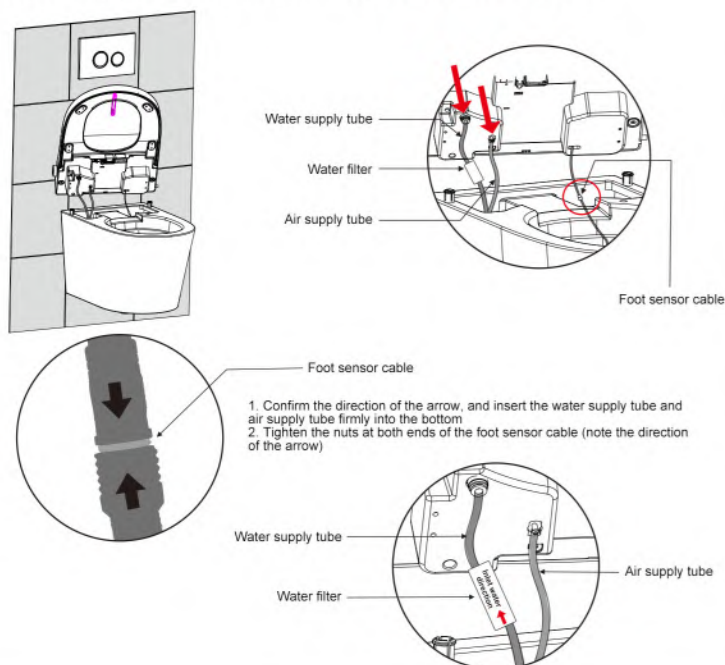

Installation Steps for The Toilet Set

9. Check the installation position of the toilet

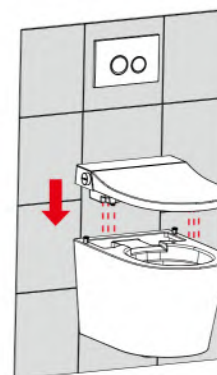

1. Make sure the toilet is fixed well
2. Confirm that the two pipes and one wire are well connected
3. Align the fixing buckle with the fixing hole of the toilet seat
4. Press hard

10. Install the toilet cover on the toilet to complete the installation.




Note

1. Smart toilet accessories have been commissioned, personal disassembly is strictly prohibited. Please use the fittings and hoses provided by our company. Old fittings and hoses cannot be reused. If have any questions, please contact local retailers or our after-sales service department.
2. All contents of this instruction manual are based on the latest conditions at the time of printing. We reserve the right to make changes without further notice.

Remote Control Installation

Installation Method

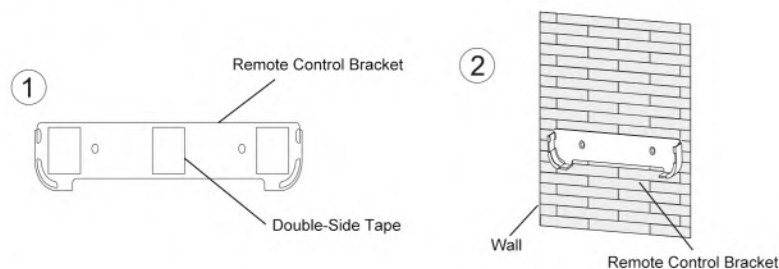

Note:

1. Clean the installation area before taping. Press the tape firmly and evenly when applying. Can be used after 15 minutes.
2. Double-side tape is suitable for tile-type flat walls, not for wallpaper-type walls.

Trial Run

First time connect water and power supply:

Open the water supply angle valve to turn on the power, when soft lighting and display on the water temperature flash, it means the heating water tank is feeding water. Waiting for about 30 seconds after soft lighting and the water temperature on display stops flashing, it means the heating water tank has been full of water. At this time, try to operate the toilet as follows.

1. Seating Sensor

The picture shown is the seating sensor area. Only when the system senses someone is seated, the function can be on. Then, the buzzer will "beep" once, indicating it has been sensed and the system can be activated. When the human body leaves the sensor place, the buzzer will also "beep" once.



2. Check Fundamental Functions

When the human body sits on the sensor, the buzzer beeps. Press the "Rear" or "Bidet" button on the side control panel to operate.



3. Check the Drying Function

When the human body sits on the sensor, the buzzer beeps. Press the "Drying" button on the side control panel to operate.



Side Control Knob Instruction



Stop

Press this button during use to stop the operation



Power

Long press the middle position to turn off/on the power



Bidet Wash/Moving

Turn counterclockwise to turn on the bidet wash



Drying/Flush

Press the knob lightly: warm air drying
Press the knob lightly: flush (when unseated)



Rear Wash/Moving

Turn clockwise to turn on the rear wash

LED Display Screen Instruction



Smart Toilet Top LED Display



It indicates the water temperature in degrees Celsius for flushing the boom



It indicates the seat temperature in degrees Celsius of the seat ring



The energy-saving indicator light is on when it is turned on, and the indicator light is off when it is turned off.



The light is on when the power is on, and it is not on when the power is off.




The light is on when the toilet is seated, and it is off when no one is seated.



It will be on when Flushing is automatically turned on, and it will not be on when it is turned off.

Remote Control Instruction

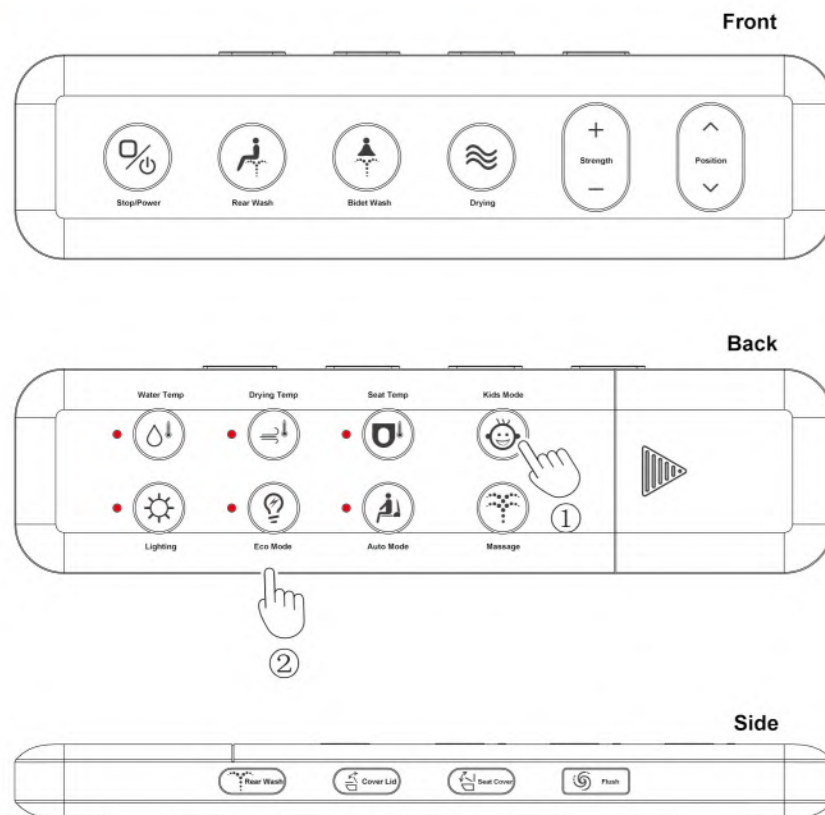

Notice: Remote Control pairing

1. Disconnect the plug power supply.
2. Long press [Kids Mode] until all indicators light up.
3. Turn on the power and wait for the spray boom to reset, press any key on the remote control, and hear the buzzer of the toilet lid, indicating that the code matching is completed.

Usage Instruction



Stop / Power

Press this button to stop operation during use. It will also stop automatically when off-seat. Long press this button to stop the operation function when using washing or drying.



Rear Wash / Moving

When seated, press this button to run the moving rear wash for about 90 seconds and it will stop automatically. Press this button again during operation to clean the nozzle at a fixed position. Press [Strength] to adjust the strength of the flushing water during operation.



Bidet Wash / Moving

When seated, press this button to run the moving bidet wash for about 90 seconds and it will stop automatically. Press this button again during operation to clean the nozzle at a fixed position. During operation, press [Strength] to adjust the strength of the washing water.



Drying

When seated, press this button to start the warm air drying, and it will stop automatically in about 5 minutes. Press [Drying Temp] during operation, and the air temperature will gradually change from high to normal (6 levels in total), which can be adjusted according to preference.



Water Temp

The water temperature is divided into 5 cycles from normal temperature to high temperature (about 39 degrees), which can be adjusted according to preference.



Drying Temp

The wind temperature is divided into 5 cycles: normal temperature to high temperature (about 55 degrees), which can be adjusted according to preference.



Seat Temp

The seat temperature is divided into 5 cycles: normal temperature to high temperature (about 38 degrees), which can be adjusted according to preference.

Note: With a long-term seat reminder function, the machine will sound an alarm after 15 minutes of sitting to remind the user to leave the seat.



Kids Mode

When seated, press this button to run cleaning-mobile cleaning-warm air drying, the water pressure strength and the drying temperature are at the second level. In order to be easy to use for children, it can be operated independently of the seat ring induction. (Long press this button for code pairing)



Lighting

Press this button to turn on/off the night light.



Eco Mode

When off-seat press this button to turn on the energy saving, the maximum power saving is 8 hours and then the original setting will be automatically restored. After sitting, the power-saving state will be off automatically.



Auto Mode

When seated, pressing this button will run the automatic cleaning function, which will automatically run in the order of mobile cleaning-drying.

Usage Method



Massage

Press this button again during rear wash/bidet wash to start the massage function, and the soft bubble water flow (strong or weak) will move and clean.

Note: Before using this function, you must select a cleaning mode such as "rear wash" or "bidet wash".



Forward \ Backward

When the spray boom is extended, it is in the original mid-range. During the cleaning process, press the "forward" position of the spray boom to adjust forward; press the "backward" position to adjust backward, and the front and rear can be adjusted in 2 levels.



Strength

Press this button to adjust the strength of the flushing water during cleaning according to personal preferences, with five adjustable levels.



Cover Lid

Press this button to open or close the cover.



Seat Cover

Pressing this button will open or close the seat ring.



Flush

Press this button to run the automatic flushing function of the toilet.

Automatic Sensing Function



Microwave Sensing Flip Lid

When the human body reaches the sensing area, the flip lid will be opened automatically. If the toilet is opened without operating any function, the flip lid will be automatically closed in 90 seconds.



Foot Sensing

If the foot gets close to the sensing area for the first time, the flip lid will be opened automatically. For the second time, the seat ring will be opened. For the third time, the seat ring will be closed and the flip lid can only be closed by remote control instead of the "foot sensing" function. If the seat ring is opened and no other operation is performed, the seat ring will be automatically closed after 1.5 minutes.

Advanced Function



Automatic Flush

Long press this button to start automatic flushing.



Cover Lid Strength Adjustment

Long press "Cover Lid" for 3 seconds to display G2, and then press "Strength" to adjust the flip strength +/- (4 gears in total, G1-G4).



Seat Cover Strength Adjustment

Long press "Seat Cover" for 3 seconds to display S1, then press "Strength" to adjust the turning strength +/- (4 gears in total, S1-S4).



Radar Switch

In the state of off-seat, long press this button to switch on the radar.




Radar Sensing Distance Adjustment

In the state of off-seat, long press the back button of the spray boom to lengthen the radar sensing distance; long press the forward button of the spray boom to shorten the radar sensing distance.

Remote Control Battery Replacement

When the battery runs out, the remote control maybe insensitive or out of control occasionally. Please replace the alkaline batteries immediately.


When the battery is almost empty, the remote control indicator dims or is off. It is bright normally. The included battery is mainly used to check the operating status at the time of installation, hence the service life may be short.



Note

The polarity of battery must be put in the right position and the compression spring extends from the negative pole.

- New and old batteries should not be mixed.
- Please use alkaline batteries.
- Open the back cover of the battery area of the remote control, and replace it with two new 1.5V AAA alkaline batteries.

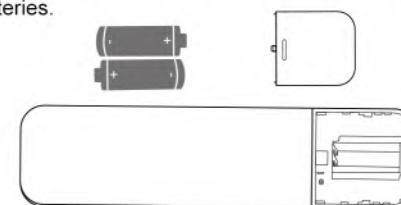

Note: Remote control with batteries. Please appropriately store it in a location that is out of reach of young children.

Usage Instruction

Water Amount And Temperature

Due to the storage water heating mode, the water temperature will not decrease when cleaning for a long time. Although the water temperature may fluctuates, it doesn't effect the normal use.

Cleaning water will be controlled according to original setting temperature.


Normal: spouting water without heat.

Low: about 33°C

Medium: about 36°C


High: about 40°C

Heating time depends on external water inlet temperature.

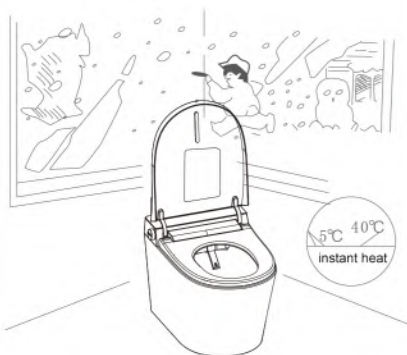

Installation with the Seat Sensor

When you are not seated and accidentally press the button, the spout will not operate due to the seat sensor. All cleaning functions will not be set when not seated.

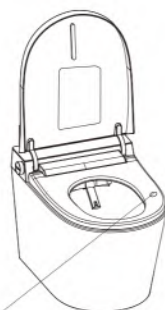

The Seat Sensor

The seat sensor will not work if the following conditions occur:

❌ The human body does not sit on the seat ring.

Environment usage instruction:

It is recommended that there should be no obstacle within 1.5m of the toilet, otherwise it will cause the flip lid to make wrong instructions.

Fault Judgement And Maintenance

Fault Judgement And Maintenance

Symptom	Inspection Method	Countermeasure
Does not start at all	Whether there is a power outage or the power outlet is not connected	Please make sure to insert the power plug
		Please unplug and plug in again
No water supply or weak water spouting	Whether water is stopped or the water supply valve is closed	Please check the water source and open the water supply valve
	Whether the water supply filter is blocked	Please clean the filter
	Whether the nozzle is clogged with scale	Please clean the nozzle with a toothbrush
Leak	Whether the water pipe is bent	Please smooth the water pipe
	Whether the water pipe connection part is tightened	Please tighten the water pipe connection
Water temperature/Cool seat	Whether the water temperature and cover temperature are adjusted to normal temperature	Please readjust the temperature
Abnormal flushing /the sewage discharging does not work	Put around 2.1 Gal(8L) water into the toilet to check whether the sewage drainage pipe is blocked	If the sewage in the toilet cannot be discharged quickly after pouring water, the sewage drainage pipe may be blocked. Please clean the drainage pipe.
Remote control cannot display	Low battery power	Please replace the battery with a new one
	Recheck the code	Please refer to page 15 about remote control pairing.


Fault Tip

S.N.	Tip	Fault	Tip
1	E3	Abnormal water temperature of the instant heat module	Water temperature is not adjustable
2	E8	Instant heat module connection failure	Water temperature is not adjustable
3	E1	Abnormal seat temperature	Seat temperature is not adjustable
4	E5	Abnormal air machine	Resolved after power failure

Note: When any of the above faults occur, abnormal seat temperature (E1) can be automatically restored, and in other cases, it needs to be powered off and restarted.

Remote Fault Diagnosis


Operating through the toilet side button, you can check whether the flushing function and the trial run work appropriately. (Start the cleaning and drying function after seated)

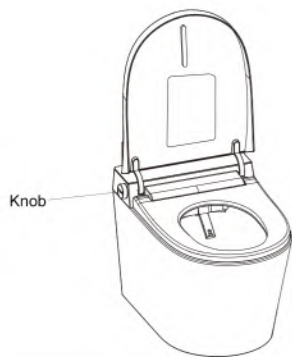

Emergency Fault Judgement

Under no water supply circumstance, put around 2.1 Gal(8L) water into a barrel and flush the bowl of ceramic.

Note: Avoid water spilling from bowl.

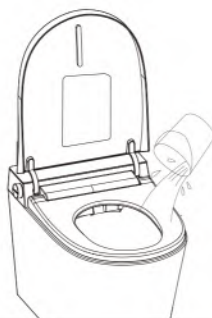

When the product is left unused for a long time

- Especially in winter when no one at home for a long time, please drain out the water inside the tank and the pipe to prevent freezing

To Discharge Water

1. Drain out the water inside tank.

- Activate flushing, and then turn off angle valve to prevent water inlet. Drain out the water inside the heating tank and the pipe.

2. Unplug and cut off the electricity.

3. Unscrew the hose connector off angle valve, drain the water in the pipe and reinstall.

4. Handle the remaining water in ceramic body.

It is suggested to put some antifreeze into water inside the ceramic body.

Tips: Make sure to turn on water angle valve and power supply when you use the toilet again.



Note: Before water discharging, the power must be cut off!



Daily Maintenance

Main unit care and maintenance

1. Wipe the surface with a sponge or soft damp cloth or neutral detergent cloth.

2. **Note:** Do not use thinners, light gasoline, detergents, chemicals, etc. to wipe. Do not spray insecticides, aromatics, deodorants, etc.

Note: The material of the product is new plastic material, which is not discolored. Most of the discoloration phenomenon is oxidation reaction. Product contact with perfume, toilet cleaner, nail polish and other liquids, if not wiped off in time will cause product surface oxidation.


Some users may place a seat cushion on the seat ring with a heating function. Generally, the cushion and the contact surface of the seat are non-slip rubber, once heated, it is easy to cause the seat in contact with the location to discolor.

Spray nozzle maintenance and care

1. When off-seat, rotate the side knob to extend the spray bar to clean the spray pipe or nozzle.

2. Pull out the nozzle (pinch the plastic part up and down and pull it out), and clean it with a toothbrush or soft cloth. Put the nozzle back to its original position after cleaning, and turn the knob in the opposite direction to return to its original position.

Note: Please do not reset the spray bar when the nozzle is pulled out, otherwise it will cause malfunction.

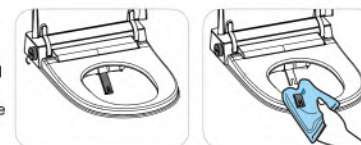

Replacement of the water filter


1. According to the diagram, lift up and pull out to open the flush panel box.

2. Turn off the three-way switch clockwise to turn off the water.

3. Remove the smart top and hold the bottom with your hands to lift the toilet cover upwards. (**Note:** Do not damage the water supply tube, air supply tube, and connection line)

4. Press the snap ring on the water filter to the bottom, pull out the tube (do the same at both ends), pull out the water filter, and replace it with a new one.

5. Turn on the water, check the air supply tube, water supply tube, and connection line, and put back the flush panel and toilet lid after confirming that the connections are intact.

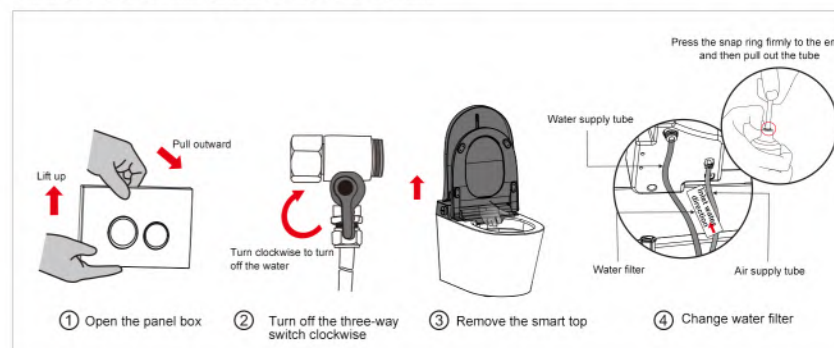

Technical Support

Name		Smart Toilet
Power		AC 110V 60Hz
Cleaning Device	Heating Water Tank	0.3L
	Inlet Water Temperature	1°C-30°C
	Inlet Water Pressure	0.15-0.75MPa
	Warm Water Temperature	Adjustment:About 30°C-40°C
	Spray Water Amount	About 0.35-1.2L/min (When water pressure is 0.2MPa)
	Spout Position	50mm—90mm
	Heating Power	1200W
Safety Equipment		Flow SensoR, Water temperature sensor, Temperature switch, Thermal fuse
Rated Power		1180W (inlet water temperature 15°C ±2°C, water pressure 0.2MPa)
Drying Device	Wind Speed	≥ 4m/s
	Temperature Adjustment	4 stages (room temperature - about 55°C)
	Heating Power	200W
	Safety Equipment	Thermal controller, Thermal fuse
Seat Heating Device	Temperature Adjustment	4 stages (room temperature-about 40°C)
	Heating Power	35W
	Safety Equipment	Thermal controller, Thermal fuse
	Open And Close Device	Seat ring and flip lid with damping cushioning device
	Safety Equipment	Leakage protector, The cover temperature sensor
Power Cord Length		1.5m

List of Materials

Main Unit



A Smart Toilet



A Set Of Remote Control Components
(include remote control, bracket, double-side tape)




Damping Mat



A Water Barrier Cap
(Please keep this accessory for functional testing)



Water Filter



One-Way Switch and PE Pipe



An Installation Manual

List of Materials

Parts

