Installation Instruction

Before You Begin

1. Shut off the main water supply.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. To avoid the faucet from jamming, DO flush the water pipe before installation.
4. After installation, make sure every joint is safely sealed (NO LEAKAGE).
5. Make sure to connect the hot/cold inlet pipe correctly, if standing in front, hot water pipe connecting to the left and cold water pipe connecting to the right.
6. It is recommended that installation of the product be done by a professional plumber.

Cleaning & Maintenance

To keep product clean and shiny follow the instruction below.
1. Flush with clean water and dry with soft cloth only.
2. Do not use any detergent, polisher, sane-cloth, or a scraper.
3. Do not use acid detergent.

Installation

1. decorative cap	2. handle	3. base plate	4. O-ring	5. rubber washer
6. mounting nut	7. valve	8. spout body	9. threaded pipe	10. rubber washer
11. mounting nut	12. diverter valve	13. rubber washer	14. shower hose	15. hand shower
16. rubber washer	17. hand shower holder	18. rubber washer	19. rubber washer	20. mounting nut

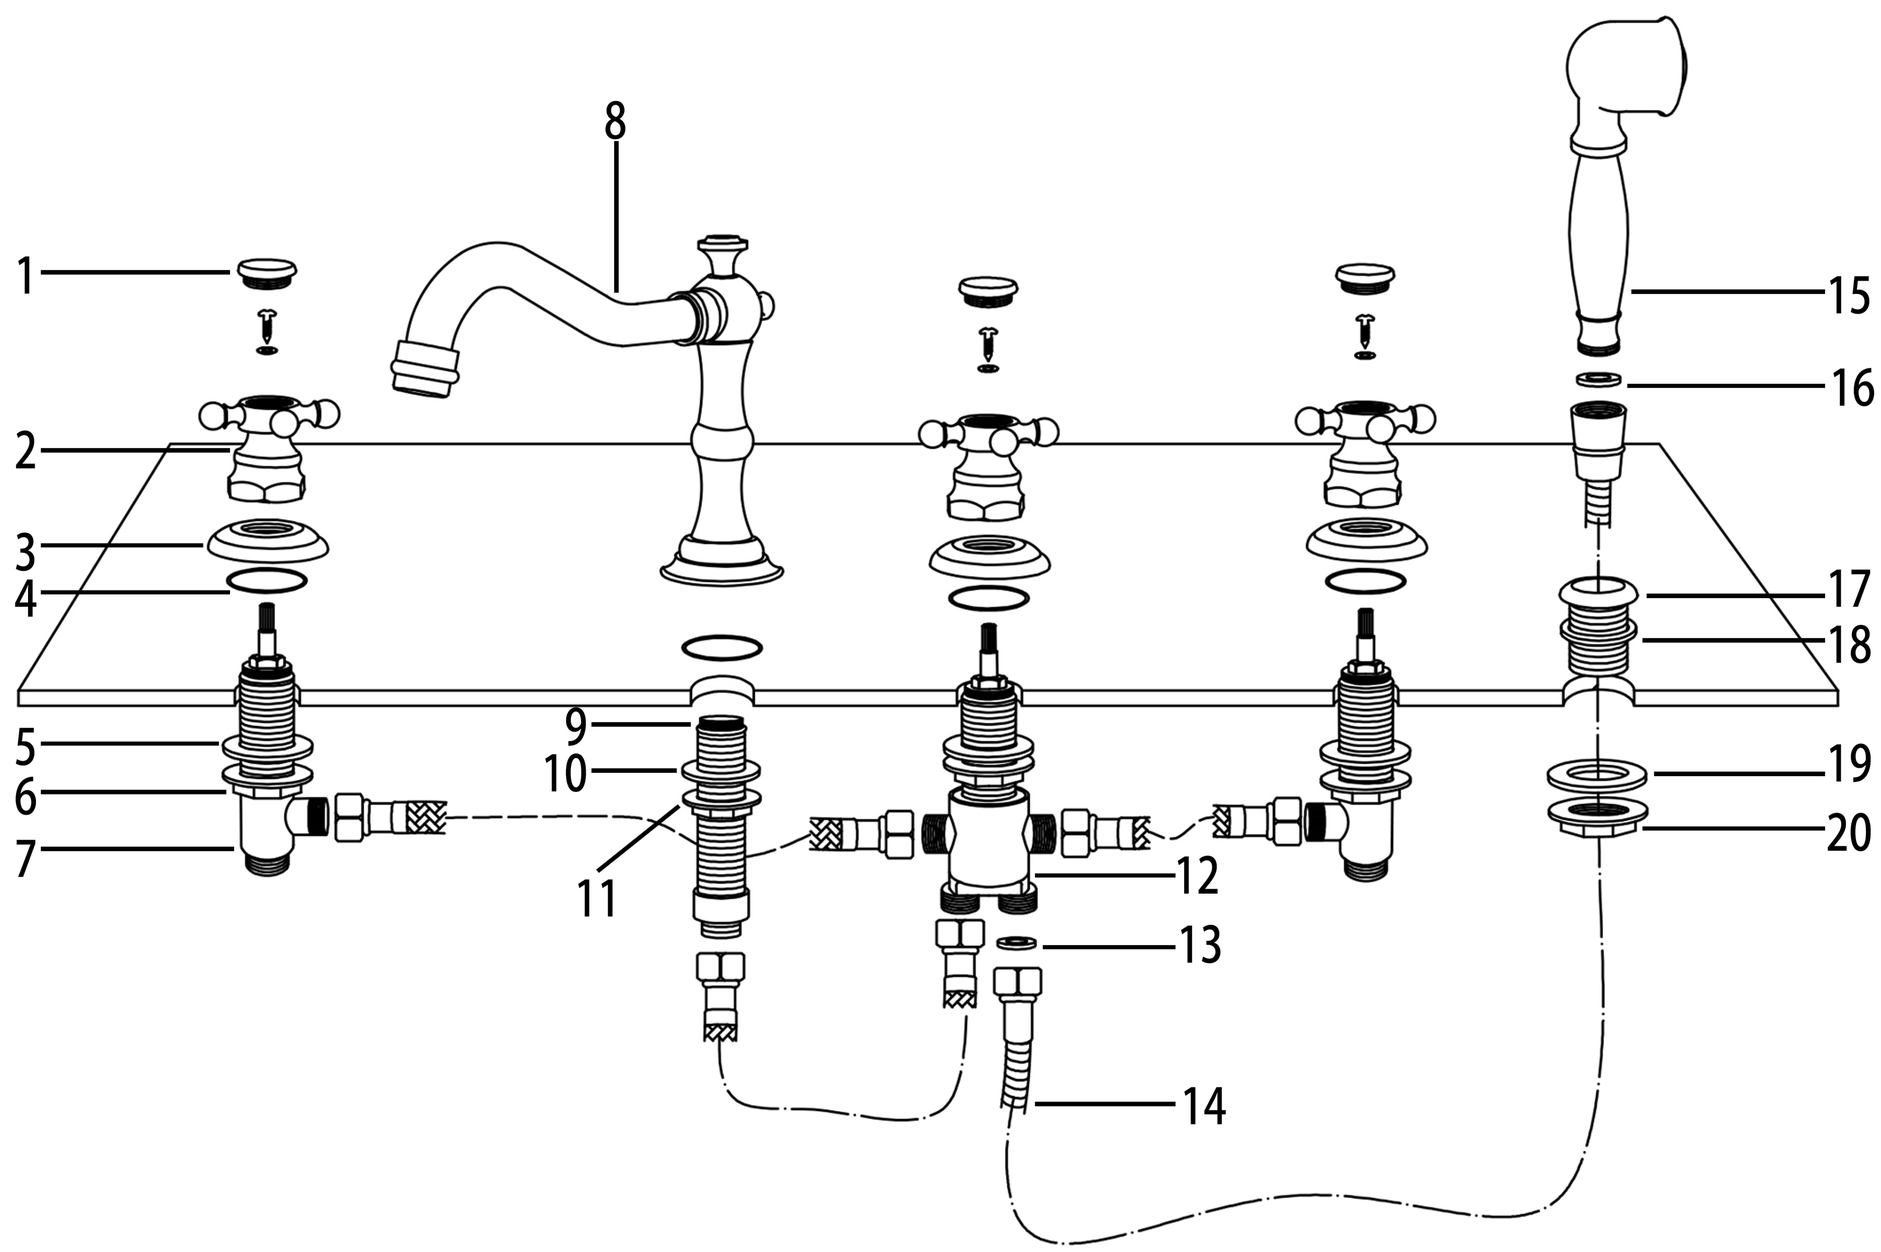

1. Fix O-ring into the bottom groove of spout body and insert spout body into the specified drill hole on the counter top.
2. Install rubber washer to the threaded tail pipe of the spout body from underneath the counter top and then screw the mounting nut.
3. Install valve into specified hole underneath the counter top. Fix O-ring into the base plate. Then, screw base plate and handle into valve. Adjust the height and position of valve, then screw mounting nut to tighten valve underneath the counter top securely.
4. Fix the screw to secure the handle to the valve and screw in the decorative cap.
5. Install rubber washer and insert the hand shower holder into the specified drill hole. Put on the rubber washer and screw the mounting nut securely underneath the counter top.
6. Connect the shower hose to the hand shower and diverter valve. Make sure to add the rubber washer at both ends.
7. Connect waterlines to diverter valve and to spout and valves according to the picture.
8. Connect waterlines (not included) onto the bottom of hot&cold valves and then to main water supply.