Installation Instruction

Before You Begin

1. Shut off the main water supply.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. To avoid the faucet from jamming, DO flush the water pipe before installation.
4. After installation, make sure every joint is safely sealed (NO LEAKAGE).
5. Make sure to connect the hot/cold inlet pipe correctly, if standing in front, hot water pipe connecting to the left and cold water pipe connecting to the right.
6. It is recommended that installation of the product be done by a professional plumber.

Cleaning & Maintenance

To keep product clean and shiny follow the instruction below.
1. Flush with clean water and dry with soft cloth only.
2. Do not use any detergent, polisher, sane-cloth, or a scraper.
3. Do not use acid detergent.

Installation

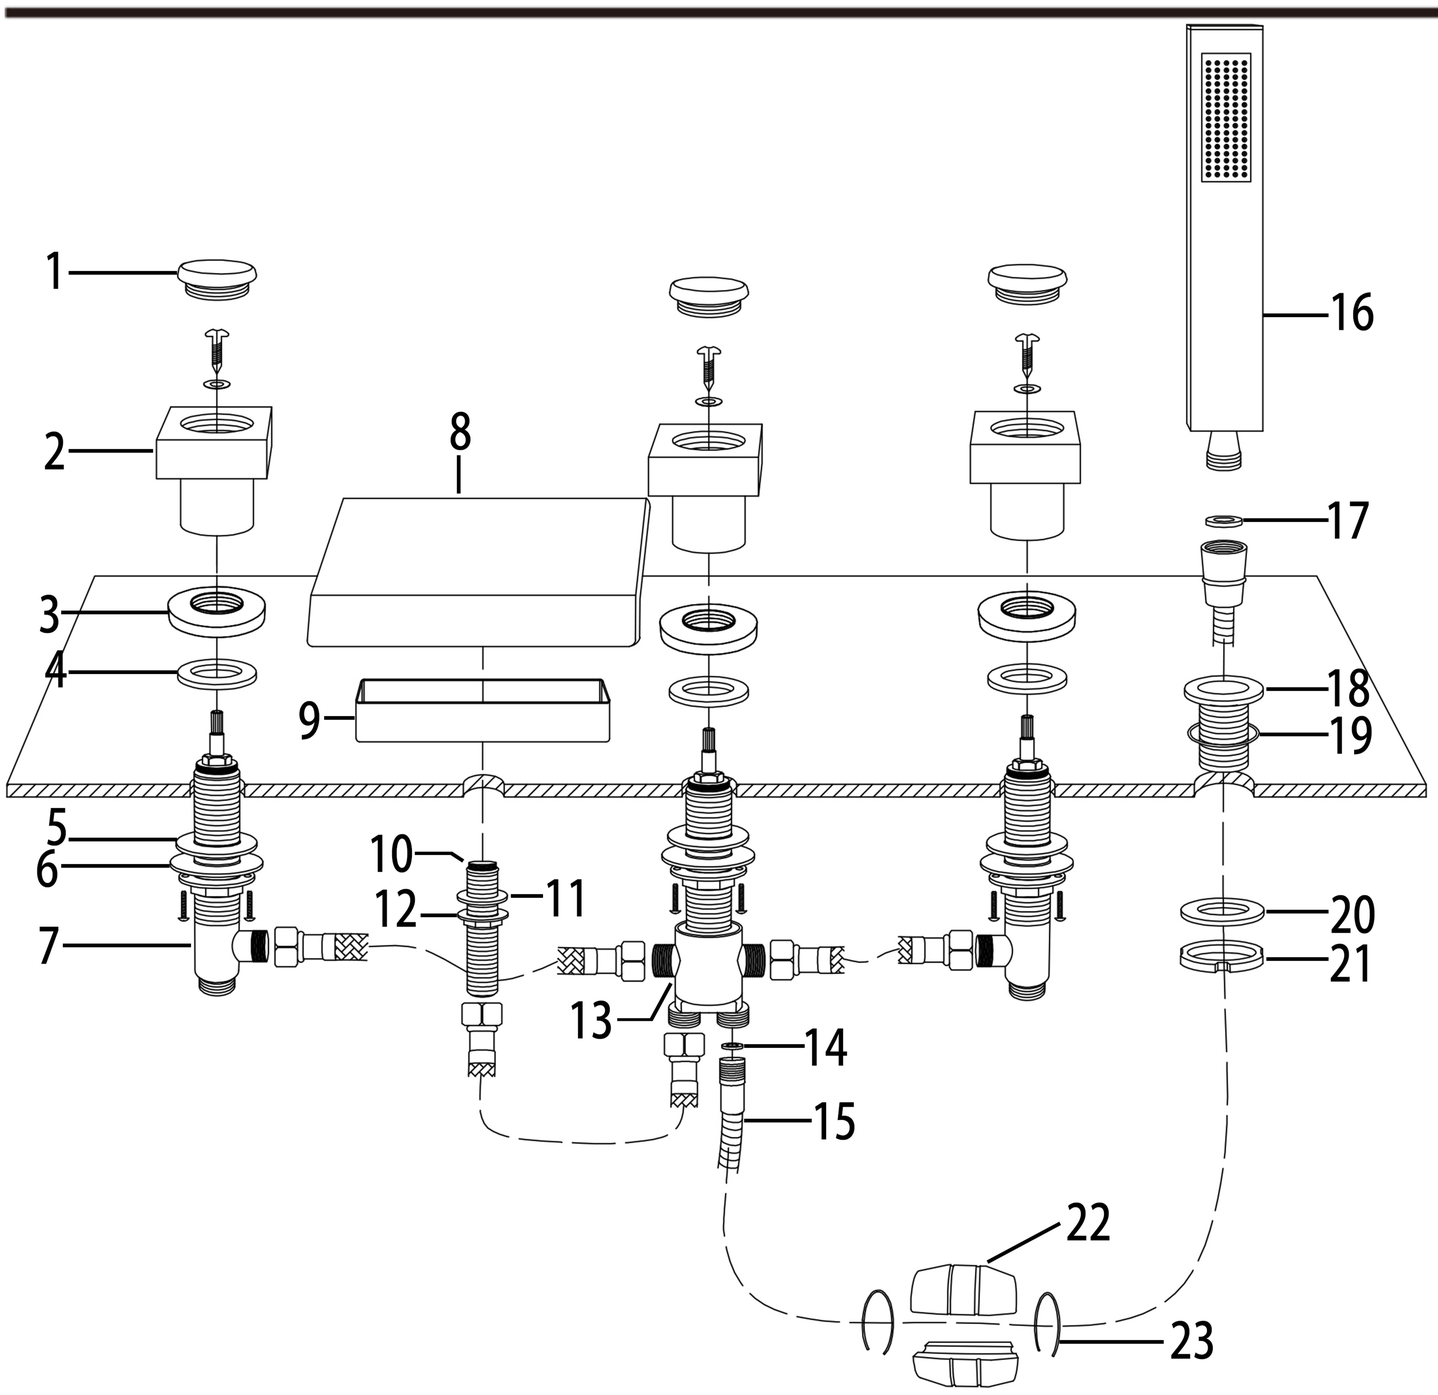

1. decorative cap
2. handle
3. base plate
4. foam washer
5. rubber washer
6. mounting nut
7. valve
8. spout body
9. decorative base
10. threaded pipe
11. rubber washer
12. mounting nut
13. diverter valve
14. rubber washer
15. shower hose
16. hand shower
17. rubber washer
18. hand shower holder
19. O-ring
20. rubber washer
21. mounting nut
22. weight ball
23. metal ring

1. Screw the threaded pipe into the spout body through decorative base and insert spout body into specified drill hole on the counter top.
2. Install rubber washer to the threaded tail pipe of the spout body from underneath the counter top and screw in the mounting nut. Make sure to fix the spout body correctly.
3. Install valve into specified drill hole underneath the counter top. Fit the foam washer and screw the base plate and handle into valve. Adjust the height and position of valve, then screw mounting nut securely and tighten valve with screws underneath counter top.
4. Fix the screw to secure the handle to the valve and screw in the decorative cap.
5. Fit the O-ring and insert the hand shower holder into the specified drill hole. Put on the rubber washer and screw in the mounting nut securely underneath the counter top.
6. Connect the shower hose to hand shower and to the diverter valve. Make sure to add the rubber washer to both ends. Then, place the weight ball onto the hose and fit metal rings into the grooves of the weight ball.
7. Connect waterlines to spout, valves and then to diverter valve according to the picture.
8. Connect waterlines (not included) onto the bottom of valve and then to main water supply line.