


Bathroom Sink Faucet Installation

INSTALLATION MANUAL Tools You Will Need:

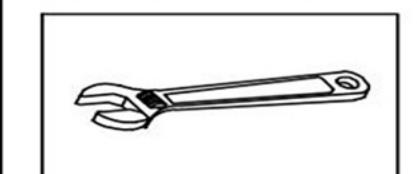

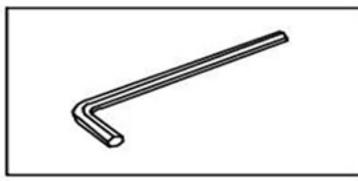

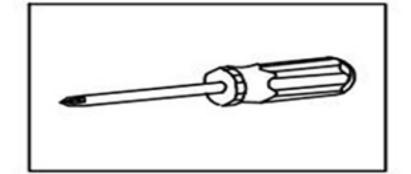

Adjustabie Wrench

Hexagon wrench

Philips Screwdriver


Before the Installation

- 1. Check the package and confirm all parts are included. If any part is missing or damaged, please contact us.
- 2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
- 3. Shut off the main water supply prior to beginning installation.
- 4. Do flush the water supply lines to remove any dirt and debris before installation (IMPORTANT).
- 5. Make sure to connect the hot/cold inlet pipe correctly. If standing in front, connect hot water pipe to the left and cold water pipe to the right.
- 6. After the installation, check for leaks and make sure every joint is safely sealed.

Cleaning and Maintenance

- 1. Rinse with clean water and dry with a soft cloth.
- 2. Do not use any detergent, acid, polisher, abrasives, or harsh cleaners.
- 3. Do not use cloth with a coarse surface.


Parts List

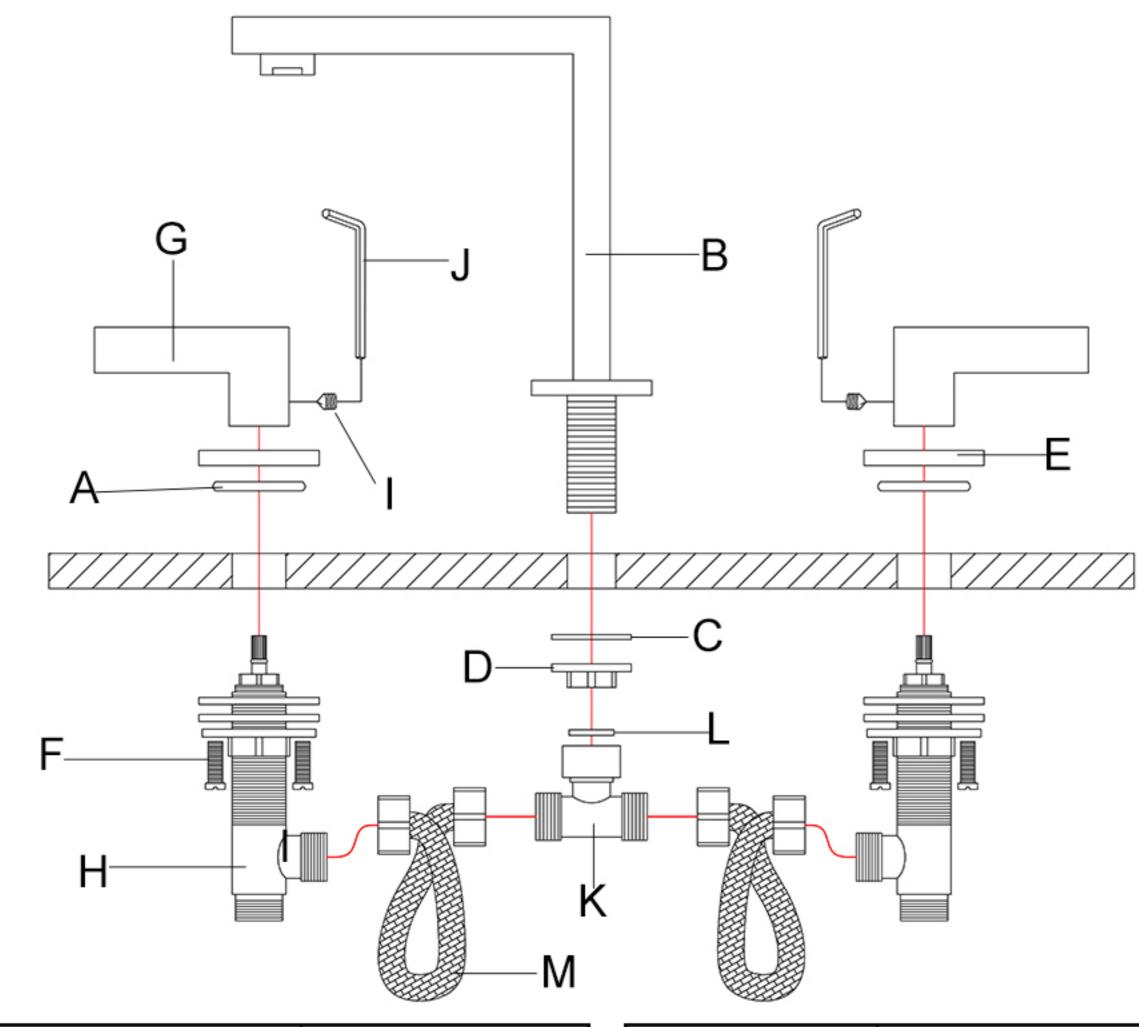


Part	Name	Quantity
Α	O-ring	3
В	spout body	1
С	rubber washer	3
D	mounting nut	3
E	base plate	2
F	mounting screws	4

Part	Name	Quantity
G	handle	2
Н	valve	2
I	set screw	2
J	Allen Key	1
K	triple tube	1
L	rubber washer	1
М	waterlines	2


Installation Guide

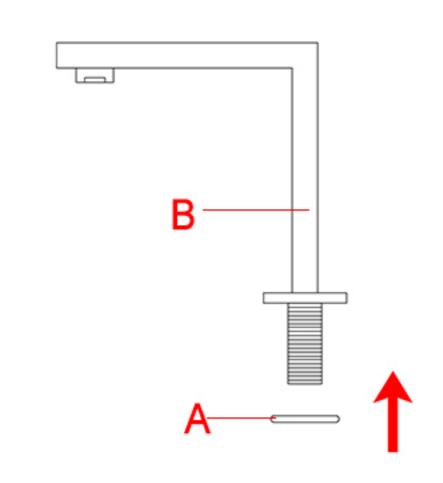


1. Fit O-ring (A) into the bottom groove of the spout body (B).

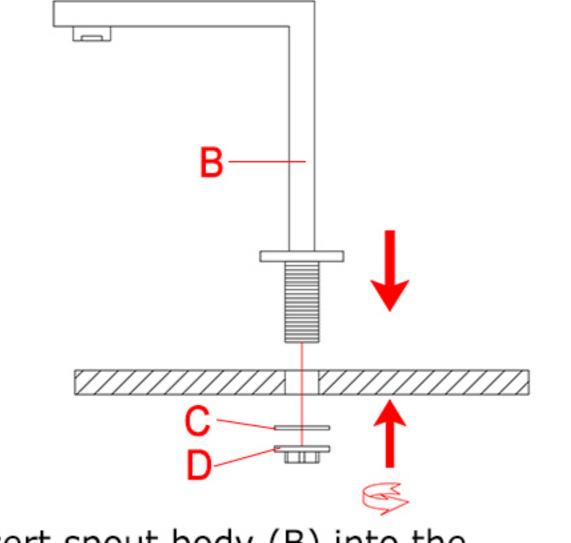


 Insert spout body (B) into the specified drill hole on the countertop.
 Install rubber washer (C), mounting nut (D) back to the threaded tail pipe underneath the countertop. Adjust the spout body (B) correctly and secure with mounting nut (D) tightly.

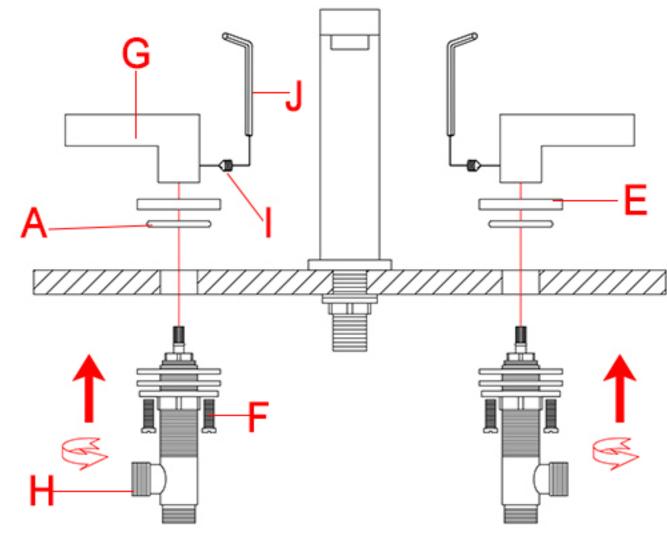


3. Install valve (H) into the specified drill hole underneath the countertop secure with mounting screws (F) tightly. Fit O-ring (A) into the bottom groove of the base plate (E). Then, screw the handle (G) into the valve (H) and tighten set screw (I) with Allen Key (J).

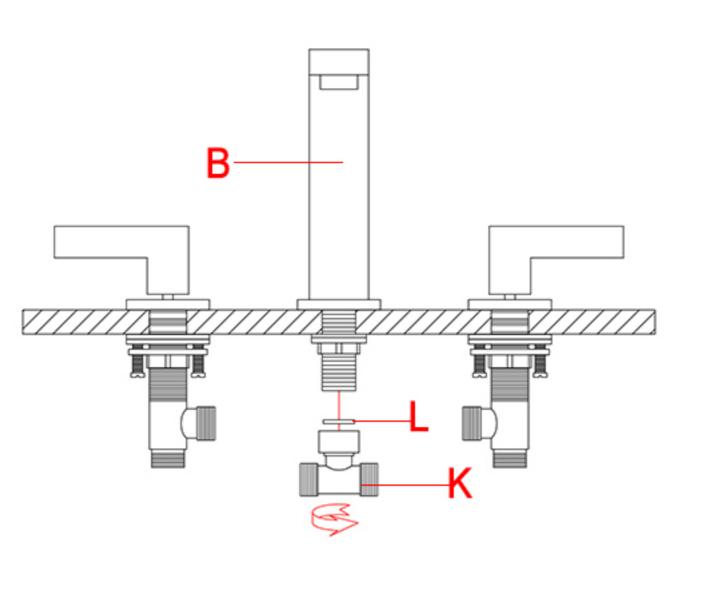

4. Install the triple tube (K) by screwing onto the threaded tail pipe of the spout body (B). Make sure to add the rubber washer (L) inside of the female end of the triple tube (K).

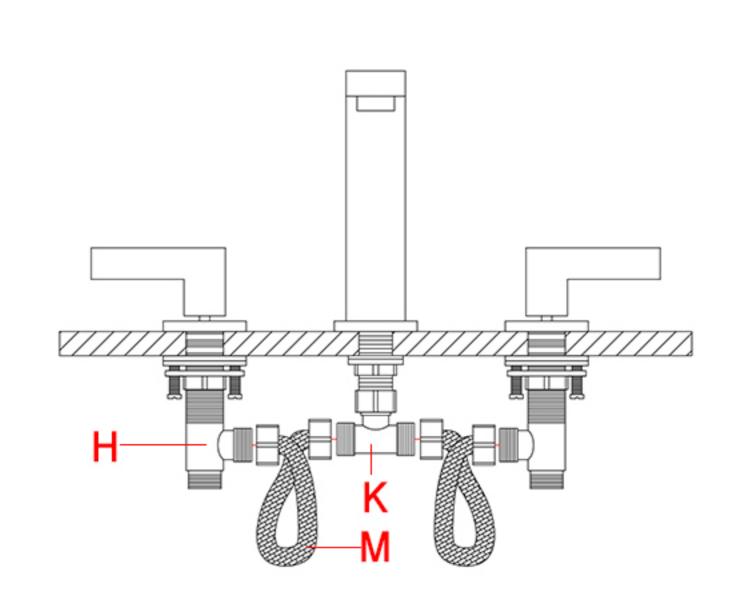

5. Screw waterlines (M) into the triple tube (K) and the valve (H).

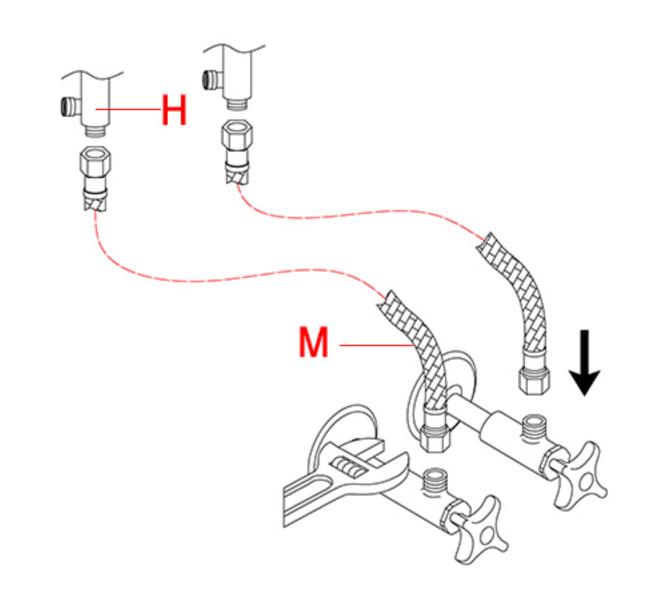

6. Connect waterlines (M, not included) onto the bottom of the valve (H) and then to the main water supply line.

Troubleshooting

Problem	Possible Cause	Corrective Action
Water does not shut off	O-ring is not seated correctly or worn.	Reseat or replace O-ring.
completely.	Cartridge may be defective.	Replace cartridge.
Leaks at waterline connection.	Worn or broken washer.	1. Replace washer.
	2. Faucet body may be defective.	2. Replace faucet (contact us for the replacement).
Leaks from handle.	Cartridge may come loose.	Reseat cartridge tight.
	2. Cartridge may be defective.	2. Replace cartridge.
Leaks at hose connection.	1. Hose connection is loose.	1. Tighten hose.
		2. Replace hose.
Leaks at shower valve	Connection may come loose or not sealed completely.	1. Check connections.
connection.	Defective shower valve inlet or outlet connector.	Replace valve body.
Diverter knob does not work.	Diverter cartridge may be defective.	Replace cartridge.
LED light does not Light or	Defective LED generator.	 Replace LED spray head (for kitchen faucet).
		2. Replace LED threaded pipe (for seperate faucet spout).
noisy LED showerhead.		Replace LED generator (for others).
Low flow.	Check for water pressure problems. Aerator may be dirty or clogged.	Clean or replace the aerator.
		Remove waterflow restrictor if available.
		3. Install booster or pump (if applicable).